

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR THIRD SEAT FORD EXCURSION FLOOR LINERS

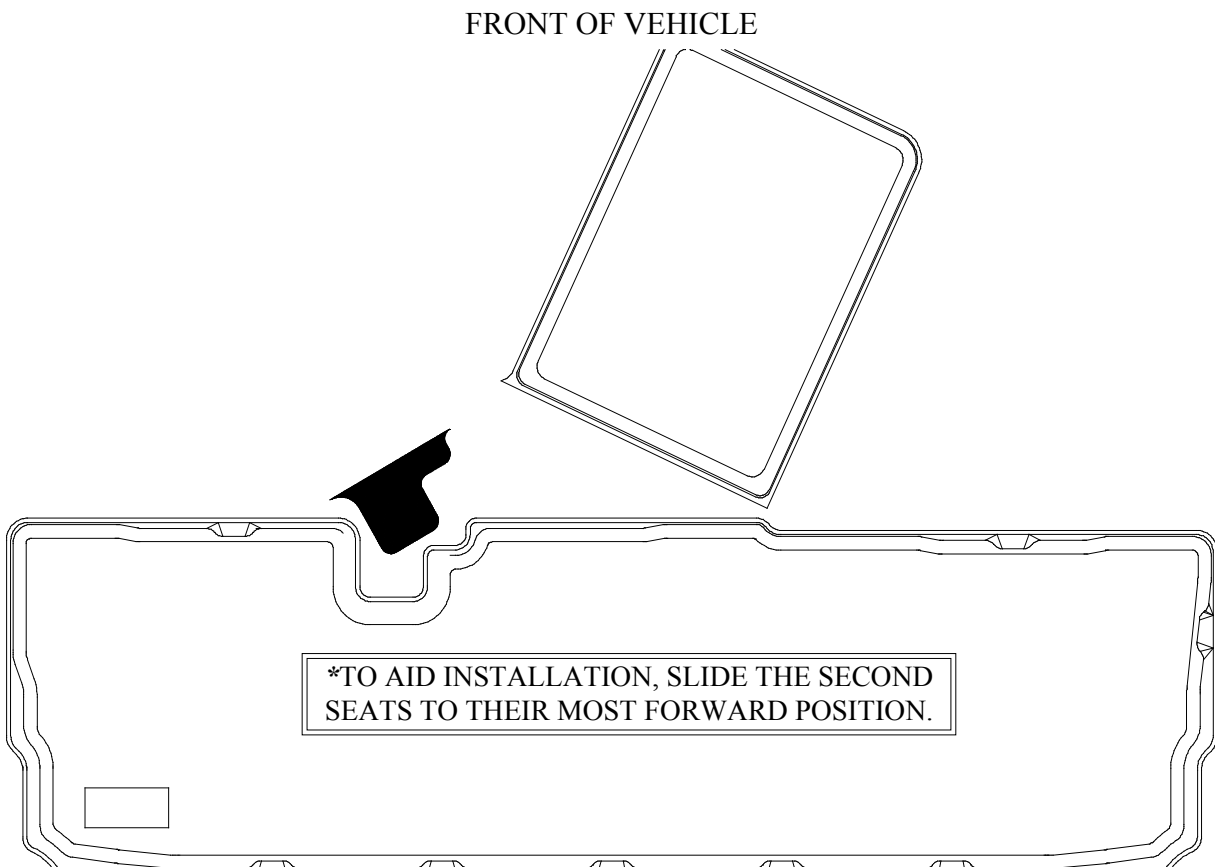

EXCURSION OWNERS WITHOUT SECOND ROW CAPTAIN'S CHAIRS WILL NEED TO TRIM AWAY THE AREA SHOWN DARKENED BELOW. A TRIM GROOVE IS MOLDED IN TO USE AS A GUIDE. THE "TONGUE" SHOWN TRIMMED CAN ALSO BE REMOVED OR TUCKED UNDER THE SECOND ROW BENCH SEAT. TRIMMING PHOTOS ARE INCLUDED ON THE BACK OF THIS PAGE.

TRIMMING PHOTO OF PART #7391



PART #7391 SHOWN TRIMMED FOR VEHICLES EQUIPPED WITH SECOND ROW 60/40 SPLIT BENCH SEATS. REMOVAL OF AREA 1 IS REQUIRED. REMOVAL OF AREA 2 IS OPTIONAL. "TONGUE" WILL SLIDE UNDER SECOND ROW SEAT.