


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET/GMC C/K SERIES TRUCK AND SUV CENTER HUMP LINER

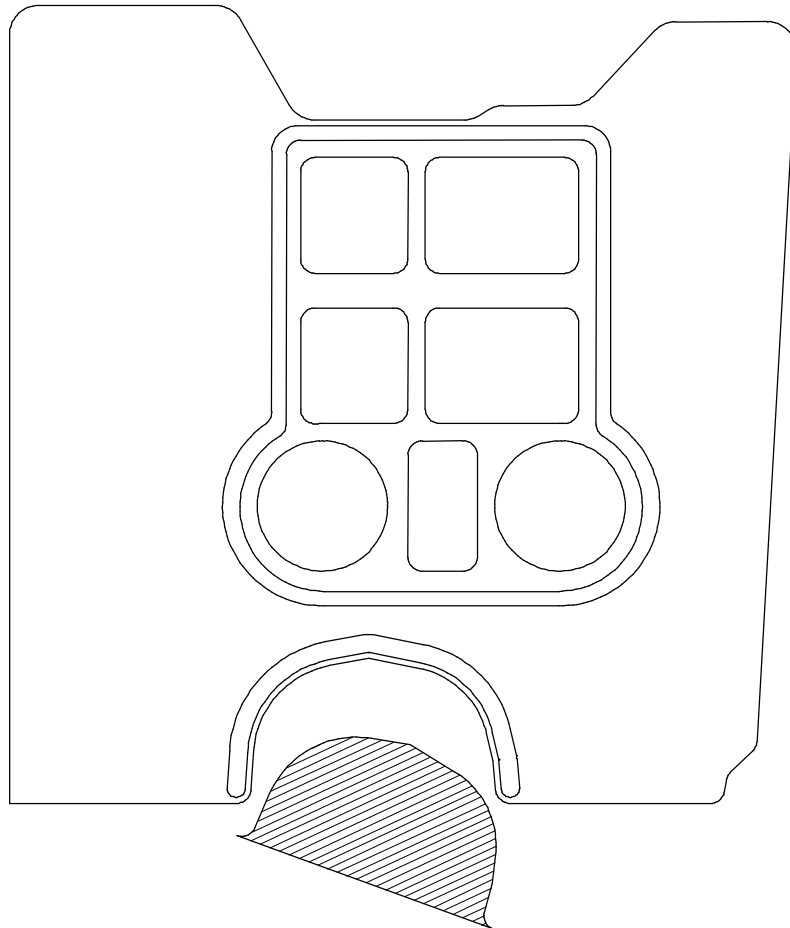

NOTE: IF YOUR VEHICLE IS EQUIPPED WITH A CENTER CONSOLE, IT WILL BE NECESSARY TO TRIM YOUR LINER AS SHOWN ABOVE. THE NECESSARY TRIMMING IS EASILY DONE BY REMOVING THE SHADED SECTION SHOWN ABOVE. USING A UTILITY KNIFE OR HEAVY SCISSORS, REMOVING THE MATERIAL INSIDE OF THE OUTLINING RAISED BAND.