



X-ACT CONTOUR


FLOOR LINERS

CARE AND USE INSTRUCTIONS – PN: 53851

Thank you for selecting a X-act® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Toyota Tundra Double Cab truck. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA TUNDRA DOUBLE CAB TRUCK 2ND SEAT FLOOR LINER

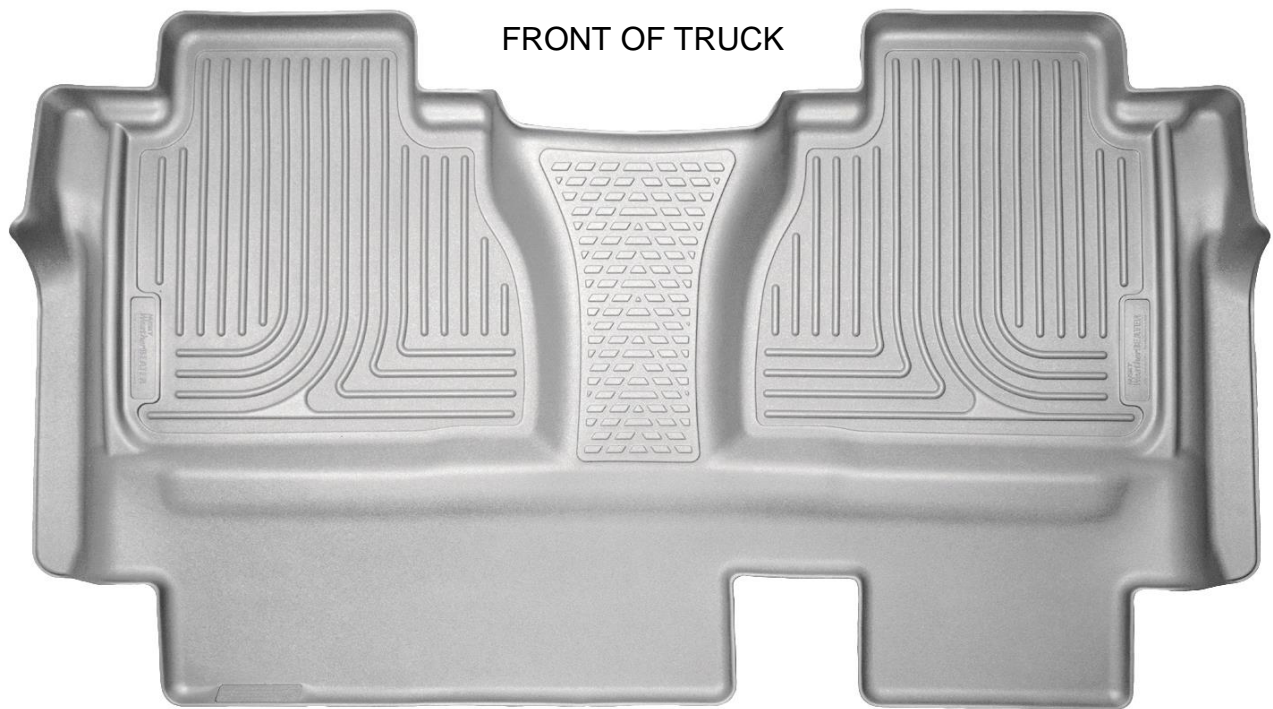

TO EASE INSTALLATION OF YOUR DOUBLE CAB 2ND SECOND SEAT LINER, MOVE THE FRONT ROW SEATS TO THEIR MOST FORWARD POSITIONS AND FLIP UP THE 2ND ROW SEAT BOTTOMS. WITH THIS DONE, INSTALL YOUR LINER AS SHOWN ABOVE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.