



X-act CONTOUR™


CARE AND USE INSTRUCTIONS – PN:53201

Thank you for selecting an X-act Contour™ 2nd Seat Floor Liner from Winfield Consumer Products. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

When installing your 2nd seat floor liner it may be necessary to trim out a small portion of the transmission tunnel section of the floor liner to accommodate the optional cup holder found with the front row bench seating option. Check to see if your vehicle is equipped with this larger console by test fitting the floor liner. If the floor liner fits... do not trim. If you find that your vehicle is equipped with the larger console, turn the liner over, and using a utility knife or heavy shears, cut along the groove located in the front transmission tunnel portion of your floor liner as shown in the image below.

2nd SEAT FLOOR LINER

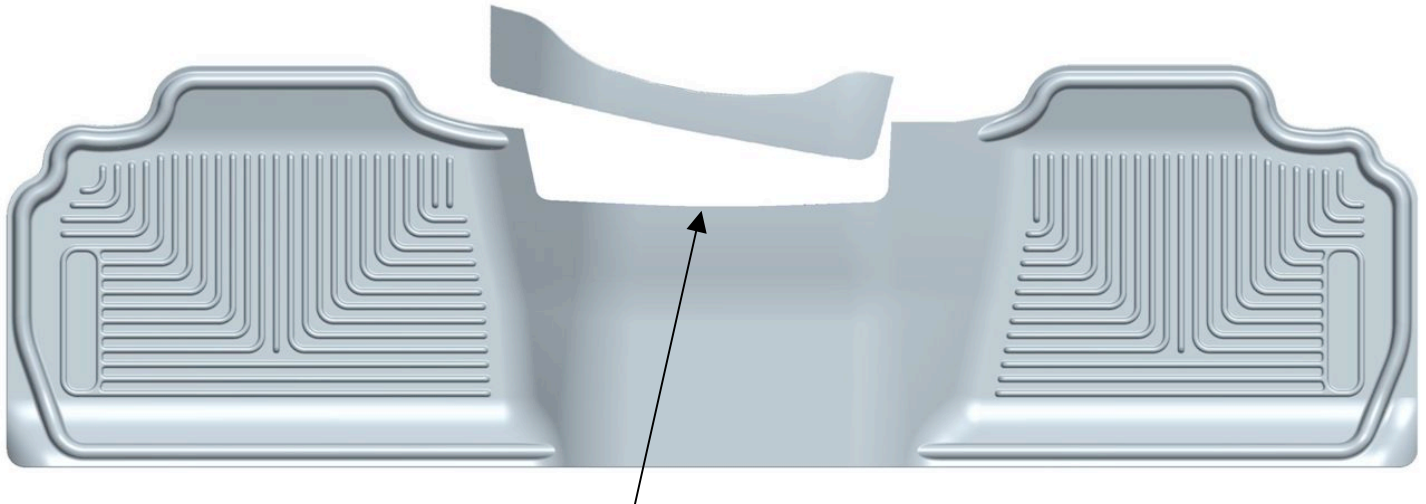

THE TRIM GROOVE IS LOCATED ON
THE BACK SIDE OF THE FLOOR LINER

