



CARE AND USE INSTRUCTIONS – PN:53311


Thank you for selecting Xact Contour™ Front Floor Liners from Winfield Consumer Products. Your new front floor liners are custom molded to fit your specific vehicle's floor board. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

Please note that your driver side floor liner comes with 3 separate carpet hook retention locations (circled below). These will allow the floor liners to be used with the factory installed carpet hooks. Because there are multiple configurations of the factory carpet hook quantity and locations for this vehicle please read and follow the instructions below for installation:


1. Install your driver side floor liner and determine which carpet hook retention location(s) you will use for your vehicle.
2. Remove the liner.
3. At each required carpet hook retention location, using a box knife or razor blade, cut around the perimeter of the circle (indicated as a circle with a + sign in the center). There are a total of 3 circles. Remove only the necessary retention location circles that are required for your carpet hook configuration. This could be 1 or 2 locations but never all 3.
4. Reinstall the floor liner and push the carpet hooks thru the newly cut carpet retention location(s).

LEFT OR DRIVER

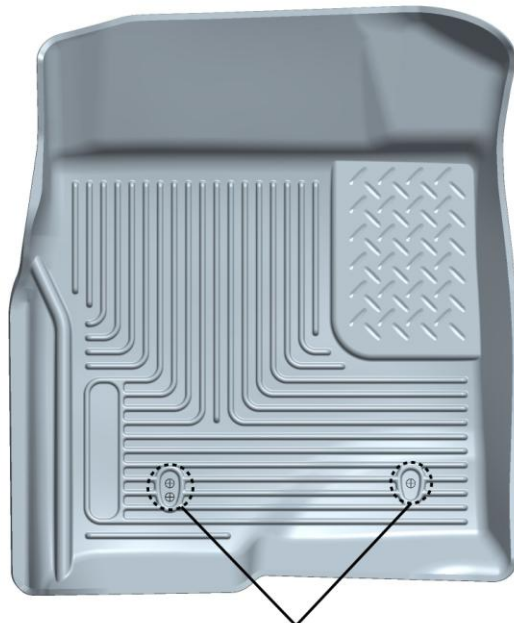

Carpet Hook Retention Locations (3 total)

RIGHT OR PASSENGER

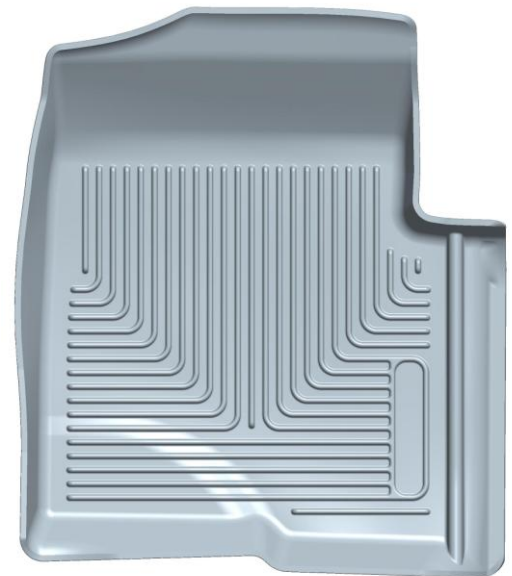

Trim and remove circle

