



Xact CONTOUR™

CARE AND USE INSTRUCTIONS – PN:53511

Thank you for selecting Xact Contour™ Front Floor Liners from Winfield Consumer Products. Your new front floor liners are custom molded to fit your specific vehicle's floor board. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.


When installing your driver's side floor liner make sure that the floor mat retention hook on your vehicles floor board installs thru the retention hole in your floor liner. See the "Left or Driver" image below.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

LEFT OR DRIVER



RIGHT OR PASSENGER

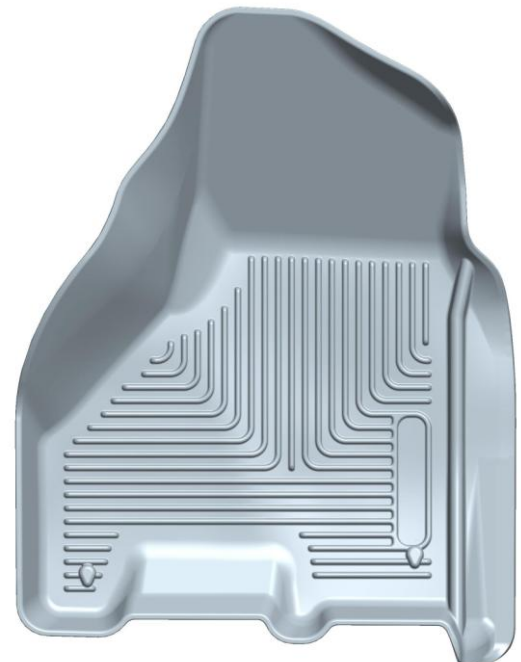

CARPET HOOK FLOOR LINER
RETENTION

