


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeaterTM Floor Liner from Winfield Consumer Products. Your new 2nd seat liner is custom molded to fit your Chrysler Pacifica with Stow-N-Go seats. The liner is made to take the place of your factory floor mats. *For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners*. However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

SECOND SEAT FLOOR LINER INSTALLATION INSTRUCTIONS FOR YOUR PACIFICA WITH STOW-N-GO SEATING

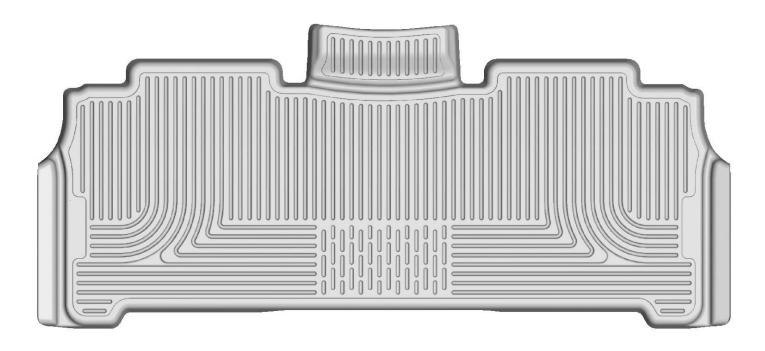

TO INSTALL YOUR LINER, FIRST SLIDE BOTH FRONT ROW SEATS FORWARD TO ALLOW EASIER ACCESS TO THE $2^{\rm ND}$ ROW FLOOR PAN. WITH THE FRONT SEATS MOVED FORWARD, INSTALL THE LINER POSITIONED AS SHOWN ABOVE. NOTE THAT THIS LINER ONLY WORKS WITH $2^{\rm ND}$ ROW STOW-N-GO SEATS.