


HUSKY **Weather**BEATER™ **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new 3rd seat liner is custom molded to fit your Chrysler Pacifica with Stow-N-Go seats. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

SECOND SEAT FLOOR LINER INSTALLATION INSTRUCTIONS FOR YOUR PACIFICA WITH STOW-N-GO SEATING

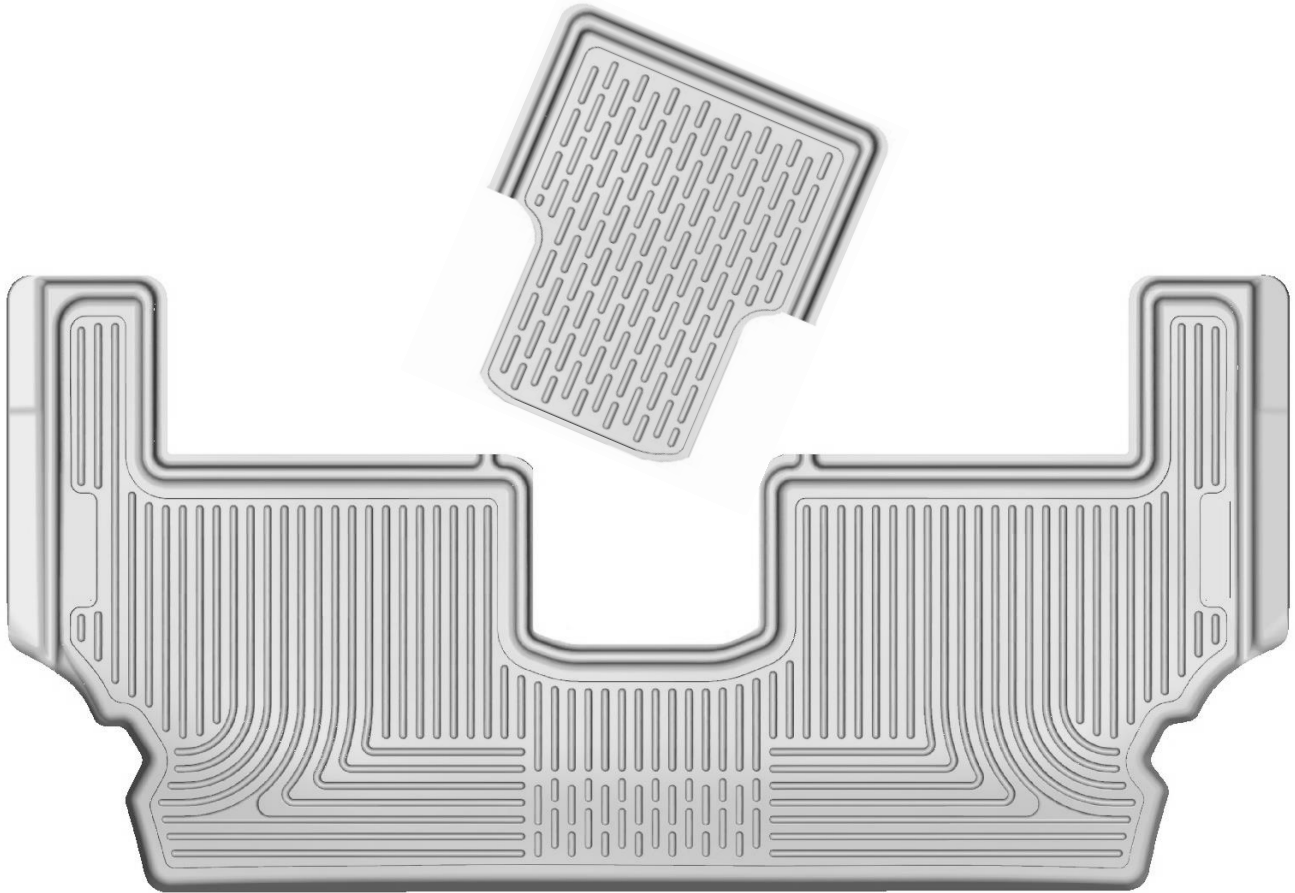

TO INSTALL YOUR LINER IN A PACIFICA WITH 2ND ROW BUCKET SEATS, FIRST SLIDE BOTH 2ND ROW SEATS FORWARD TO ALLOW EASIER ACCESS TO THE 3RD ROW FLOOR. WITH THE SEATS MOVED, INSTALL THE LINER POSITIONED AS SHOWN ABOVE. NOTE THAT THIS LINER ONLY WORKS WITH 2ND ROW STOW-N-GO SEATS. (OVER)

IF YOUR PACIFICA HAS 2ND ROW BENCH SEATING, YOU WILL NEED TO REMOVE THE CENTER SECTION OF THE LINER AS SHOWN IN THE IMAGE ON THE PREVIOUS PAGE. TO TRIM, USE A UTILITY KNIFE AND TRIM USING THE MOLDED IN STEP IN THE PART AS YOUR TRIM GUIDE (SEE BELOW). WITH THIS AREA REMOVED INSTALL THE LINER AND REPOSITION 2ND ROW SEATS AS DESIRED.

