


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeaterTM Floor Liner from Winfield Consumer Products. Your new third seat liner is custom molded to fit your vehicle with 2nd row bucket seating. The liner is made to take the place of your factory floor mats. *For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner*. However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR BUICK ENCLAVE AND CHEVROLET TRAVERSE THIRD SEAT FLOOR LINER (VEHICLES WITH 2ND ROW BUCKET SEATS)

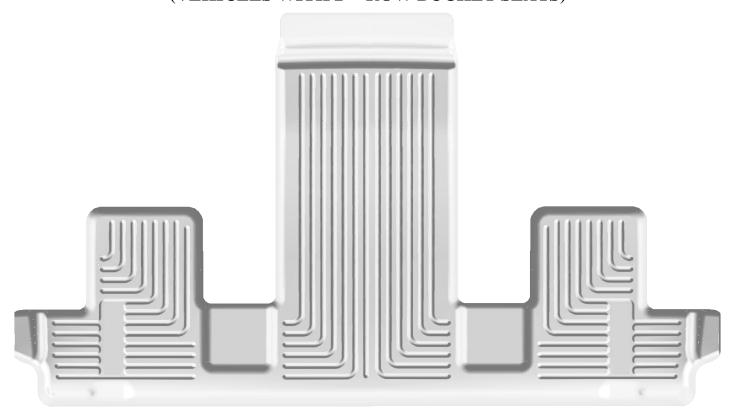

TO EASE INSTALLATION OF YOUR LINER, FLIP FORWARD/FOLD THE $2^{\rm ND}$ ROW SEATS TO EXPOSE THE $3^{\rm RD}$ ROW FLOOR. NEXT, INSTALL YOUR LINER, POSITIONING IT AS SHOWN ABOVE. LASTLY, REPOSITION THE $2^{\rm ND}$ ROW SEATS. NOTE THAT THE TONGUE OF THE LINER EXTENDS BETWEEN THE $2^{\rm ND}$ ROW BUCKET SEATS. THE FRONT EDGE TUCKS UNDER THE BACK OF THE $2^{\rm ND}$ SEAT LINER.