

# **HUSKY** **Weather**BEATER™ **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new third seat liner is custom molded to fit your vehicle with 2<sup>nd</sup> row bench & bucket seating. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.


Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD EXPEDITION MAX & LINCOLN NAVIGATOR L THIRD SEAT FLOOR LINER

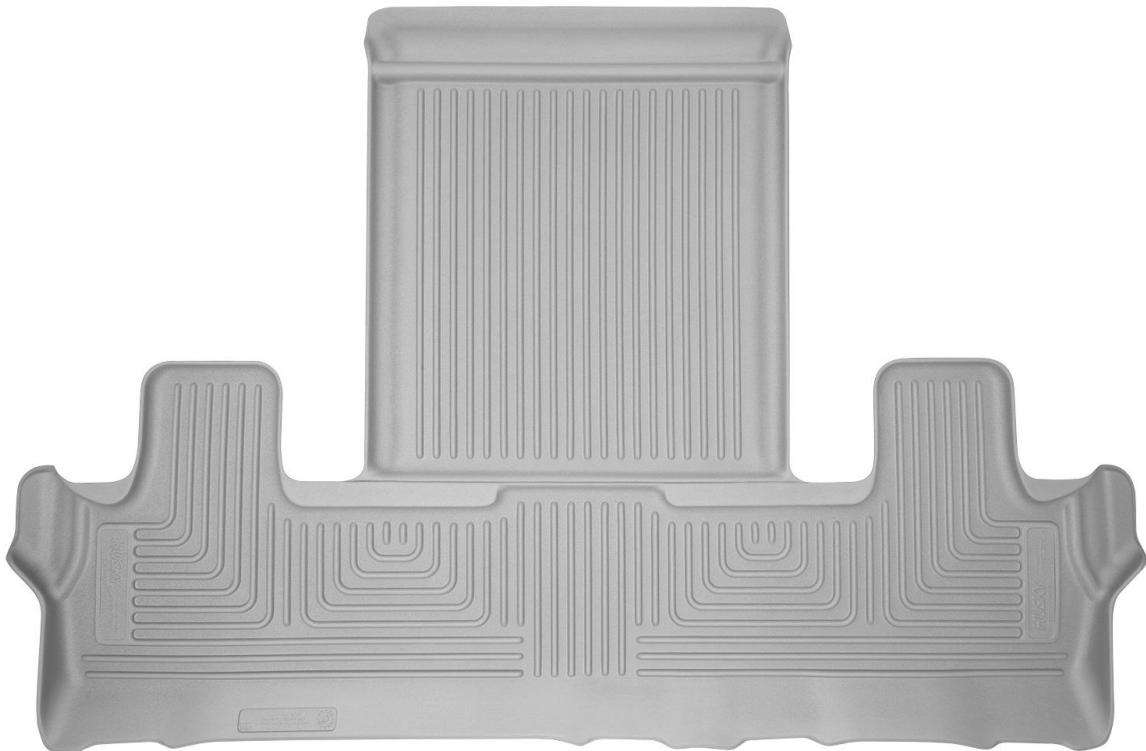

**MODELS WITH 2<sup>ND</sup> ROW BUCKETS AND WITHOUT 2<sup>ND</sup> ROW ROW CONSOLE:** TO INSTALL YOUR LINER, FLIP FORWARD/SLIDE THE 2<sup>ND</sup> ROW SEATS TO EXPOSE THE 3<sup>RD</sup> ROW FLOOR PANS. NEXT, INSTALL YOUR LINER, POSITIONING IT AS SHOWN ABOVE. LASTLY, REPOSITION THE 2<sup>ND</sup> ROW SEATS. NOTE THAT THE TONGUE OF THE LINER EXTENDS BETWEEN THE 2<sup>ND</sup> ROW BUCKET SEATS. THE FRONT EDGE OF THE 3<sup>RD</sup> SEAT LINER TUCKS UNDER THE REAR WALL OF THE 2<sup>ND</sup> SEAT LINER.

**FOR MODELS WITH 2<sup>ND</sup> ROW BUCKETS/AND 2<sup>ND</sup> ROW CONSOLE OR MODELS WITH 2<sup>ND</sup> ROW BENCH SEATS: PLEASE SEE THE INSTRUCTIONS ON THE BACK SIDE OF THIS PAGE.**

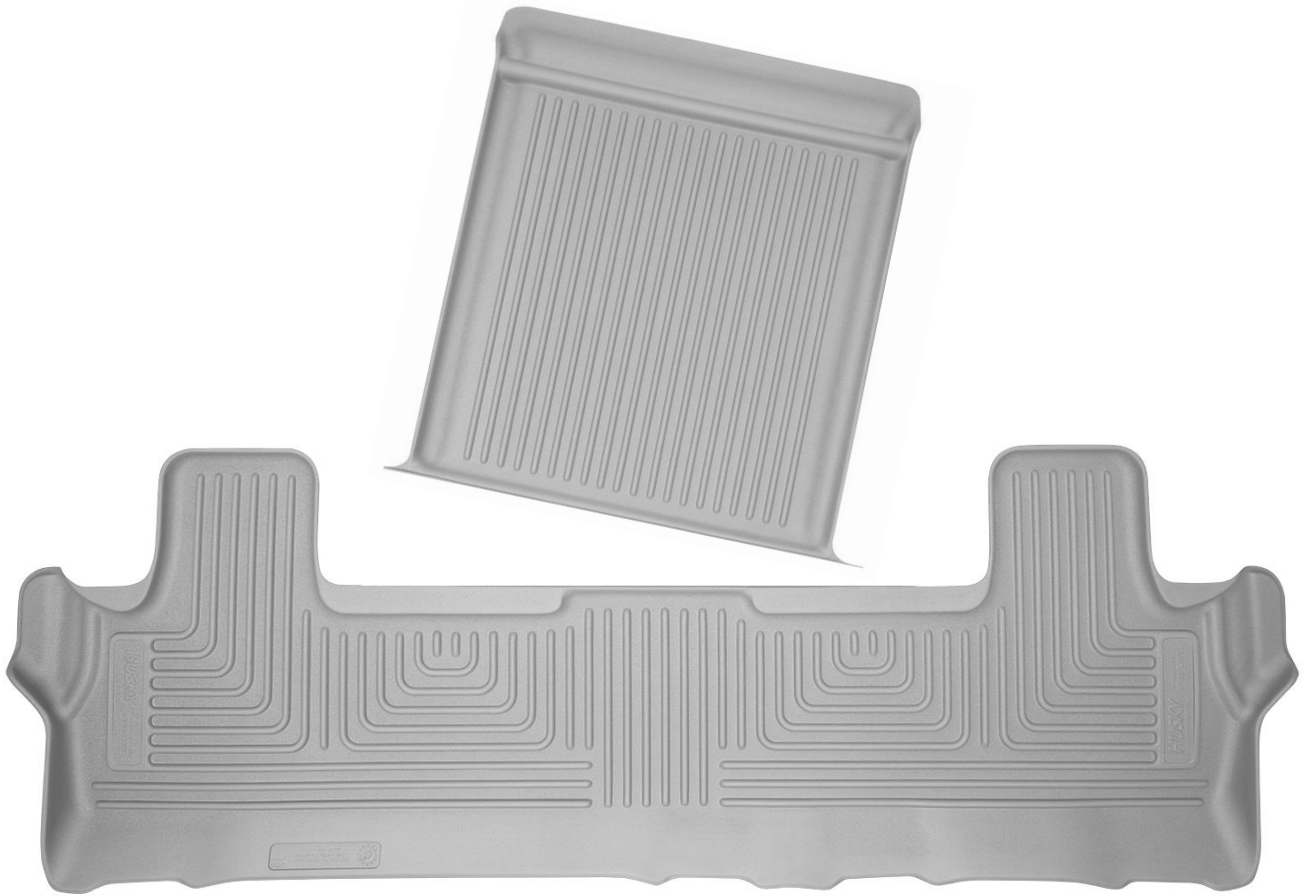

**MODELS WITH 2<sup>ND</sup> ROW BUCKETS THAT INCLUDE A CONSOLE BETWEEN THE BUCKET SEAT AND AND MODELS WITH 2<sup>ND</sup> ROW BENCH SEATS:** PRIOR TO INSTALLATION OF YOUR LINER YOU WILL NEED TO TRIM AWAY THE TONGUE SECTION OF THE LINER. A MOLDED IN TRIM GROOVE GUIDES THE TRIM SEE (IMAGE BELOW). WITH THE LINER TRIMMED, FLIP FORWARD/SLIDE THE 2<sup>ND</sup> ROW SEATS TO EXPOSE THE 3<sup>RD</sup> ROW FLOOR. NEXT, INSTALL YOUR LINER, POSITIONING IT AS SHOWN ABOVE. LASTLY, REPOSITION THE 2<sup>ND</sup> ROW SEATS.

