

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® [Floor Liner](#) from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford F250/F350 Regular Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY REGULAR CAB TRUCK FRONT FLOOR LINERS

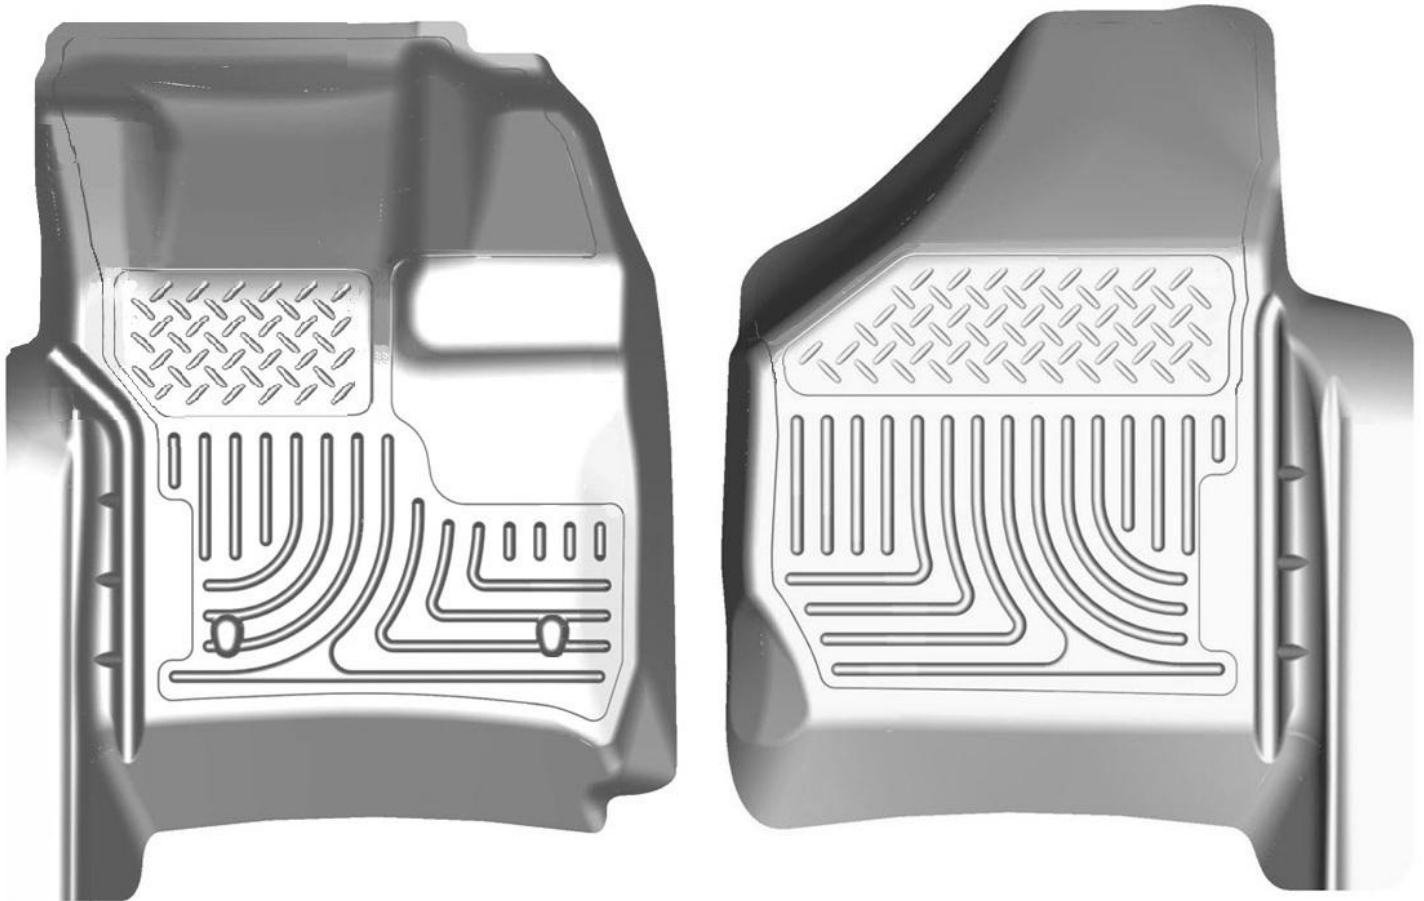

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS ALL THE WAY BACK SO AS TO ALLOW THE MOST LEG ROOM. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED.

BELOW IS A PHOTO OF THE FOOT REST ADDED MID-YEAR TO THE 2012 SUPER DUTY. IF YOUR TRUCK HAS THIS FEATURE, YOU HAVE THE CORRECT PART. IF YOU DO NOT HAVE A FOOT REST IN YOUR TRUCK, YOU WILL NEED PART #1871 FOR THE PROPER FITMENT. PLEASE CONTACT YOUR RETAILER OR CALL US AT 800-344-8759 TO GET PART #1871.

