


HUSKY **Weather** **BEATER**[™] **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® [Floor Liner](#) from Winfield Consumer Products. Your new front floor liner is custom molded to fit your Ford Transit full size van. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor lines.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD TRANSIT FULL-SIZE VAN FRONT FLOOR LINER

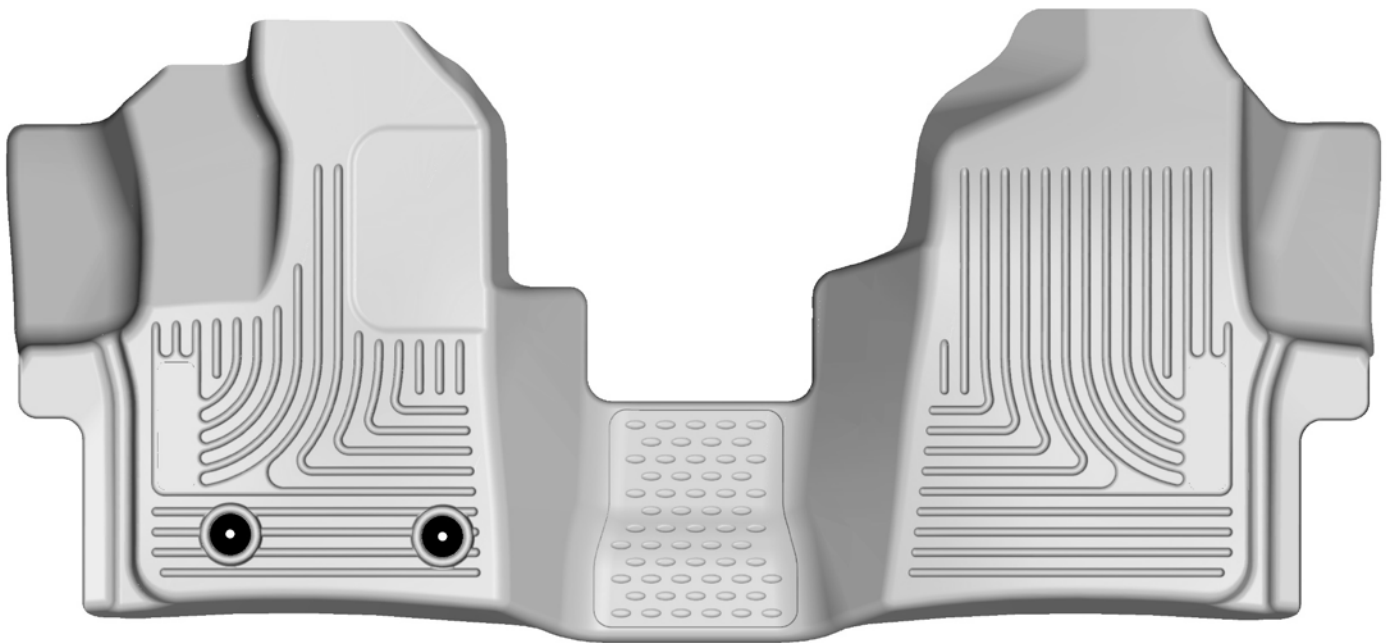

TO EASE INSTALLATION OF YOUR TRANSIT CONNECT FRONT LINER, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINER, REPOSITION THE SEATS AS DESIRED. TAKE CARE THAT DRIVER'S SIDE LINER IS ATTACHED TO THE FACTORY FLOOR MAT POSTS.