

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® [Floor Liner](#) from Winfield Consumer Products. Your new third seat liner is custom molded to fit your Chrysler Town & Country/Dodge Grand Caravan with Stow-N-Go seats. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

THIRD SEAT FLOOR LINER INSTALLATION INSTRUCTIONS FOR YOUR DODGE GRAND CARAVAN & CHRYSLER TOWN AND COUNTRY WITH STOW-N-GO SEATING

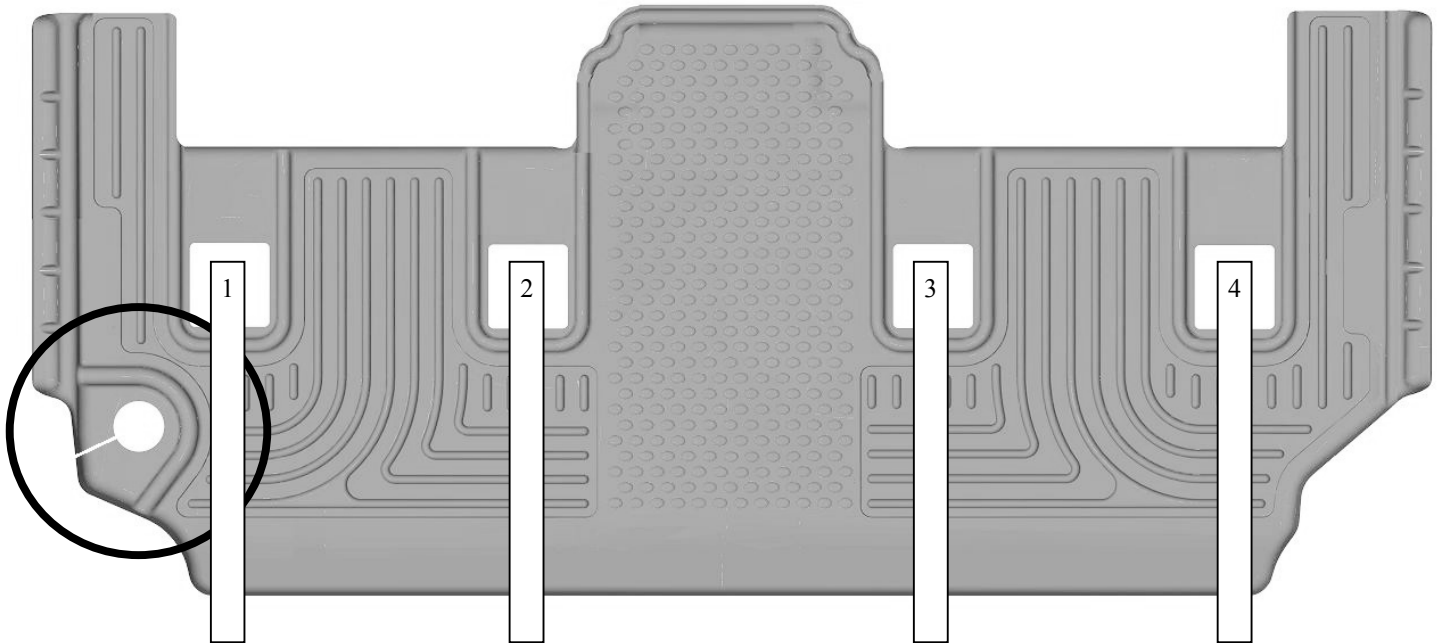

TO INSTALL LINER, FIRST FOLD & FLIP BOTH SECOND ROW SEATS FORWARD. WITH THIS DONE, POSITION LINER SO THAT THE REAR OUTER EDGES MATCH UP TO THE INTERIOR TRIM PANELS IN VEHICLE. PLEASE NOTE THAT THE SEAT BELT POSITIONED ALONG THE DRIVER'S SIDE TRIM PANEL WILL FIT INTO THE PRE-TRIMMED HOLE IN THE LINER (SHOWN ABOVE CIRCLED). THE LINER IS SLIT TO ALLOW THE SEAT BELT TO PASS THROUGH THE LINER AND INTO THE HOLE. LASTLY, WITH THE LINER IN PLACE, FOLD THE SECOND ROW SEATS BACK INTO POSITION. THE SEAT LEGS WILL FASTEN THROUGH THE LINER INTO THE FLOOR AT THE FOUR (4) AREAS NOTED WITH NUMBERS ABOVE.