

HUSKY **Weather**BEATER™ **Custom Vehicle Floor Protection**


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ [Floor Liner](#) from Winfield Consumer Products. Your new third seat liner is custom molded to fit your Escalade / Tahoe / Yukon with 2nd row bucket seats. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Using Armor All®, Son-of-a-Gun® or like items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR ESCALADE, TAHOE OR YUKON 3RD SEAT LINER (WITH 2ND ROW BUCKET SEATS)

FRONT OF VEHICLE

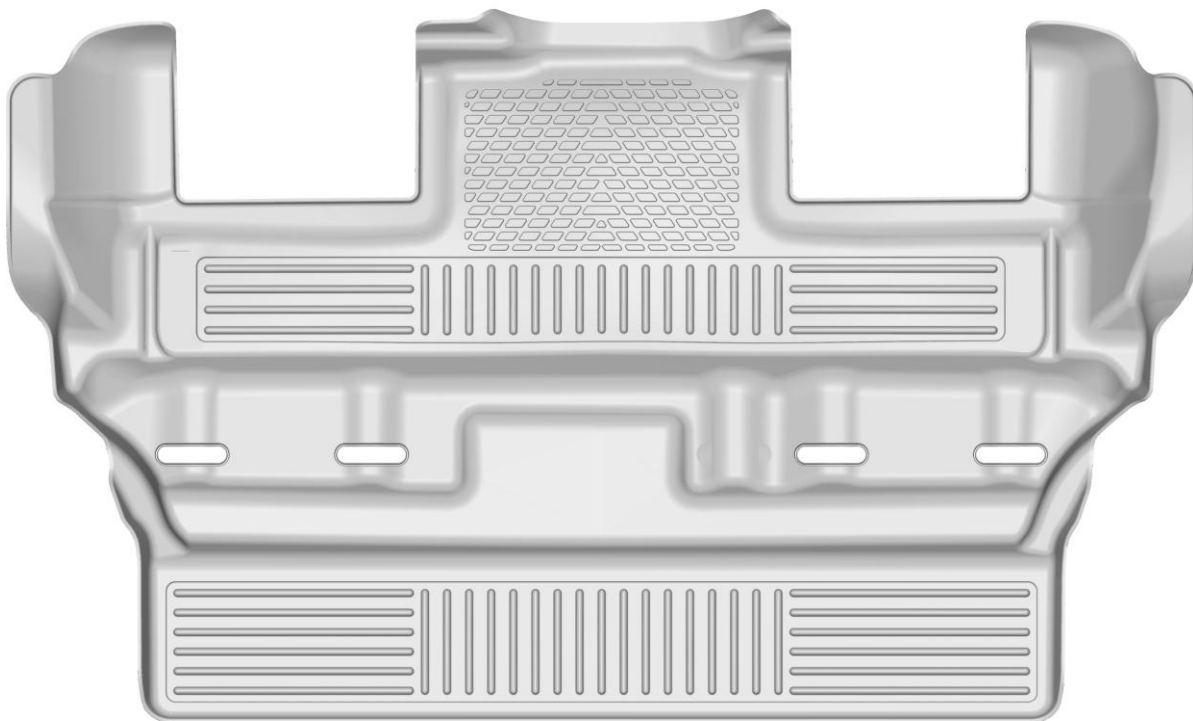

BEFORE ATTEMPTING TO INSTALL YOUR LINER, FIRST FLIP/FOLD YOUR SECOND ROW BUCKET SEATS FORWARD TO EXPOSE THE 3RD ROW FLOOR PAN. WITH THIS DONE YOU CAN POSITION THE LINER IN THE FLOOR ORIENTED AS SHOWN ABOVE. THE “TONGUE” AREA PROVIDES COVERAGE BETWEEN THE 2ND ROW BUCKET SEATS AND TUCKS UNDER THE REAR EDGE OF YOUR 2ND SEAT LINER.

NOTE THAT THE FOUR TRIMMED AREAS IN THE LINER ALLOW THE SECOND ROW SEATS TO FASTEN THROUGH THE LINER. IF YOUR LINER DOES NOT HAVE THESE FOUR AREAS TRIMMED, DO NOT INSTALL THE LINER AS THE 2ND ROW SEATS WILL NOT FASTEN SECURELY IN PLACE. INSTEAD, PLEASE CALL HUSKY LINERS AT 800-344-8759 TO GET THE CORRECT LINER.

PART #1930 SHOWN INSTALLED—NOTE 2ND ROW SEATS MUST BE FLIPPED/FOLDED FORWARD TO ALLOW INSTALLATION OF LINER.

