

HUSKYLINERS[®]


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater[®] [Floor Liner](#) from Winfield Consumer Products. Your new second seat liner is custom molded to fit your Ford F150 Super Crew truck. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F150 SUPER CREW TRUCK SECOND SEAT FLOOR LINER

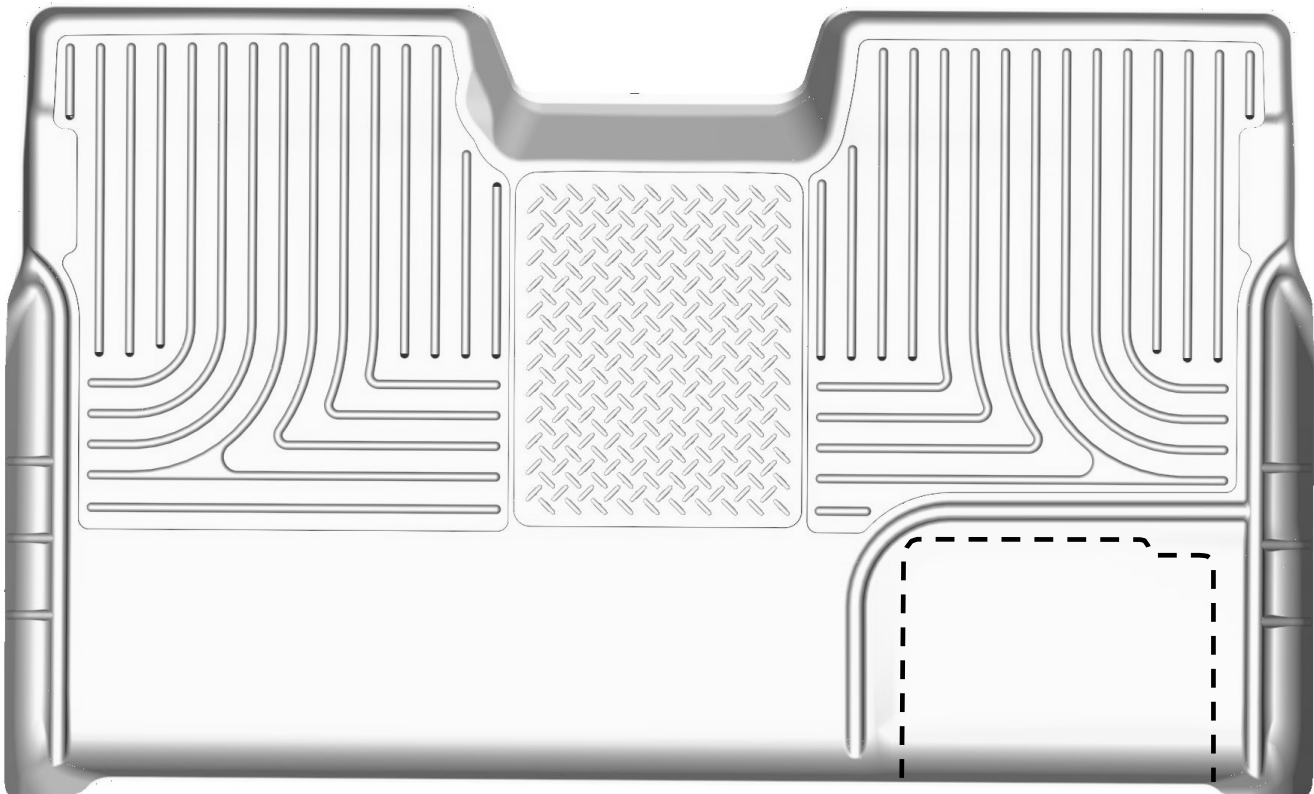

TO EASE INSTALLATION OF YOUR NEW SECOND SEAT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.

IF YOUR SUPER CREW HAS THE OPTIONAL FACTORY SUB-WOOFER MOUNTED UNDER THE REAR PASSENGER SIDE SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS FEATURE. TO TRIM, USE A UTILITY KNIFE AND REMOVE THE LOWERED SECTION OF THE LINER LOCATED IN THE LOWER LEFT HAND PORTION (SEE DOTTED LINE IN SKETCH ABOVE).