

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® [Floor Liner](#) from Winfield Consumer Products. Your new 3rd seat floor liner is custom molded to fit your Ford Explorer. The liner is made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mat(s) before installing your new floor liners.*** However, *do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD EXPLORER 3RD SEAT FLOOR LINER

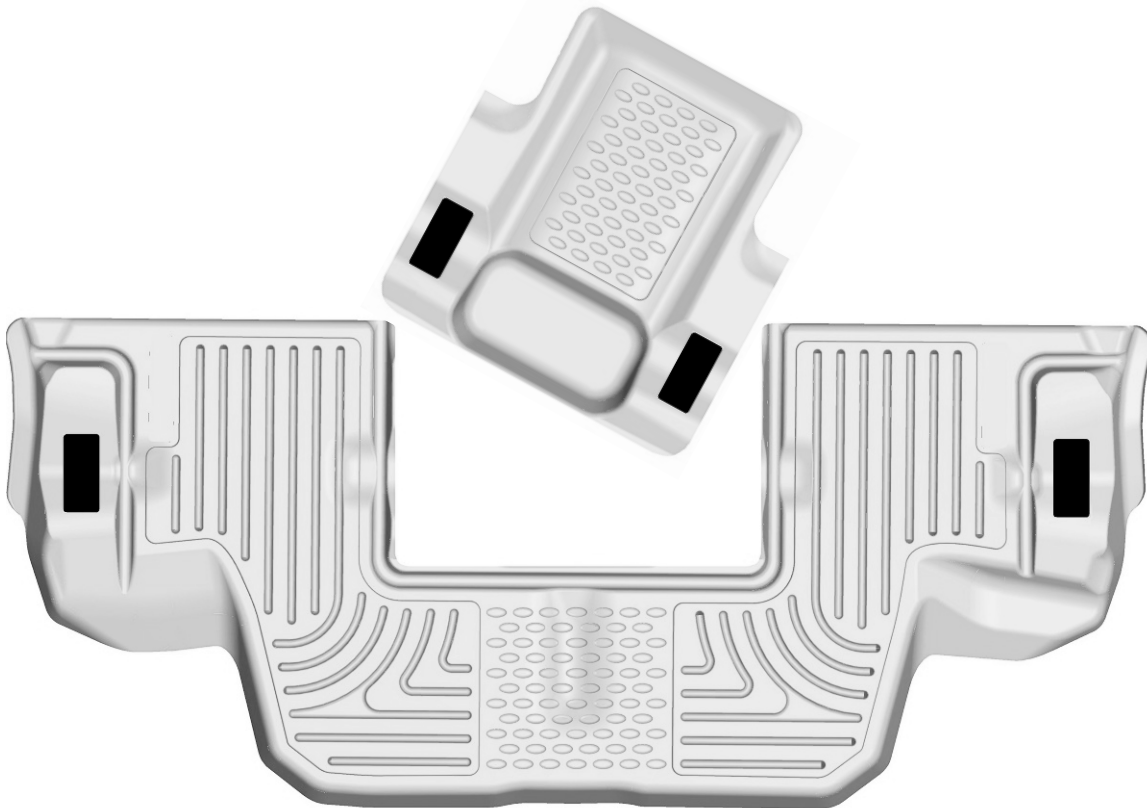

TO INSTALL YOUR 3RD SEAT LINER, SIMPLY RELEASE AND FLIP/FOLD FORWARD YOUR SECOND ROW SEATS. NOTE THAT THE SECOND ROW SEATS WILL REATTACH THROUGH THE PRE-TRIMMED HOLES IN THE LINER. IF THE AREAS DARKENED ABOVE ARE NOT TRIMMED OUT WHEN YOU RECEIVE YOUR LINER, ***DO NOT INSTALL YOUR LINER.*** INSTEAD, PLEASE CALL US AT 800-344-8759.

IF YOUR VEHICLE HAS A CONSOLE BETWEEN THE 2ND ROW SEATS, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE (SEE PHOTO ON REVERSE SIDE). TO TRIM, USE THE MOLDED IN STEP IN THE LINER AS YOUR TRIM GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

