

# **HUSKY** **WeatherBEATER™** **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater™ [Cargo Liner](#) from Winfield Consumer Products. Your new liner is custom molded to fit your Toyota Highlander. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the cargo area of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Do not use Armor All®, Son-of-a-Gun® or similar items as these products make the liner slick.

## CARGO LINER INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA HIGHLANDER

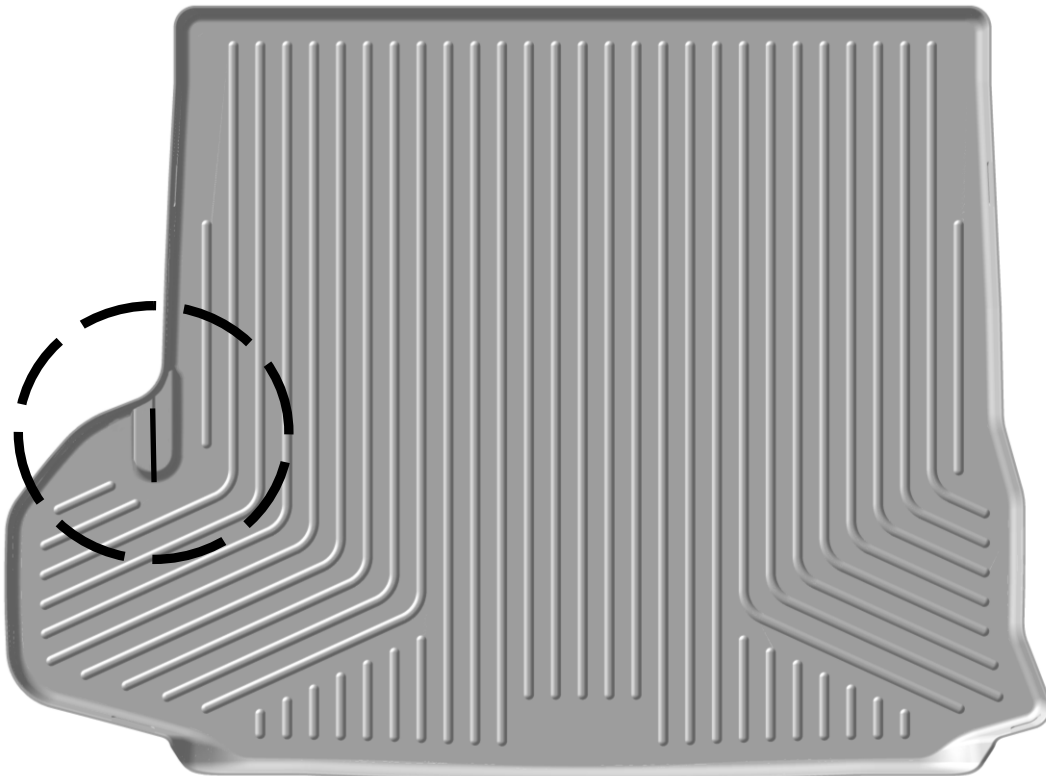

YOUR HIGHLANDER CARGO LINER FITS TO THE BACK OF THE 2<sup>ND</sup> ROW OF SEATS. BEFORE INSTALLING THE LINER, ADJUST THE 2<sup>ND</sup> ROW SEAT BACKS SO THEY ARE IN THEIR MOST UPRIGHT POSITION. ONCE LINER IS INSTALLED THE SEAT BACKS CAN BE RECLINED AS DESIRED.

IF YOUR HIGHLANDER HAS A 3<sup>RD</sup> ROW OF SEATING, THE SEATS MUST BE FOLDED FLAT BEFORE INSTALLING THE LINER. A TRIMMABLE GROOVE (CIRCLED AREA ABOVE) IS MOLDED INTO THE LINER THAT, WHEN TRIMMED, WILL ACCOMMODATE THE DRIVER'S SIDE 3<sup>RD</sup> ROW SEAT BELT. TO TRIM, USE A PAIR OF HEAVY SHEARS OR A UTILITY KNIFE. A PHOTO OF THE TRIMMED AREA WITH THE SEAT BELT INSERTED IS INCLUDED ON THE BACK OF THIS PAGE.

**IMAGE SHOWING LINER TRIMMED AND SEAT BELT INSERTED INTO TRIMMED SLOT.**

