


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Cargo Liner from Winfield Consumer Products. Your new cargo liner is custom molded to fit your Audi Q7. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the cargo of your vehicle with a weight in each corner (a book works well). After about 17 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR AUDI Q7 CARGO LINER (FITS OVER FOLDED FLAT 3RD ROW SEATS)

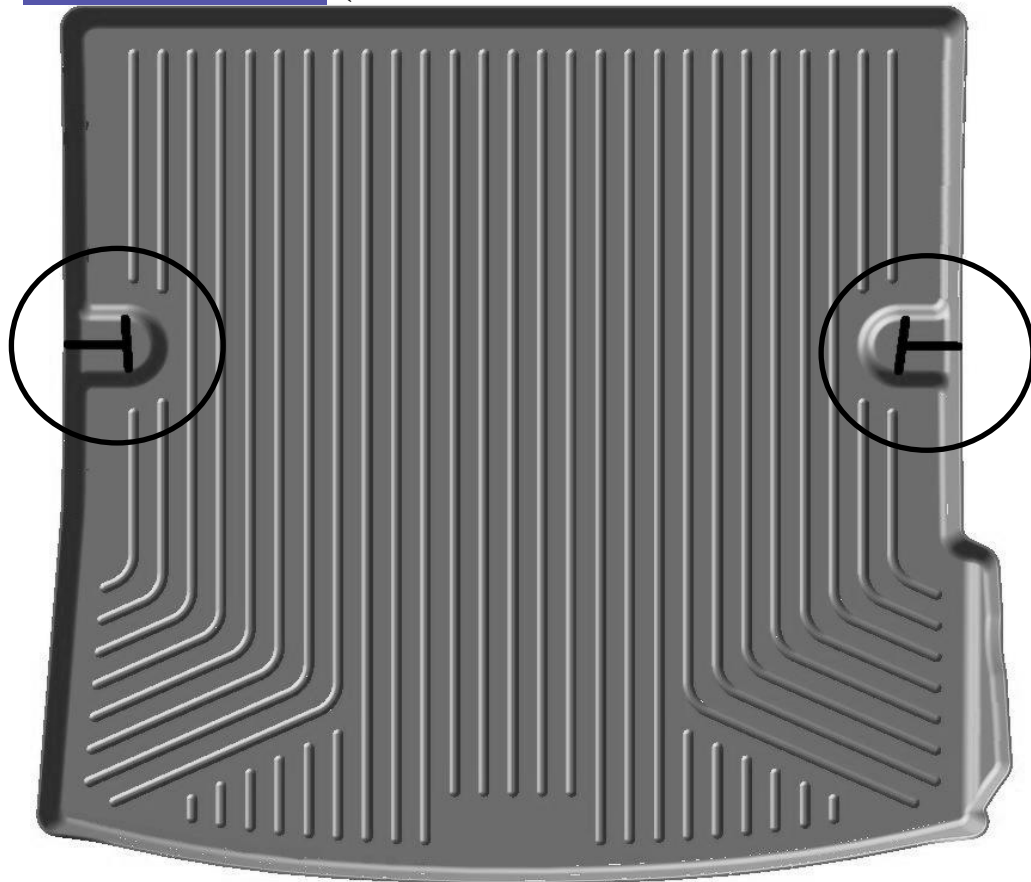

NOTE THAT YOUR LINER FITS TO THE BACK OF THE 2ND ROW SEATS OVER THE FOLDED 3RD ROW OF SEATS. THE LINER HAS A RAISED AREA ON EACH SIDE (SEE ABOVE CIRCLED) WITH TRIMMED SLOTS THAT ALLOW THE 3RD ROW SEAT BELTS TO PASS THROUGH THE LINER WHILE KEEPING THE LINER WATER TIGHT. WITH THE LINER INSTALLED, SIMPLY TURN THE SEAT BELT SIDWAYS AND SLIDE IT INTO THE “T” SHAPED SLOT. STRAIGHTEN THE BELT OUT WHEN IT IS FULLY INSERTED. THE SEAT BELT WILL BE PARALLEL TO THE SIDEWALL WHEN PROPERLY ORIENTED.