

THANK YOU FOR SELECTING A HUSKY FLOOR LINER




FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA 4RUNNER FRONT FLOOR LINERS

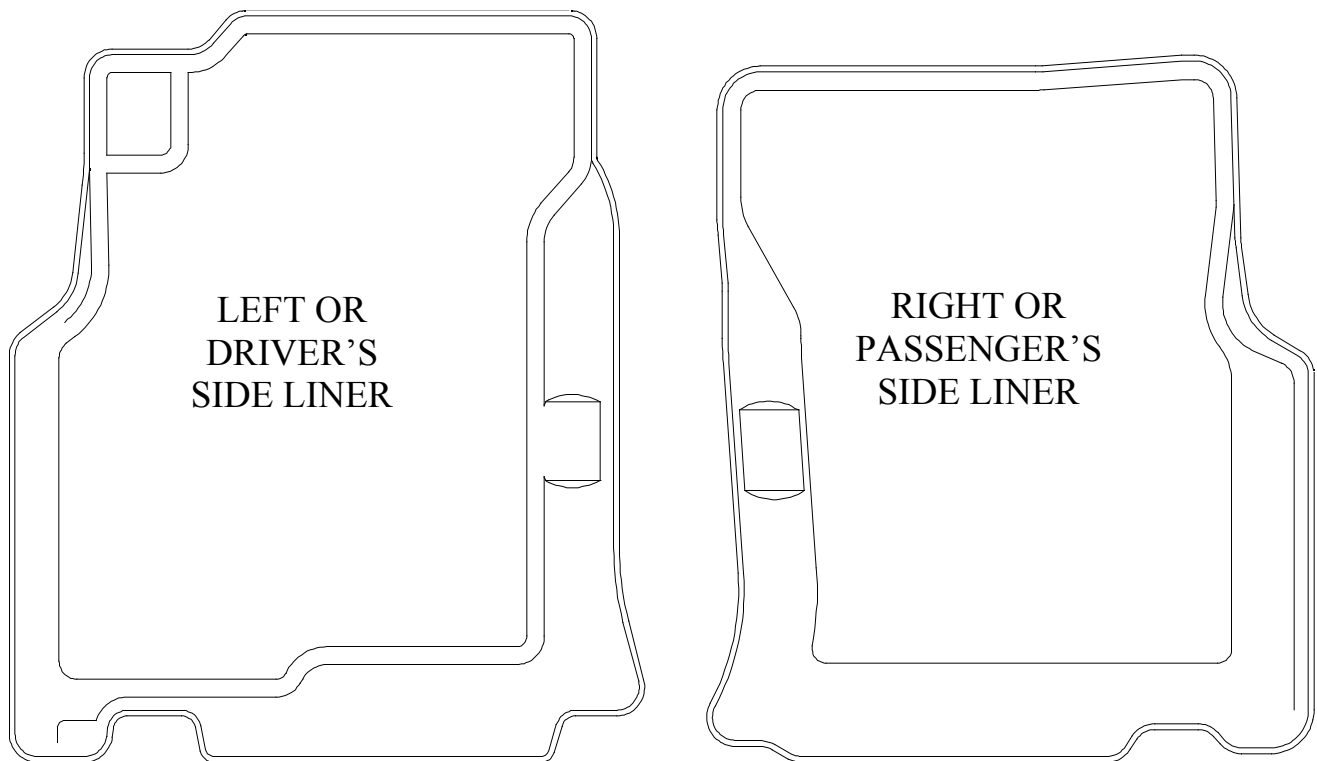

THE FACTORY CARPET HOOKS LOCATED IN THE CARPET OF THE DRIVER'S SIDE FLOOR CAN EASILY BE REMOVED TO ALLOW YOUR LINER TO LAY COMPLETELY FLAT. APPLY FIRM PRESSURE WHILE TIPPING THE HOOK ARM STRAIGHT UP TO REMOVE THEM.