

THANK YOU FOR SELECTING A HUSKY FLOOR LINER  
FROM WINFIELD CONSUMER PRODUCTS




CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.**

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA  
FJ CRUISER FRONT FLOOR LINERS

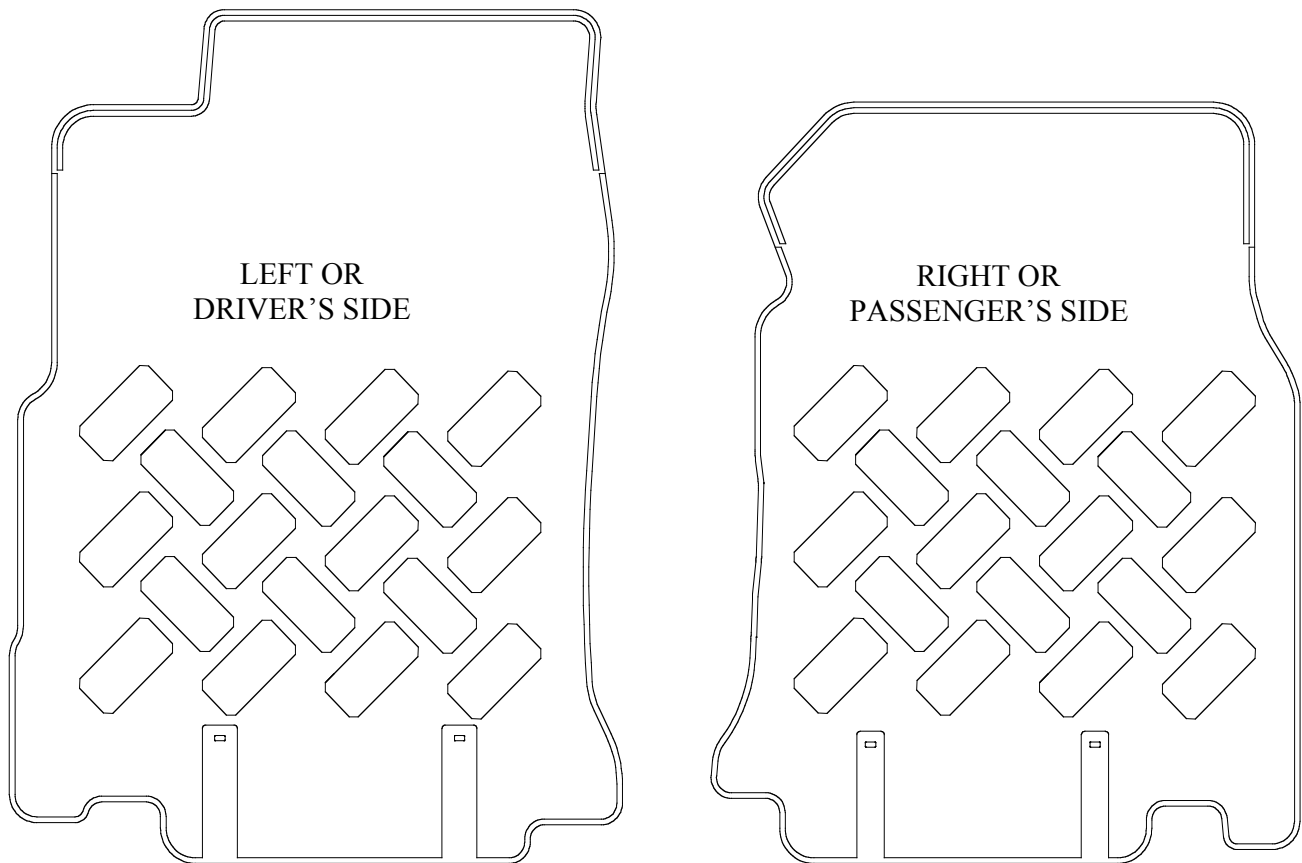

NOTE: YOUR TOYOTA FJ CRUISER COMES EQUIPPED WITHOUT FACTORY INSTALLED CARPETING. TO HELP SECURE YOUR HUSKY LINERS IN PLACE, THE LINERS ARE DESIGNED TO UTILIZE THE FACTORY MAT HOOKS. YOUR FJ CRUISER SHOULD HAVE TWO FACTORY MAT HOOKS ON THE DRIVER'S AND PASSENGER'S SIDE FLOOR PANS (SEE PHOTOS ON BACK). IF YOUR FJ CRUISER DOES NOT HAVE THESE HOOKS INSTALLED, CHECK YOUR GLOVE BOX AS THEY ARE OFTEN SHIPPED TO YOUR DEALERSHIP STORED IN THE GLOVE BOX. FOLLOW THE INSTALLATION INSTRUCTIONS PROVIDED WITH THE MAT HOOKS TO INSTALL THEM. IF YOU CANNOT FIND THE HOOKS LOCATED IN THE GLOVE BOX, CONSULT YOUR DEALERSHIP. DO NOT INSTALL THE LINERS WITHOUT UTILIZING THE FACTORY MAT HOOKS.



FJ CRUISER DRIVER'S SIDE FLOOR PAN WITH MAT HOOKS INSTALLED



FJ CRUISER PASSENGER'S SIDE FLOOR PAN WITH MAT HOOKS INSTALLED



HUSKY LINER PART #3596 SHOWN INSTALLED IN THE FJ CRUISER. NOTE THAT LINERS MUST BE ATTACHED OVER FACTORY MAT HOOKS TO HELP SECURE LINERS IN POSITION.

