


HUSKYLINERS® **weatherBEATER**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Trunk Liner from Winfield Consumer Products. Your new trunk liner is custom molded to fit your Chevrolet Camaro. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET CAMARO TRUNK LINER

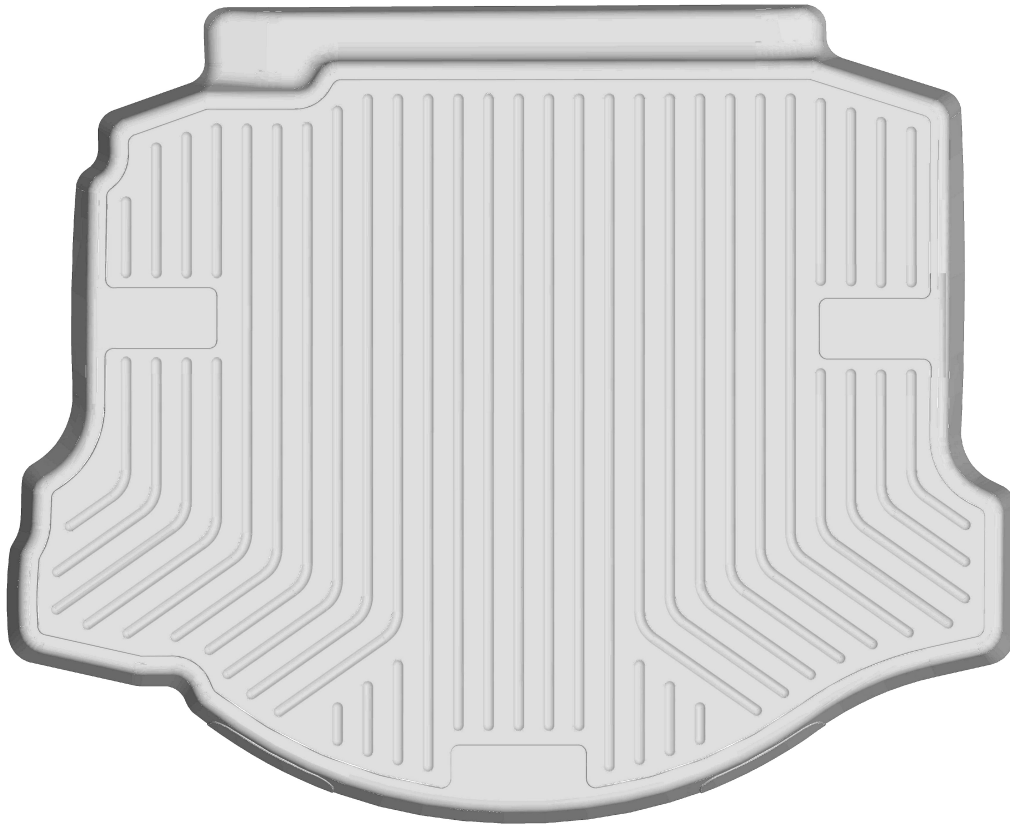

YOUR TRUNK LINER HAS TWO TRIM AREAS LOCATED ALONG THE BACK WALL TO ALLOW ACCESS TO THE FACTORY CARGO TIE-DOWN HOOKS. TO TRIM, SIMPLY USE THE BORDER FORMED BY THE RECESSED AREA AS THE TRIM GUIDE AND REMOVE THESE LOCATIONS. PHOTOS OF THE TRIMMED PART ARE INCLUDED ON THE BACK OF THIS SHEET.

PHOTO SHOWING PART #42051 CARGO HOOK AND CARGO NET RETAINER RELIEF AREA. NOTE: TRIM THIS AREA AWAY TO ALLOW EASY ACCESS TO THESE HOOKS. USE THE MOLDED IN STEP IN THE PART AS YOUR TRIMMING GUIDE.



PHOTO SHOWING PART #42051 TRIMMED TO ALLOW ACCESS TO CARGO HOOK AND CARGO NET RETAINER.

