

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater Trunk Liner from Winfield Consumer Products. Your new trunk liner is custom molded to fit your Ford Focus 5-door hatchback. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD FOCUS 5-DOOR HATCHBACK TRUNK LINER

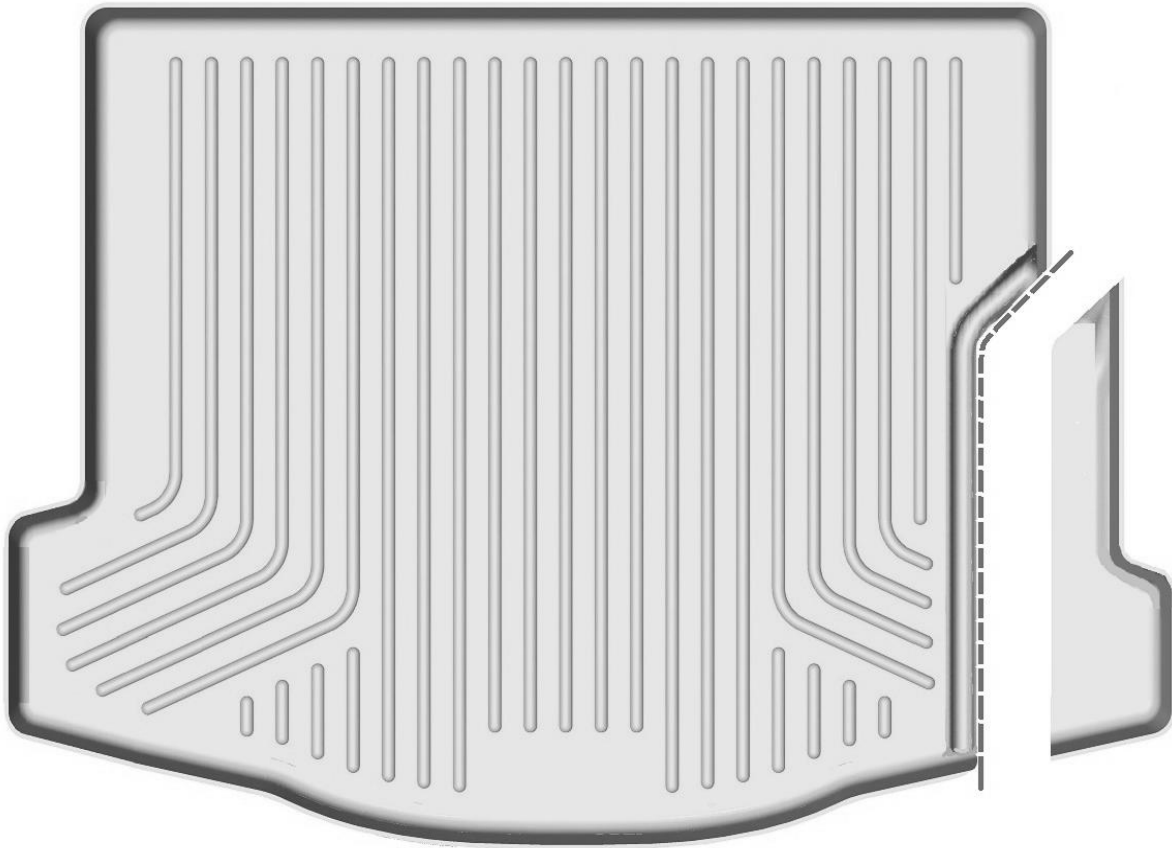

FOCUS MODELS EQUIPPED WITH THE OPTIONAL SONY AUDIO SYSTEM HAVE A SUBWOOFER MOUNTED IN THEIR TRUNK COMPARTMENT. THIS SUBWOOFER WILL KEEP YOUR LINER FROM FITTING AS IT IS BOXED. YOUR LINER IS DESIGNED TO ACCOMMODATE THE SUBWOOFER VIA TRIMMING. TO TRIM, FIRST LOCATE THE MOLDED IN STEP IN THE LINER THAT ACTS AS A TRIMMING GUIDE (SEE DIAGRAM ABOVE AND PHOTOS ON BACK OF PAGE). THEN, USING HEAVY

SHEARS OR A UTILITY KNIFE, REMOVE THE AREA OF LINER THAT THE SUBWOOFER WILL OCCUPY. BELOW ARE PHOTOS OF THE TRIMMED LINER BOTH IN AND OUT OF THE VEHICLE.



THE LINE THROUGH THE PART IN THE PHOTO ABOVE HIGHLIGHTS THE TRIM NEEDED FOR THE SUBWOOFER ACCOMMODATION. THERE IS A STEP IN THE PART TO GUIDE TRIMMING.