



# X-ACT CONTOUR

## FLOOR LINERS


### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a X-act Contour Floor Liner from Winfield Consumer Products. Your new third seat liner is custom molded to fit your Escalade / Tahoe / Yukon with 2<sup>nd</sup> row bucket seats. The liner is made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting.***

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Using Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or like items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR ESCALADE, TAHOE OR YUKON 3RD SEAT LINER (WITH 2<sup>ND</sup> ROW BUCKET SEATS)

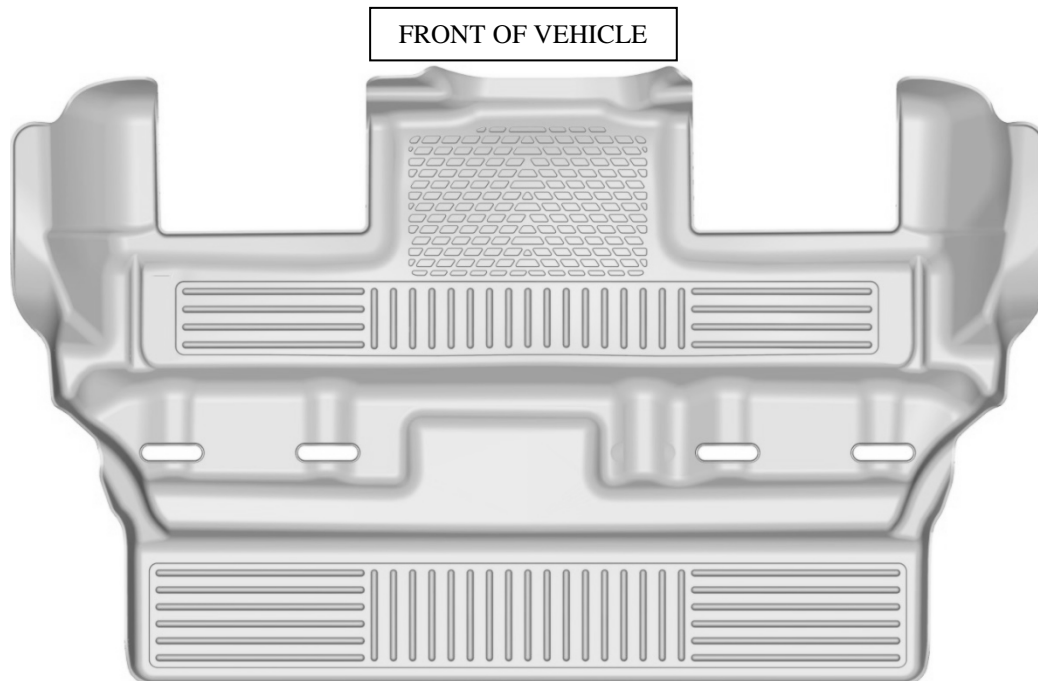

**BEFORE ATTEMPTING TO INSTALL YOUR LINER, FIRST FLIP/FOLD YOUR SECOND ROW BUCKET SEATS FORWARD TO EXPOSE THE 3<sup>RD</sup> ROW FLOOR PAN. WITH THIS DONE YOU CAN POSITION THE LINER IN THE FLOOR ORIENTED AS SHOWN ABOVE. THE "TONGUE" AREA PROVIDES COVERAGE BETWEEN THE 2<sup>ND</sup> ROW BUCKET SEATS AND TUCKS UNDER THE REAR EDGE OF YOUR 2<sup>ND</sup> SEAT LINER.**

**NOTE 2<sup>ND</sup> ROW SEATS MUST BE FLIPPED/FOLDED FORWARD TO ALLOW INSTALLATION OF LINER.**

