



# X-ACT CONTOUR


## FLOOR LINERS

### CARE AND USE INSTRUCTIONS - 53391

---

Thank you for selecting a X-act Contour Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Toyota Tacoma Access Cab. The liners are made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting.***

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liners slick.

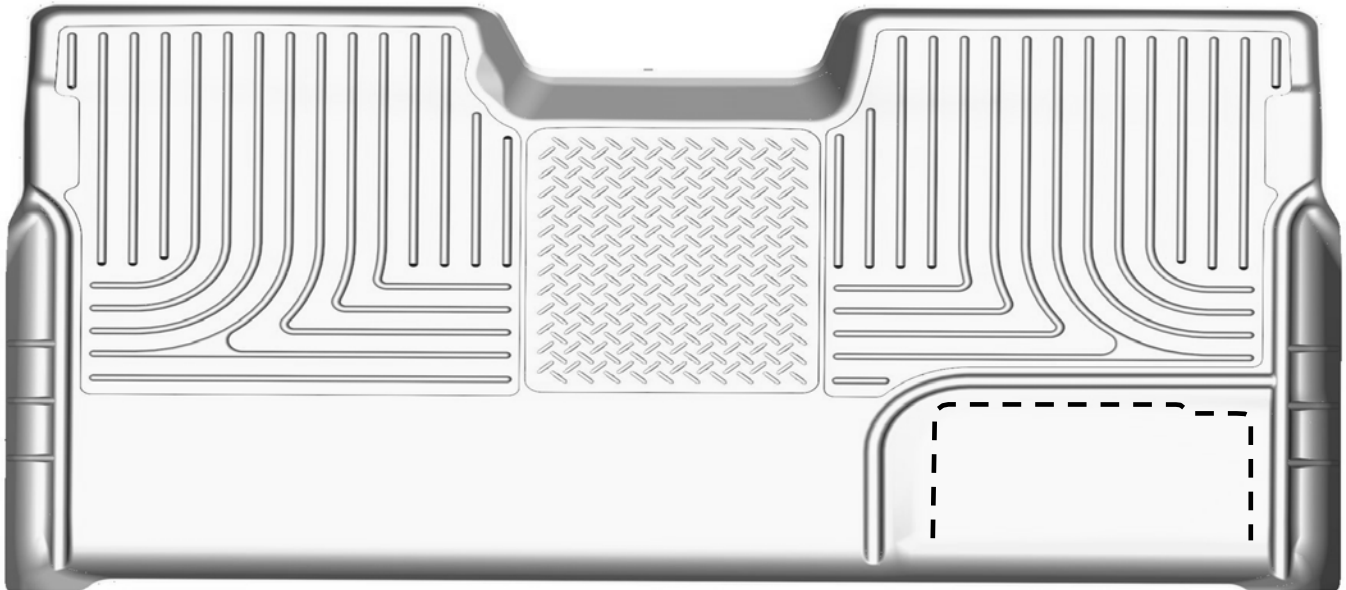

**TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.**

**IF YOUR SUPER CREW HAS THE OPTIONAL FACTORY SUB-WOOFER MOUNTED UNDER THE REAR PASSENGER SIDE SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS FEATURE. TO TRIM, USE A UTILITY KNIFE AND REMOVE THE LOWERED SECTION OF THE LINER LOCATED IN THE LOWER LEFT HAND PORTION (SEE DOTTED LINE IN SKETCH ABOVE).**