



X-ACT CONTOUR


FLOOR LINERS

CARE AND USE INSTRUCTIONS – PN:53451

Thank you for selecting an X-act Contour™ 2nd Seat Floor Liner from Winfield Consumer Products. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F150 SUPER CAB TRUCK SECOND SEAT FLOOR LINER

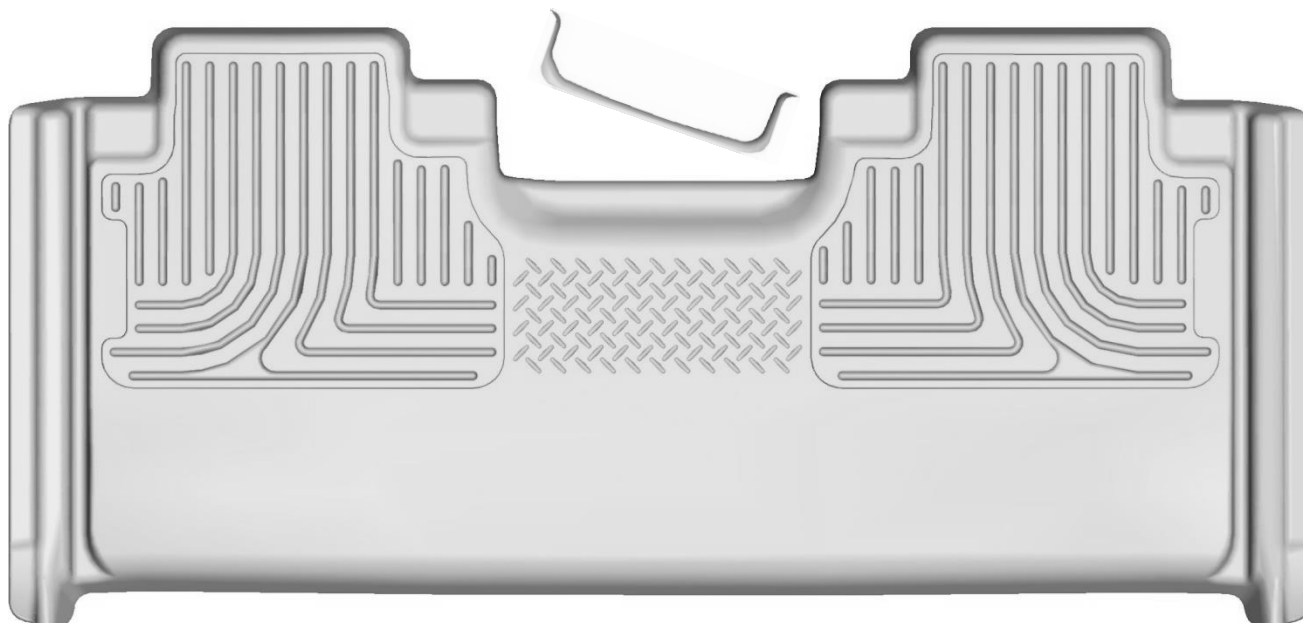

TO EASE INSTALLATION OF YOUR NEW SUPER CAB LINER, MOVE BOTH FRONT SEATS TO THEIR MOST FORWARD POSITION. ONCE LINER IS INSTALLED, REPOSITION THE SEATS AS DESIRED.

IF YOUR TRUCK IS EQUIPPED WITH A 40/20/40 SPLIT BENCH FRONT SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACHIEVE THE PROPER FIT AROUND THE REAR FACING CUP HOLDER AS SHOWN IN THE IMAGE ABOVE. A MOLDED IN TRIM STEP IS INCLUDED TO AID IN TRIMMING. NO TRIMMING IS NEEDED FOR TRUCKS WITH FRONT ROW BUCKETS AND A CONSOLE.

