



# X-act CONTOUR™

53731



## CARE AND USE INSTRUCTIONS – PN:53731


---

Thank you for selecting X-act Contour™ Front [Floor Liners](#) from Winfield Consumer Products. Your new front floor liners are custom molded to fit your specific vehicle's floor board. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

When installing your floor liners, remove the floor mat retention hooks on your vehicles driver's side floor board. install the two snap in fasteners provided and align the retention hole in your floor liner over the hole and screw on the caps to secure the driver's side liner. Secure the passenger's side by screwing the liner retention screw into the carpet and align the liner over the hole in the liner and screw on the retention screw cap.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

LEFT OR DRIVER

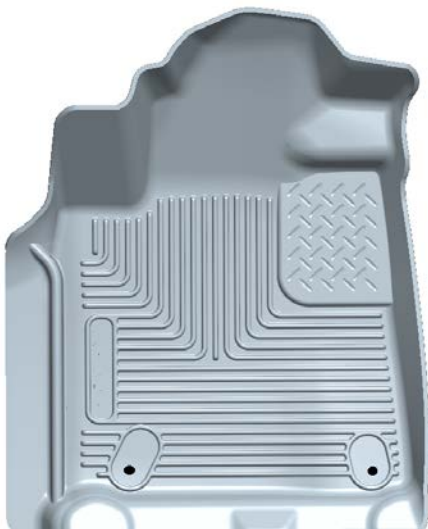

RIGHT OR PASSENGER

