



# X-ACT CONTOUR


## FLOOR LINERS

### CARE AND USE INSTRUCTIONS – PN: 55541

---

Thank you for selecting X-act Contour™ Floor Liners from Husky Liners. Your new 3rd seat floor liner is **custom molded to fit your specific vehicle's floor board**. The liner is made to take the place of your factory floor mats. *For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.* However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

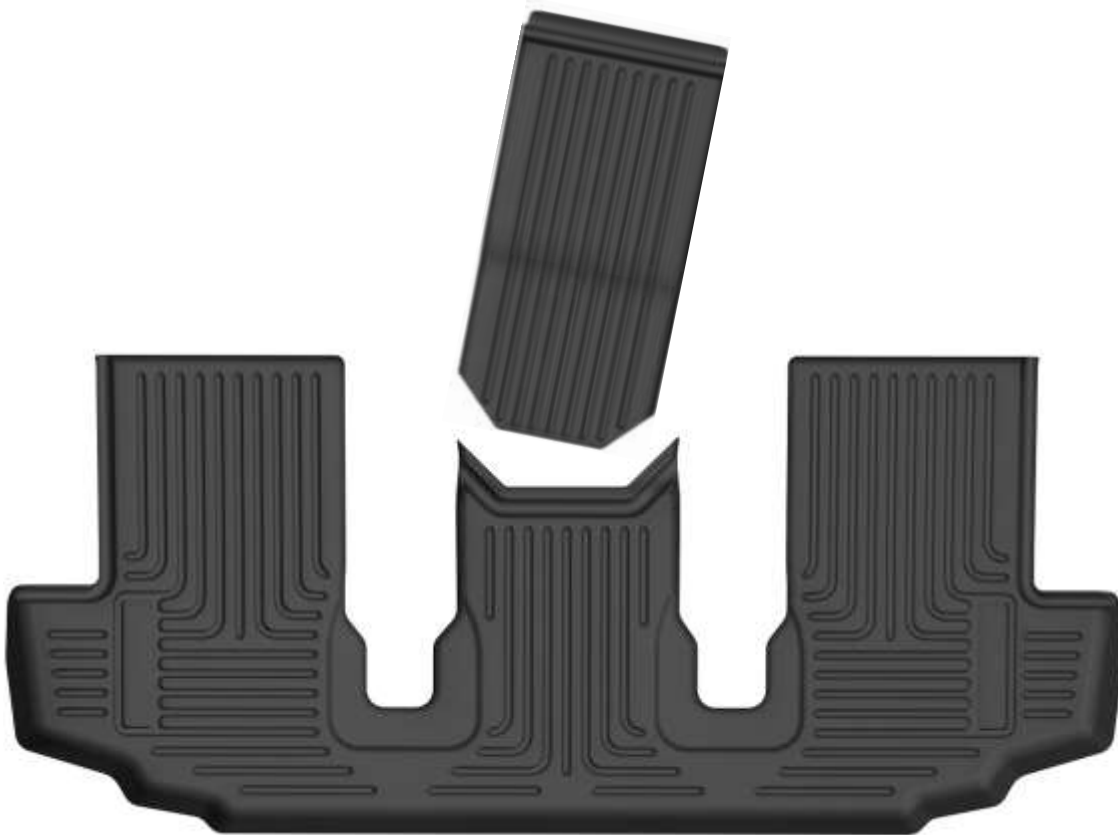

TO EASE INSTALLATION OF YOUR NEW THIRD SEAT LINER, FLIP AND SLIDE FORWARD THE SECOND ROW SEATS TO ALLOW EASY ACCESS TO THE THIRD ROW FLOOR. POSITION THE LINER AS SHOWN ABOVE. ONCE THE LINER IS IN PLACE, MOVE THE SECOND SEATS BACK TO THE DESIRED POSITIONS.

IF YOUR HIGHLANDER HAS 2<sup>ND</sup> ROW BUCKET SEATS WITH THE CUP HOLDER BETWEEN THE SEATS, YOUR LINER WILL NEED TRIMMED TO ACCOMMODATE THIS FEATURE. TO TRIM, USE THE MOLDED IN GROOVE AS YOUR TRIM GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

Learn more about car and truck floor mats we have.