

**GMC SIERRA FRONT MUD GUARD INSTALLATION INSTRUCTIONS**

*Please read instructions thoroughly before installation.*

**Tools Required**

- TX 15 Torx Bit / Driver
- Drill
- 1/8" Drill Bit
- Phillips Head Screwdriver


**Package Contents**

- Driver & passenger side front mud guard
- Instruction sheet
- #8 SEM Screws (Qty 2)

**NOTE:** Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

**Determine which mudguard you have by locating the part number molded in the mounting flange (5689 LH 5689 RH).**

1. Remove existing fasteners from location C and D. (Do not remove fastener from location B)
2. Install mudguard at locations B and C using factory screws. (Check alignment before tightening)
3. Drill an 1/8" hole into the fender cladding and thru sheet metal.
4. Install mudguard with a #8 SEM screw at location A.

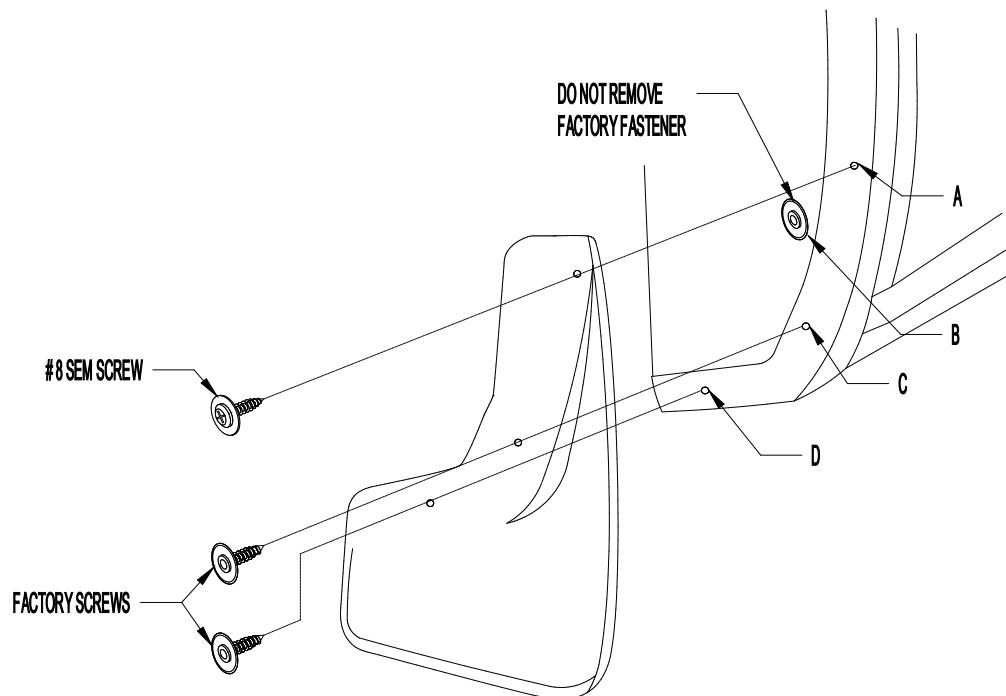**PAINTING INSTRUCTIONS**

**NOTE:** *If painting mud guards, perform a mud guard test fit to ensure correct fit and application prior to painting.*

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.

## GMC SIERRA REAR MUD GUARD - INSTALLATION INSTRUCTIONS

---

*Please read instructions thoroughly before installation.*

---

### Tools Required

- Phillips Screwdriver
- 1/8" Drill bit / Driver

### Package Contents

- Driver & passenger side rear mud guards
- #10 SEM SCREWS (Qty 6)
- Instruction sheet

---


### MUD GUARD INSTALLATION

---

**NOTE:** *It may be necessary to remove the wheels before mud guard installation.*

*Determine which mudguard you have by locating the part number molded in the mounting flange (5789 LH 5789 RH).*

1. Using the mudguard as a template, mark and drill an 1/8" hole at locations A, B and C
  2. Install #10 SEM screws at locations A, B and C.
- 

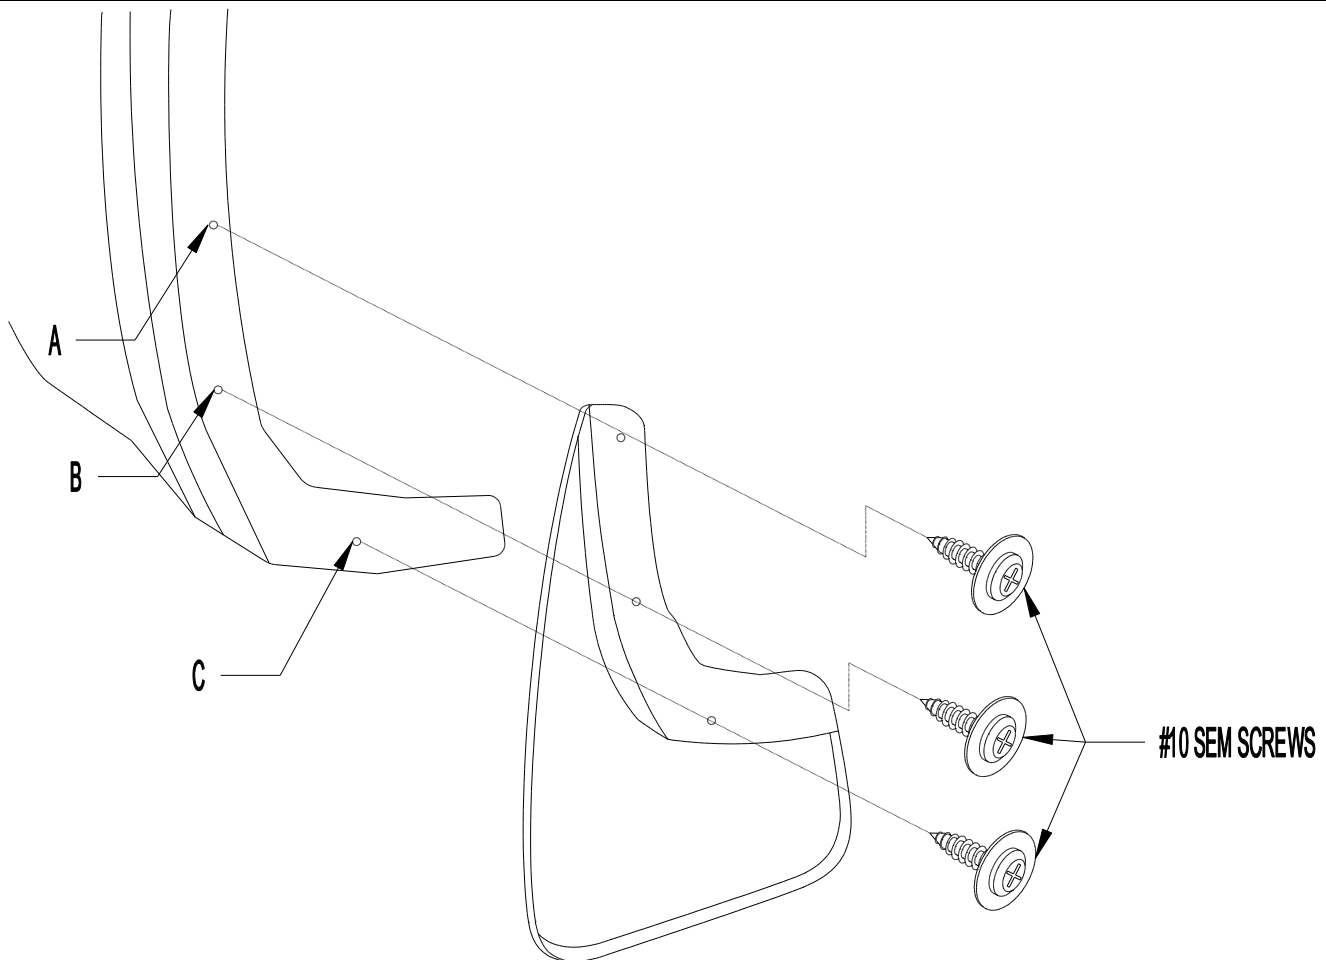

---

### PAINTING INSTRUCTIONS

1. Clean mud guard with soap and water to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.