



## FORD ESCAPE FRONT MUD GUARD INSTALLATION INSTRUCTIONS

*Please read instructions thoroughly before installation.*

### Tools Required

- Phillips Head Screwdriver / Drill Attachment
- Marking Utensil
- 1/8" Drill Bit


### Package Contents

- Driver & passenger side front mud guard
- Instruction sheet
- #10 SEM Screws (Qty 8)

**NOTE:** Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

2

1. Remove existing fasteners from location A and B. (DO NOT REMOVE PUSH IN FASTENER FROM LOCATION C)
2. Install mudguard up to vehicle and mark hole locations D, E, F, and G.
3. Drill an 1/8" hole into the fender cladding and liner
4. Install mudguard with #10 SEM screws at locations D, E, F, and G. (Check alignment before tightening)

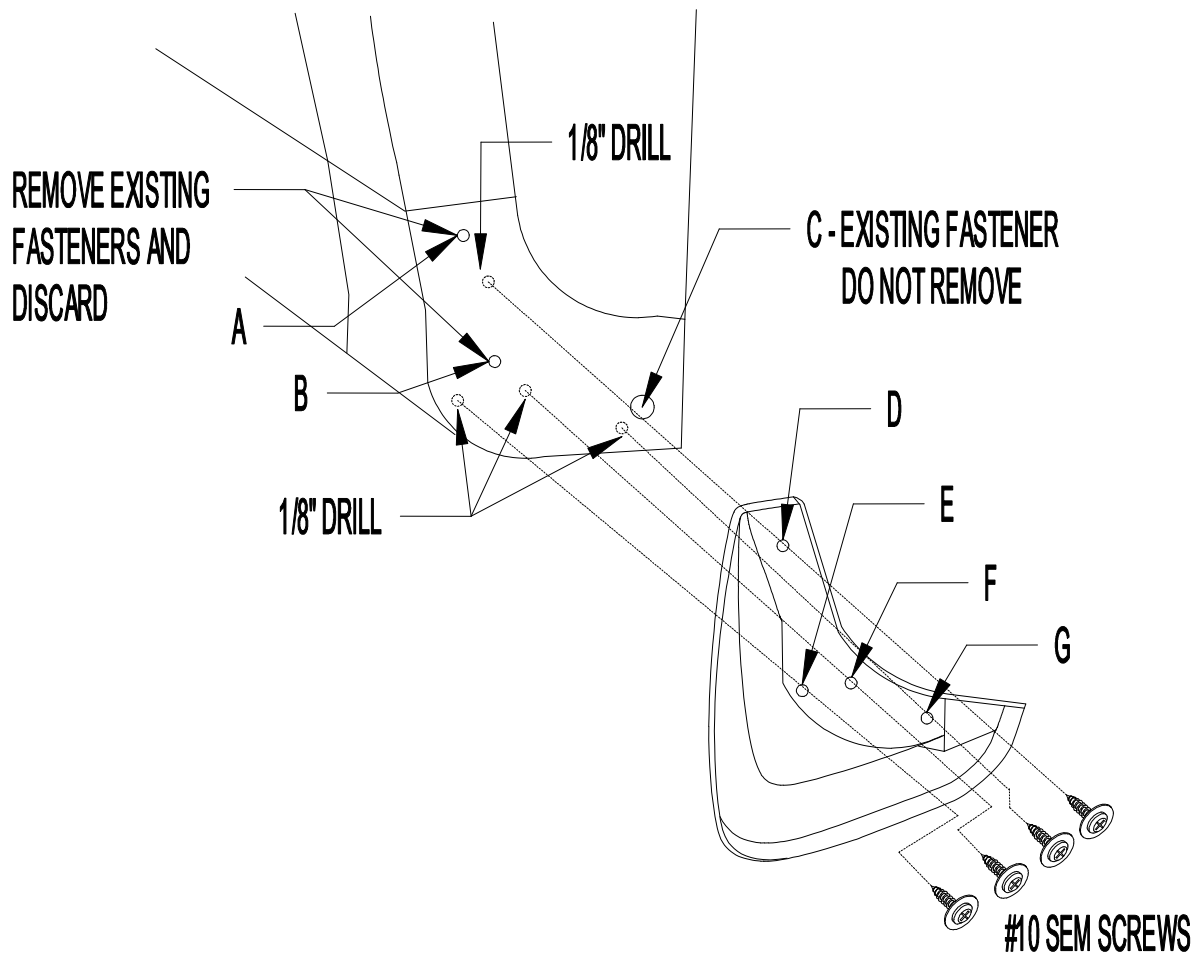

### PAINTING INSTRUCTIONS

**NOTE:** *If painting mud guards, perform a mud guard test fit to ensure correct fit and application prior to painting.*

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.