

JEEP GRAND CHEROKEE SUMMIT EDT. REAR MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required

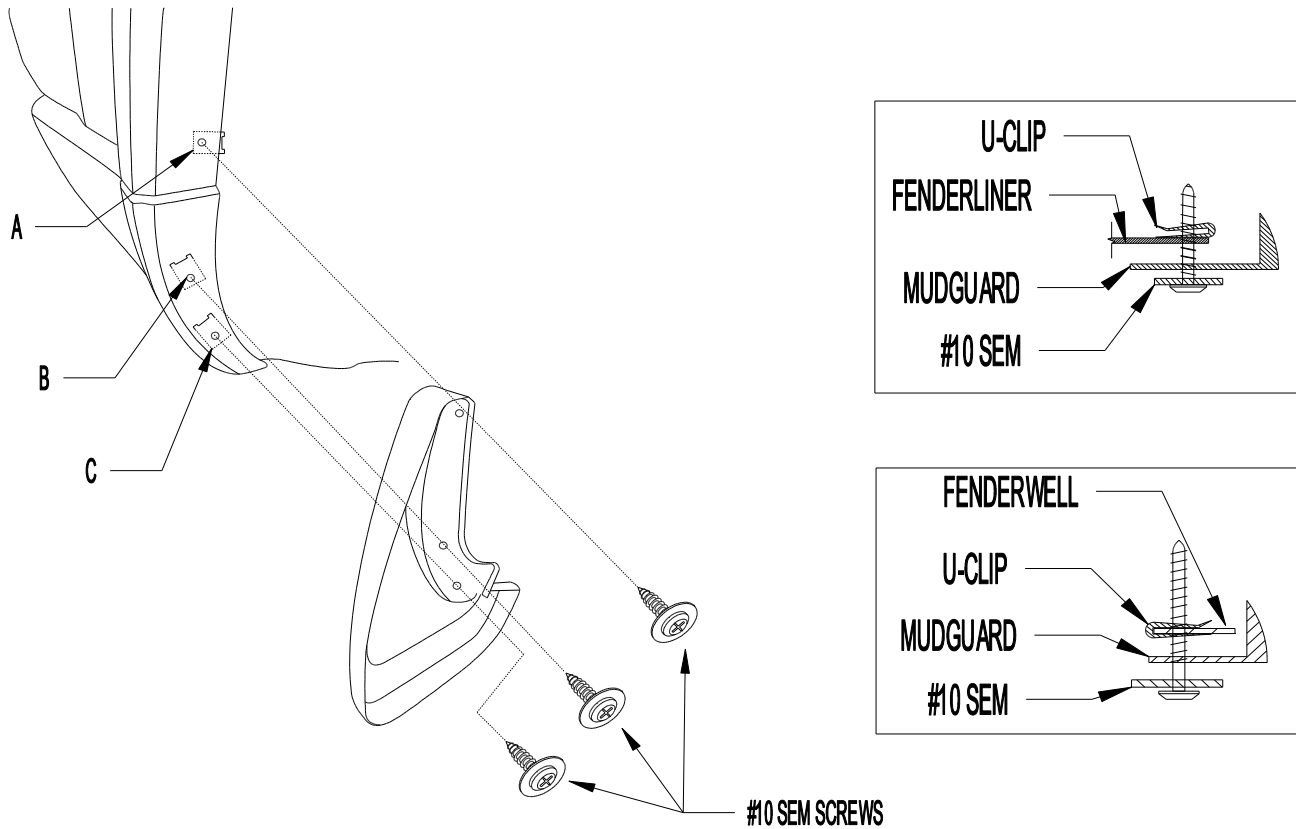
- Short Phillips screwdriver or drill attachment
- Side Cutters / Utility Knife

Package Contents

- Driver & passenger side rear mud guard
- #10 SEM screw (qty. 6)
- U-clip (qty. 6)
- Instruction sheet

NOTE: It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing fastener from location A, B and C.
3. Install U-clip at location A over existing hole.
4. Attach mud guard to rear fender with a #10 SEM screw thru mud guard at location A. Check fit and level before tightening.
5. Install #10 SEM screws at location B and C through mudguard and fender liner into a u-clip on the back side of the fender liner. Do not clip u-clip over fender liner.

**PAINTING INSTRUCTIONS**

NOTE: *If painting mud guards, perform a mud guard test fit to ensure correct fit and application prior to painting.*

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.