

THANK YOU FOR SELECTING A HUSKY FLOOR LINER




FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR DODGE RAM QUAD CAB SECOND SEAT FLOOR LINERS

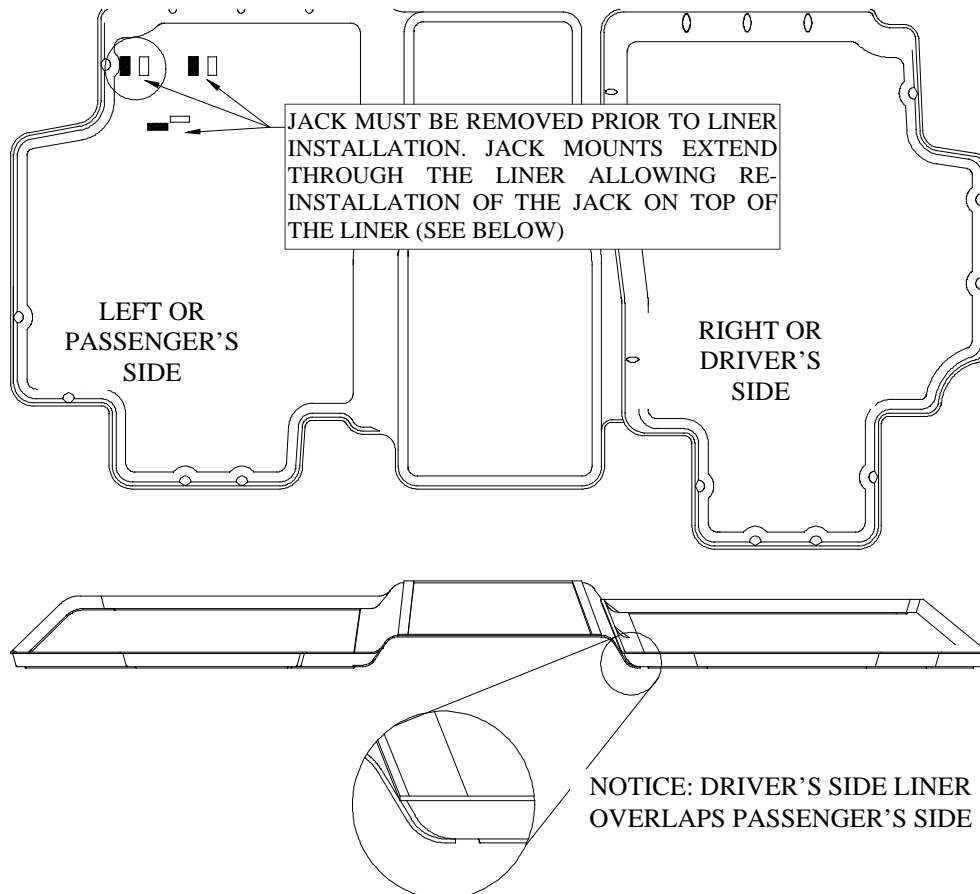

JACK LOCATION VARIES WITH THE PRODUCTION DATE OF THE VEHICLE. TO INSTALL YOUR LINER, FIRST FOLD UP THE REAR SEAT AND REMOVE THE JACK. TO DETERMINE WHICH SET OF RAISED JACK LOCATION BANDS TO SLIT, TAKE NOTICE OF THE LEFT UPPERMOST JACK HOLD DOWN MOUNT (CIRCLED ABOVE). IF THE MOUNT IS APPROXIMATELY (2) INCHES IN FROM THE EDGE OF THE CARPET, MAKE A SLIT ACROSS THE TOP OF THE (3) RAISED AREAS THAT APPEAR SHADED ON THE INSTRUCTION GUIDE AND PUSH THE JACK MOUNTS THROUGH. OTHERWISE, SLIT THE (3) UNSHADED RAISED AREAS SHOWN ON THE INSTRUCTION GUIDE. FOR VEHICLES EQUIPPED WITH THE UNDERSEAT STORAGE COMPARTMENT, SEE INSTRUCTIONS ON REVERSE SIDE.



REMOVE FRONT FASTENER FROM STORAGE TRAY AND LOOSEN REAR FASTENER (DRIVER'S SIDE)



ON THE PASSENGER'S SIDE, FIRST REMOVE THE JACK, THEN REPEAT REMOVAL/LOOSEN STEPS



THE STORAGE TRAY CAN NOW EASILY BE TILTED BACK AND YOUR HUSKY LINER INSTALLED



MAKE THE APPROPRIATE SLITS TO ALLOW THE JACK MOUNTS TO PASS THROUGH THE LINER



REPOSITION THE STORAGE TRAY AND RE-INSTALL AND RETIGHTEN FASTENERS



REPLACE JACK, STRAPPING IT SECURELY INTO PLACE