

THANK YOU FOR SELECTING A HUSKY FLOOR LINER




FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS


Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR JEEP WRANGLER SECOND SEAT FLOOR LINER

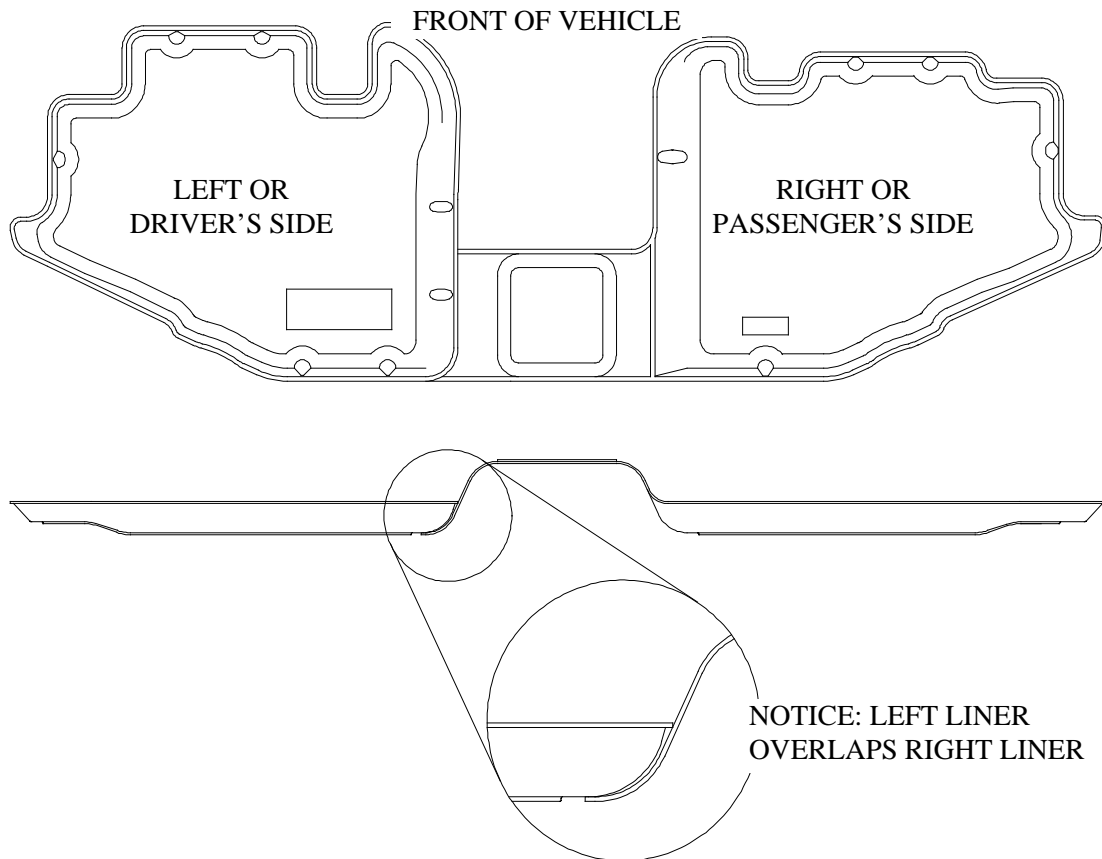

SOME 2000 MODEL YEAR WRANGLER'S HAVE A FULL CENTER CONSOLE THAT WILL INTERFERE WITH THE PORTION OF THE LINER DESIGNED TO COVER THE VEHICLE'S "HUMP" AREA. THIS PORTION CAN BE EASILY TRIMMED AWAY USING A UTILITY KNIFE OR HEAVY SHEARS. TRIM ALONG THE STEP MOLDED INTO THE PASSENGER SIDE "HUMP" WALL LEAVING THE TOP OF THE STEP AS A "LIP." SEE DIAGRAM AT RIGHT. PHOTOS OF A TRIMMED PART ARE ON SHOWN ON THE BACK OF THIS INSTRUCTION SHEET.

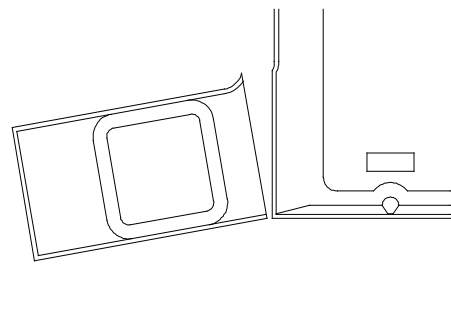

PHOTOS OF PART #6173 TRIMMED FOR USE WITH THE FACTORY FULL LENGTH CENTER CONSOLE



TRIM ALONG INTERSECTION OF THE “STEP” IN THE PART AND THE PORTION OF THE LINER THAT CONTINUES OVER THE HUMP. THIS WILL LEAVE A “LIP” ON THE TRIMMED LINER AS SHOWN IN THE PHOTO BELOW.

