

HUSKYLINERS[®]


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater[®] Floor Liner from Winfield Consumer Products. Your new center hump liner is custom molded to fit your Ford Super Duty Super Cab or Crew Cab truck. The liner is made to take the place of your factory floor mat. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR SUPER DUTY FORD F250/F350/F450 SUPER CAB & CREW CAB CENTER HUMP LINER

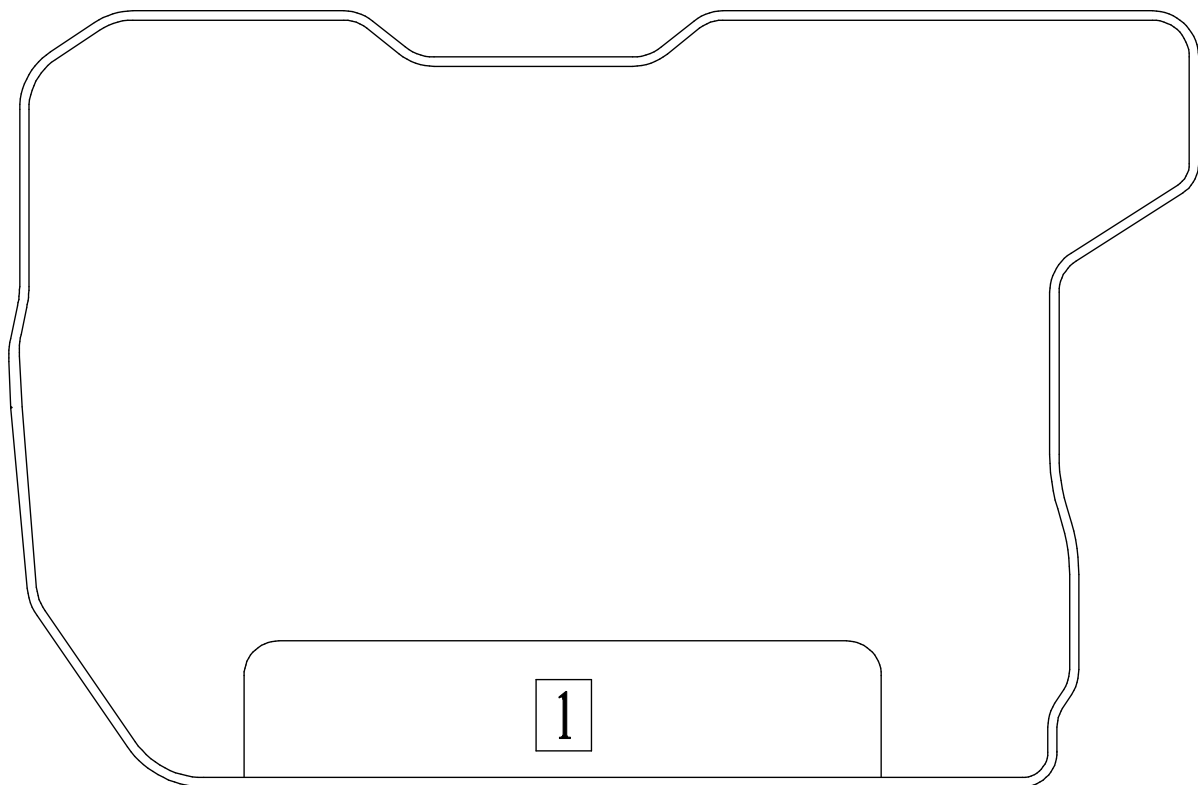

IF YOUR TRUCK HAS FRONT ROW BUCKET SEATS WITH A FACTORY CONSOLE BETWEEN THEM, YOU MAY NEED TO TRIM YOUR LINER TO ACCOMMODATE THE CONSOLE. TO TRIM, SIMPLY USE THE RECESSED STEP IN THE PART AS YOUR TRIM GUIDE AND REMOVE THE LOWER PORTION OF THE LINER. THE DOTTED LINE ABOVE APPROXIMATES THE STEP MOLDED INTO THE PART.