



WEATHERBEATER™ FLOOR LINERS

PT #9406

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your Ford Super Duty Crew Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F250/F350/F450 CREW CAB FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR SUPER DUTY FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED. TAKE CARE THAT DRIVER'S SIDE LINER IS SECURELY ATTACHED TO THE FACTORY FLOOR MAT POSTS.




WEATHERBEATER™ FLOOR LINERS CARE AND USE INSTRUCTIONS

PT #9406

Thank you for selecting a WeatherBeater™ Floor Liner from Husky Liners. Your new second seat liner is custom molded to fit your Ford Super Duty Crew Cab truck. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD SUPER DUTY CREW TRUCK SECOND SEAT FLOOR LINER

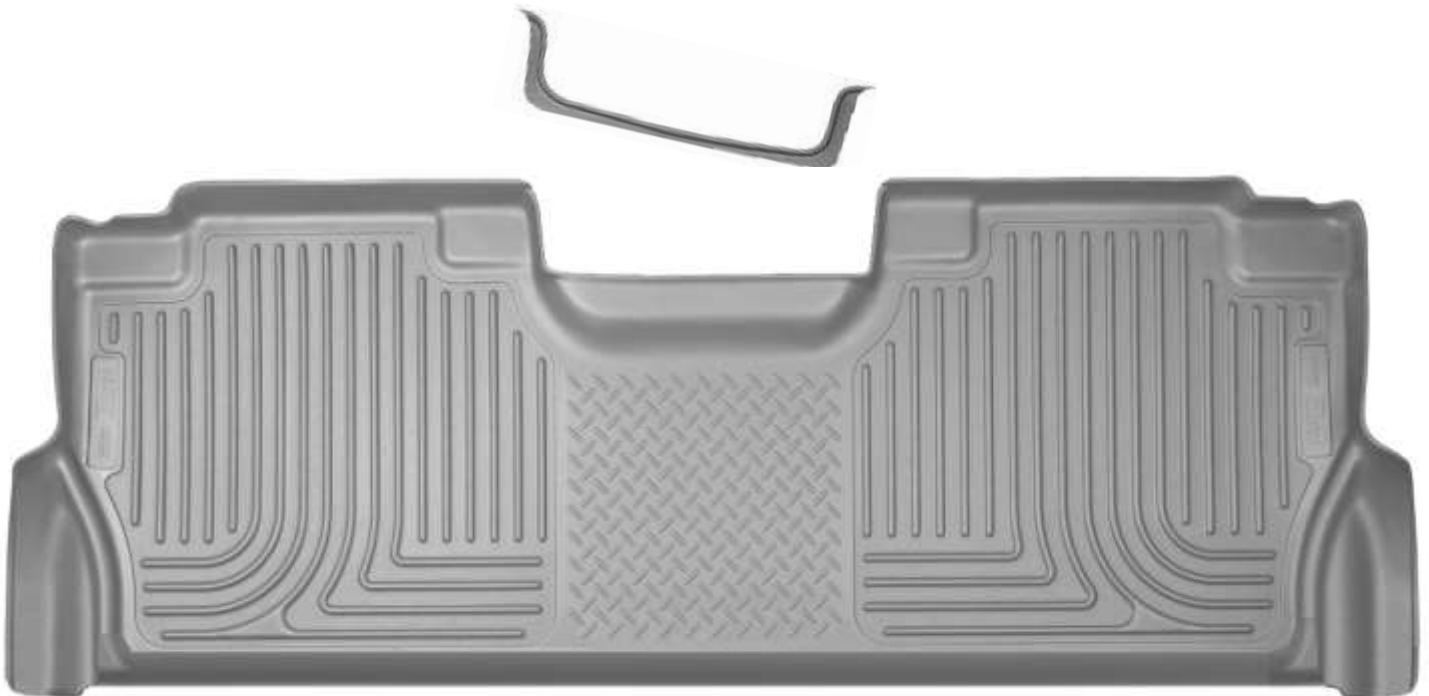

TO EASE INSTALLATION OF YOUR NEW CREW CAB LINER, MOVE BOTH FRONT SEATS TO THEIR MOST FORWARD POSITION. ONCE LINER IS INSTALLED, REPOSITION THE SEATS AS DESIRED.

IF YOUR TRUCK IS EQUIPPED WITH A 40/20/40 SPLIT BENCH FRONT SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACHIEVE THE PROPER FIT. SEE IMAGE ON BACK FOR TRIMMING DETAILS. TRIM LINER LEAVING AN APPROXIMATE ¼" LIP AROUND THE CUPHOLDER PROFILE AS SHOWN IN THE IMAGES BELOW. A MOLDED IN TRIM GUIDES PROVIDES ALIGNMENT FOR THE TRIM. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.



WEATHERBEATER™ FLOOR LINERS

PT #9406

TRIM YOUR LINER FOR THE SPLIT BENCH SEAT BY FOLLOWING THE TRIM GROOVE MOLDED INTO THE PART. THIS GROOVE IS HIGHLIGHTED BY THE ARROWS IN THE IMAGES BELOW. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.



Learn more about car and truck floor mats we have.