



WEATHERBEATER™ FLOOR LINERS


PT #9413

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your Ram 2500/3500 Mega Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR RAM 2500/3500 MEGA CAB TRUCK FRONT FLOOR LINERS

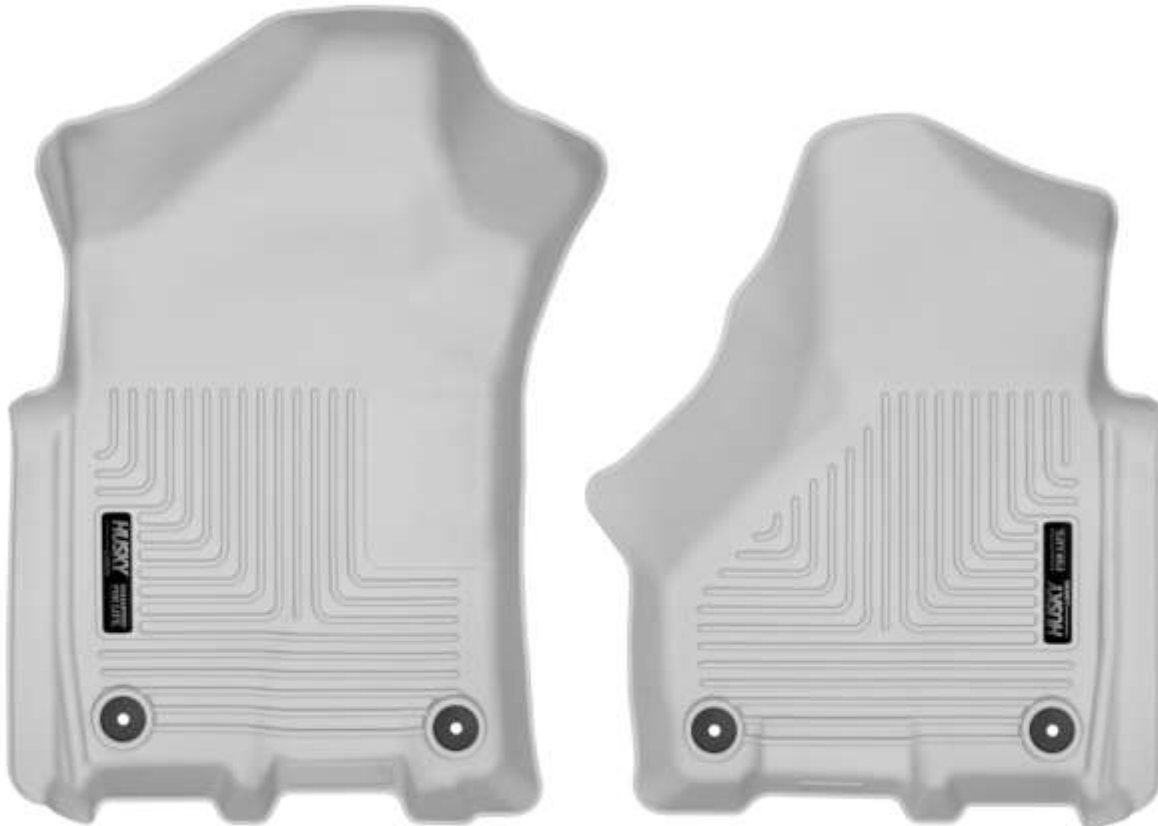

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS TO THEIR MOST REARWARD POSITION. WITH THIS DONE, INSTALL THE LINERS AS SHOWN ABOVE. THE LINERS SNAP OVER / ATTACH TO THE FACTORY MAT RETAINERS. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.



WEATHERBEATER™ FLOOR LINERS

PT #9413

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new rear floor liner is custom molded to fit your Ram 2500/3500 Mega Cab truck. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR RAM 2500/3500 MEGA CAB TRUCK 2ND SEAT FLOOR LINER

FRONT OF
VEHICLE



TO EASE INSTALLATION OF YOUR RAM MEGA CAB SECOND SEAT LINER, MOVE BOTH FRONT ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL YOUR LINER, POSITIONING IT AS SHOWN IN THE IMAGE ABOVE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.


IF YOUR RAM IS EQUIPPED WITH FRONT ROW BENCH SEATS, THE LINER WILL TUCK UNDER THE AIR VENTS THAT EXTEND OUT ONTO THE CENTER HUMP AREA IN THE BACK SEAT FLOOR. THE AREA THAT TUCKS UNDER THE VENTS CAN ALSO BE TRIMMED AWAY IF PREFERRED. TRIM INSTRUCTIONS ARE INCLUDED ON THE BACK OF THIS PAGE.



WEATHERBEATER™ FLOOR LINERS

PT #9413

RAM TRUCKS WITH FRONT ROW BENCH SEATING HAVE AIR DUCTS THAT EXTEND OUT ONTO THE CENTER HUMP FLOOR PAN IN THE REAR SEAT. YOUR HUSKY LINER WILL EASILY TUCK UNDER THE AIR DUCTS. HOWEVER, TO MAKE INSTALLATION / REMOVAL OF THE LINER EASIER, YOU MAY DECIDE TO TRIM AWAY THE AREA OF THE LINER THAT TUCKS UNDER THE DUCTING. TO TRIM, A TRIM GROOVE IS MOLDED INTO THE LINER TO AID TRIMMING. THE GROOVE IS LOCATED ON THE OUTER EDGE OF THE RAISE RIB ON THE CENTER HUMP OF THE LINER.

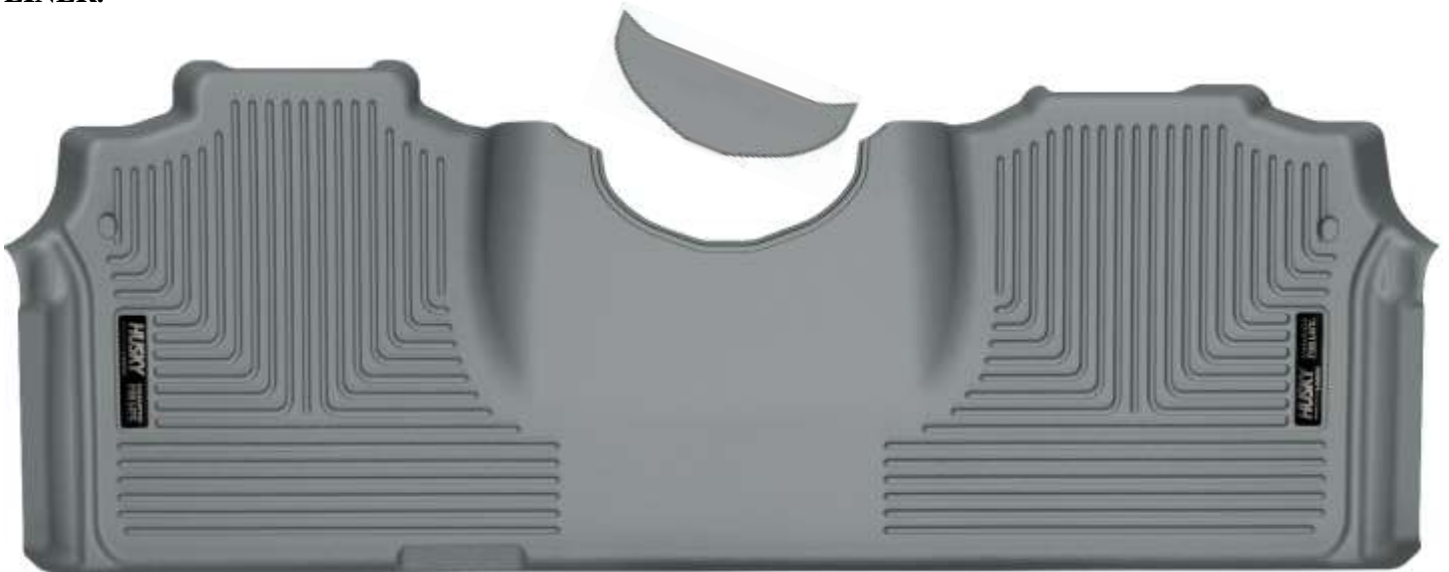

LINER TUCKED UNDER THE AIR VENT ASSEMBLY IN THE 2ND SEAT FLOOR PAN.



Learn more about floor mats on our website.