

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Audi Q7. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FOR YOUR AUDI Q7 FRONT WeatherBeater® FLOOR LINERS



LEFT OR DRIVER'S SIDE

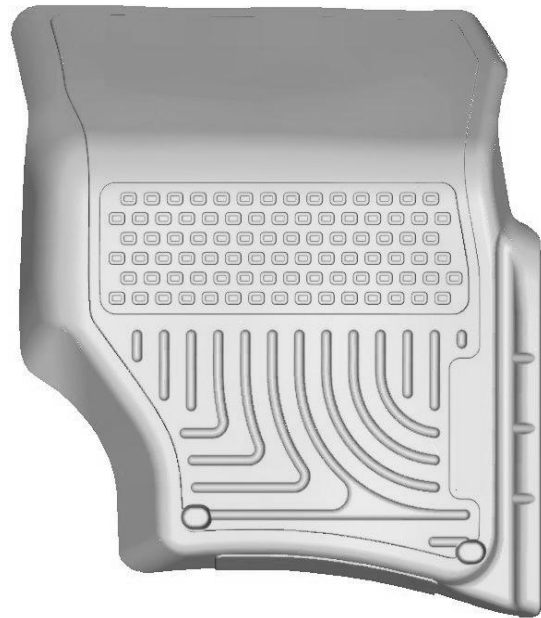

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR AUDI Q7 FRONT FLOOR LINERS, MOVE THE FRONT SEATS TO THEIR REAR MOST POSITION. WITH THIS DONE, INSTALL THE LINERS AS SHOWN ABOVE AND REPOSITION YOUR FRONT SEATS AS DESIRED. NOTE THAT THE PASSENGER SIDE LINER INCLUDES A TRIMMABLE SECTION ALONG THE BACK WALL THAT, WHEN TRIMMED, WILL ALLOW THE DRAWER UNDER THE PASSENGER SEAT TO BE OPENED WITH THE LINER IN PLACE. TO TRIM, SIMPLY REMOVE THE LOWERED SECTION OF THE LINER USING THE OFFSET EDGE AS YOUR TRIMMING GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Audi Q7. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR AUDI Q7 REAR SEAT WeatherBeater® FLOOR LINERS

FRONT OF VEHICLE



TO EASE INSTALLATION OF YOUR AUDI Q7 SECOND SEAT LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL THE LINERS IN YOUR VEHICLE. ONCE YOUR LINERS ARE IN PLACE, REPOSITION THE FRONT SEATS AS NEEDED.