

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Dodge Charger. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR ALL-WHEEL DRIVE DODGE CHARGER & CHRYSLER 300 WeatherBeater® FRONT [FLOOR LINERS](#)

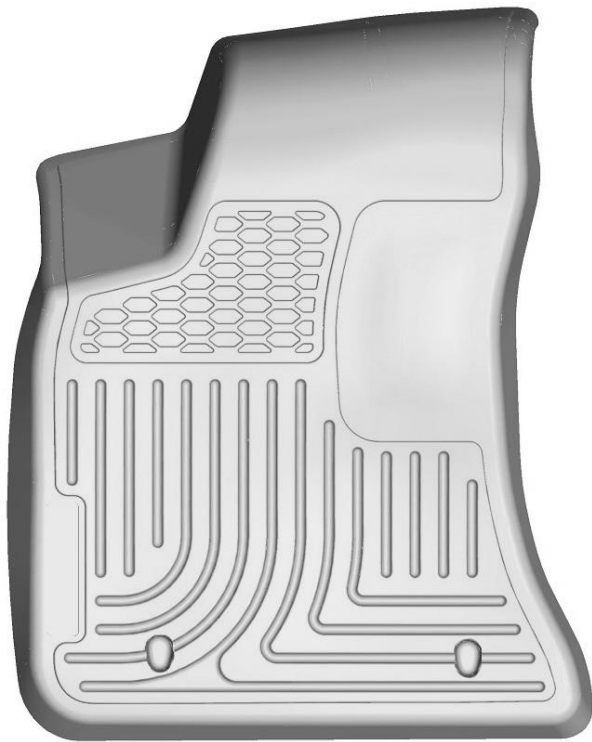

LEFT OR DRIVER'S SIDE

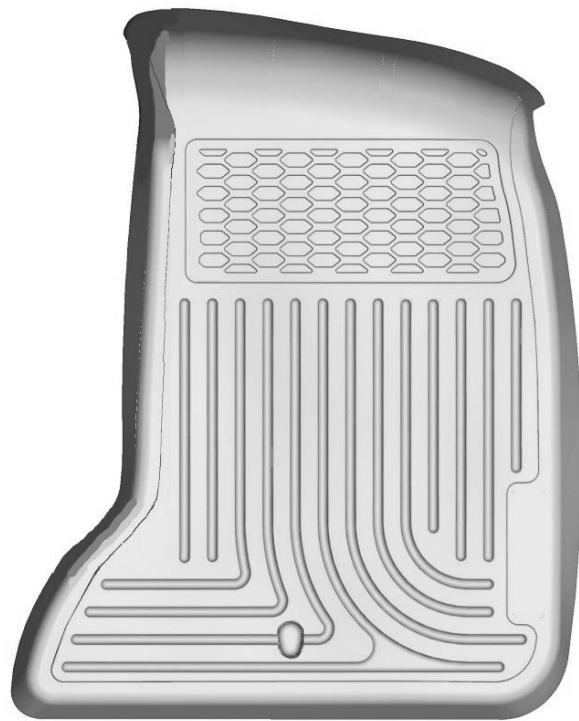

RIGHT OR PASSENGER'S SIDE

LINERS FIT ALL-WHEEL DRIVE MODEL CHARGER / 300 VEHICLES ONLY. TO EASE INSTALLATION OF YOUR FRONT FLOOR LINERS, MOVE THE FRONT SEATS TO THEIR REAR MOST POSITION. ONCE YOU HAVE INSTALLED THE LINERS, REPOSITION YOUR FRONT SEATS AS NEEDED.

HUSKYLINERS®

weatherBEATER


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Dodge Charger. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.


Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR DODGE CHARGER & CHRYSLER 300 REAR SEAT WeatherBeater® FLOOR LINERS

FRONT OF
VEHICLE

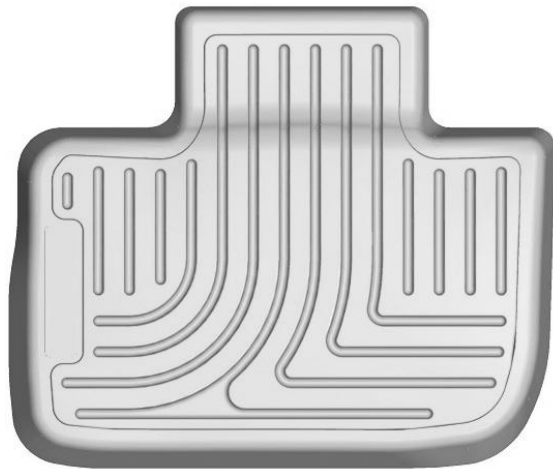

LEFT OR DRIVER'S SIDE

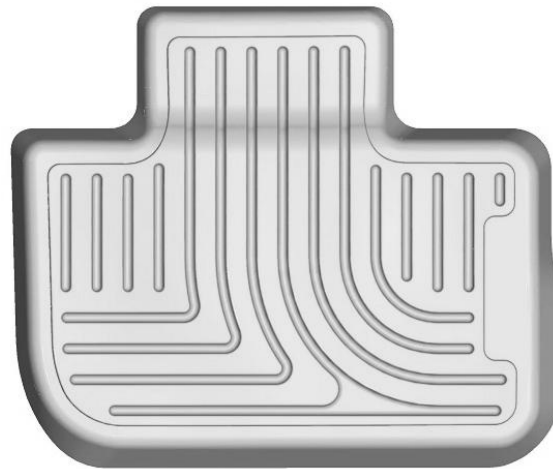

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR CHARGER / 300 SECOND SEAT LINERS, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL LINERS IN VEHICLE. ONCE LINERS ARE IN PLACE, REPOSITION THE FRONT SEATS AS NEEDED.