

# **HUSKY** **Weather** **BEATER**<sup>™</sup> **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater<sup>™</sup> Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your vehicle. The liners are made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.*** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR CADILLAC ESCALADE ESV / CHEVROLET SUBURBAN / GMC YUKON XL & YUKON XL DENALI WeatherBeater<sup>™</sup> FRONT FLOOR LINERS

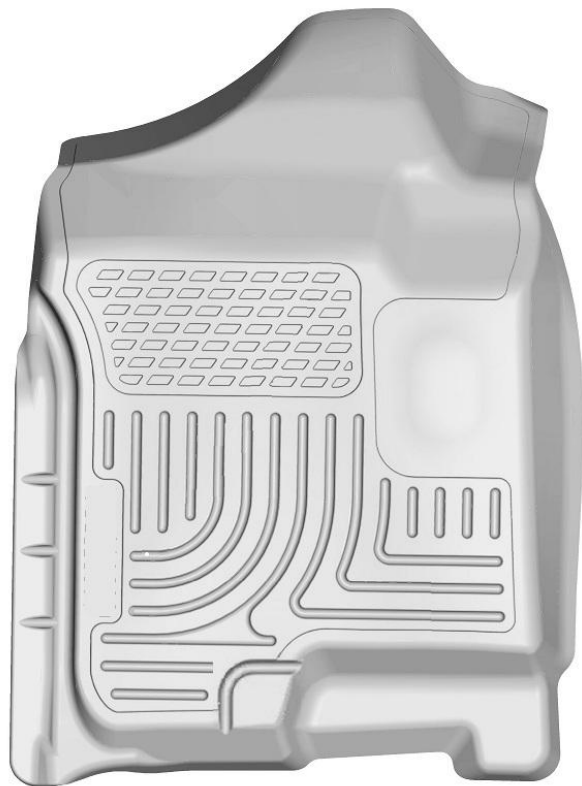

LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

EASE INSTALLATION OF YOUR FRONT FLOOR LINERS, FIRST MOVE THE FRONT ROW SEATS TO THEIR MOST REARWARD POSITION. WITH THIS DONE, INSTALL THE LINERS ORIENTED AS SHOWN ABOVE AND THEN REPOSITION SEATS AS DESIRED.

# **HUSKY** **Weather**BEATER™ **Custom Vehicle Floor Protection**

## CARE AND USE INSTRUCTIONS


---

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your vehicle. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR CADILLAC ESCALADE ESV / CHEVROLET SUBURBAN / GMC YUKON XL & YUKON XL DENALI WeatherBeater™ REAR SEAT FLOOR LINER

FRONT OF VEHICLE

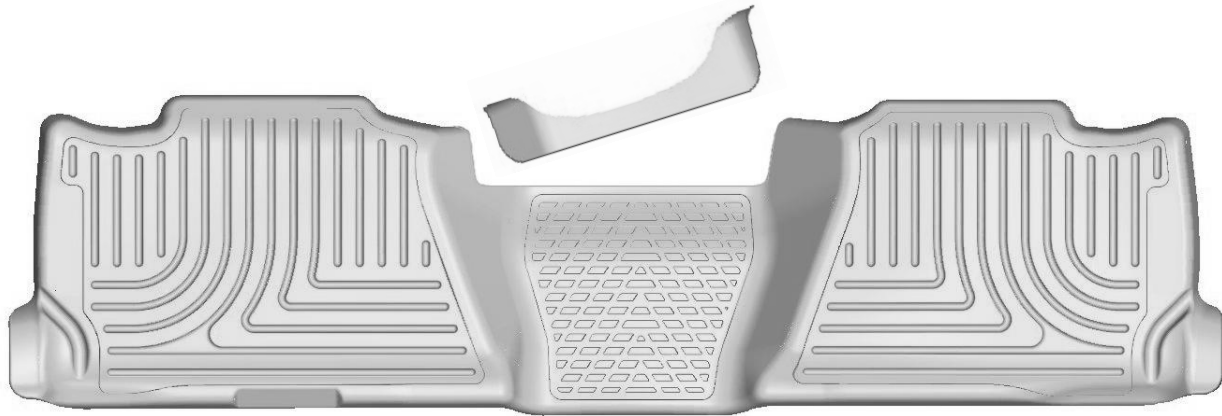

TO EASE INSTALLATION OF YOUR SECOND SEAT LINER, FIRST MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL THE LINER IN YOUR VEHICLE AS SHOWN IN THE IMAGE ABOVE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.

NOTE THAT IF YOU HAVE A CADILLAC ESCALADE ESV, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE. TO TRIM, SIMPLY FOLLOW THE MOLDED IN TRIM GUIDE AND REMOVE THE PORTION OF THE LINER ON THE FRONT EDGE OF THE TRANSMISSION TUNNEL AS SHOWN ABOVE.

SUBURBAN AND YUKON XL OWNERS WITH FRONT ROW BENCH SEATS THAT INCLUDE A REAR SEAT CUP HOLDER LOCATED ON THE BACK CENTER PORTION OF THE BENCH SEAT WILL ALSO NEED TO TRIM THEIR LINER AS SHOWN ABOVE.

PLEASE FIND IN YOUR PACKAGING A COMPONENT BAG THAT INCLUDES A FASTENER DESIGNED TO AID IN SECURING YOUR DRIVER'S SIDE LINER IN POSITION. REMOVE THE FASTENER FROM THE BAG AND UNSCREW THE CAP FROM THE BASE (SEE IMAGE 1 BELOW). NEXT INSERT THE THREADED PORTION OF THE BASE INTO THE HOLE IN THE DRIVER'S SIDE LINER, INSERTING IT FROM THE BACK SIDE OF THE LINER (SEE IMAGE 2 BELOW). WITH THIS DONE INSTALL THE LINER IN THE VEHICLE AND, USING A COIN, SCREWDRIVER OR SIMILAR TOOL, SCREW THE BASE OF THE FASTENER INTO THE CARPETING (SEE IMAGE 3). LASTLY, AS SHOWN IN IMAGE 4, INSTALL THE CAP ONTO THE BASE. TIGHTEN UNTIL THE CAP MEETS RESISTANCE, DO NOT OVER TIGHTEN.

