

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford F250/F350/F450 Super Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY SUPER CAB TRUCK FRONT FLOOR LINERS

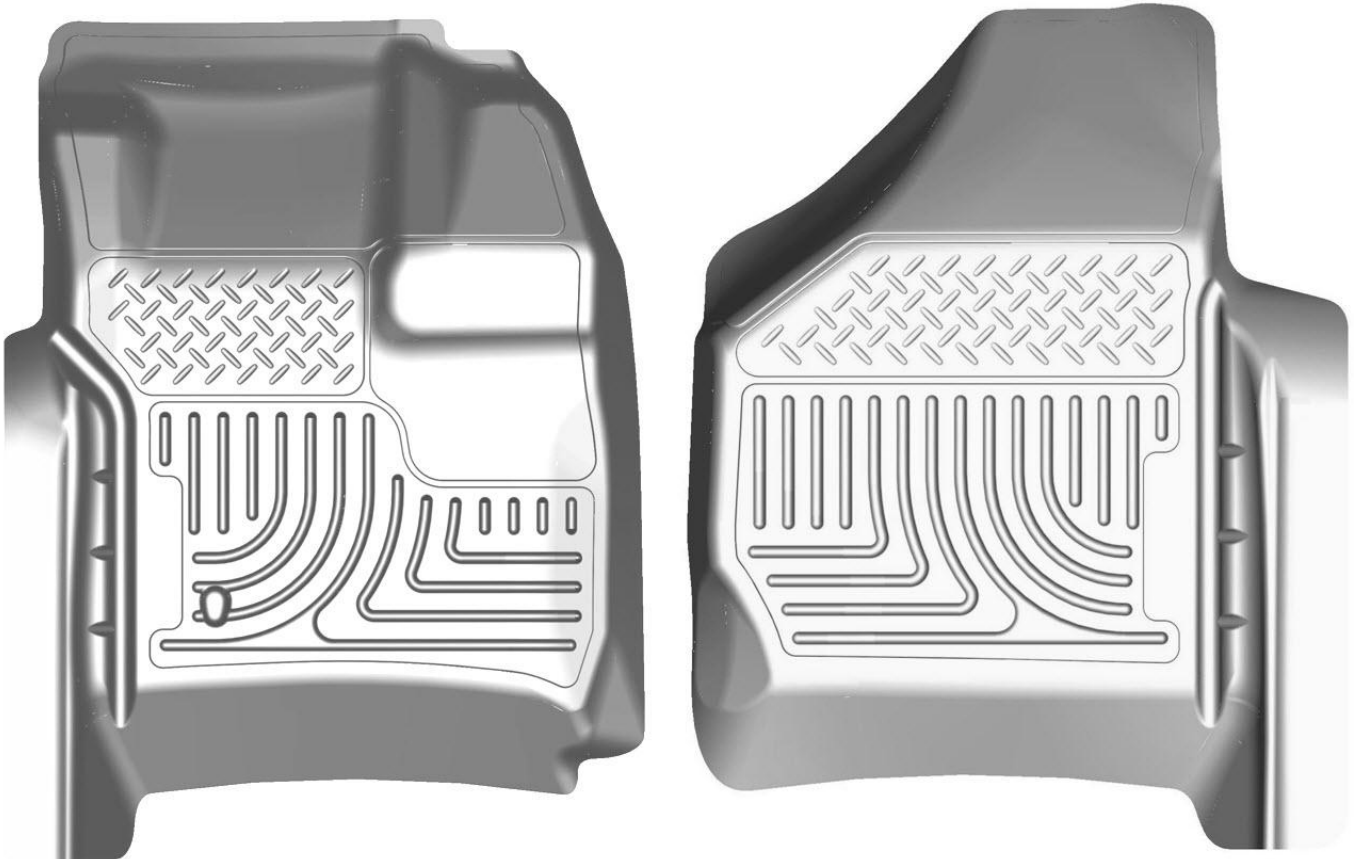

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS ALL THE WAY BACK SO AS TO ALLOW THE MOST LEG ROOM. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED.

HUSKYLINERS®

weatherBEATER


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Ford F250/F350/F450 Super Cab truck. The liner is made to take the place of your factory floor mat. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY SUPER CAB TRUCK 2nd SEAT FLOOR LINER

FRONT OF VEHICLE

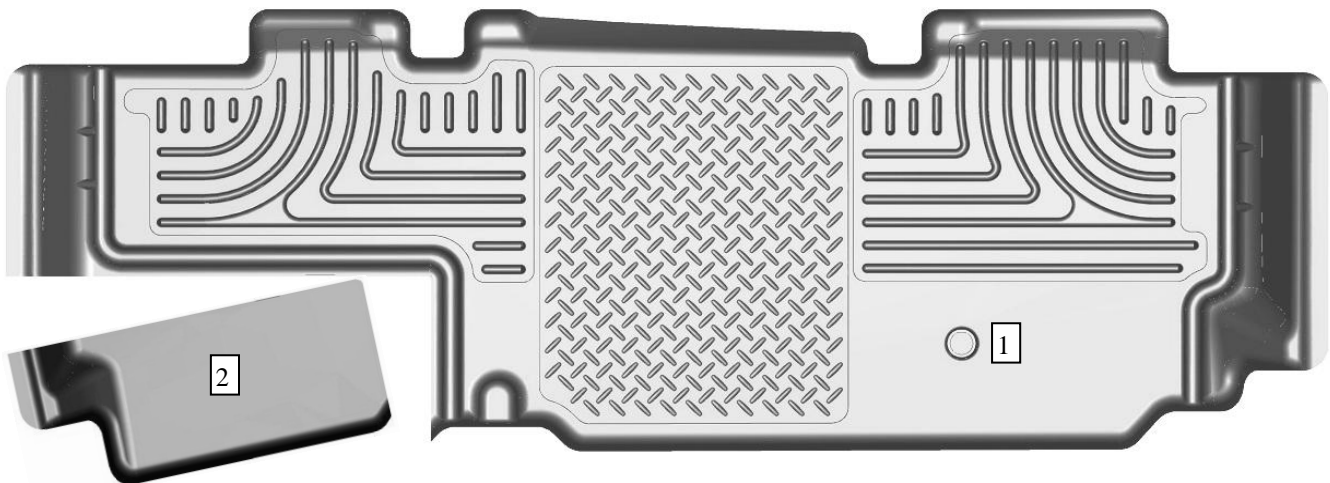

TO EASE INSTALLATION OF YOUR SECOND SEAT SUPER CAB FLOOR LINER, FIRST MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE THEN REPOSITION THE FRONT SEATS AS DESIRED.

IF YOUR TRUCK HAS THE FACTORY JACK TOOL POUCH LOCATED UNDER THE REAR PASSENGER SEAT, YOUR LINER CAN BE TRIMMED TO ALLOW THE TOOLS TO MOUNT ON TOP OF THE INSTALLED LINER. TO DO THIS, SIMPLY TRIM AWAY THE RECESSED MATERIAL FROM THE TOP OF THE RAISED LOCATING BOSS MOLDED INTO THE LINER (SEE AREA "1" ABOVE AND ATTACHED PHOTOS ON THE FOLLOWING PAGE). NEXT, REMOVE THE JACK TOOL POUCH ASSEMBLY BY REMOVING THE WING NUT RETAINING STUD. WITH THIS DONE, INSTALL YOUR LINER AND REPLACE THE TOOL POUCH ASSEMBLY, SECURING IT IN PLACE WITH THE ORIGINAL BRACKETS AND WING NUT STUD.



PART #9839 SHOWN TRIMMED FOR THE INSTALLATION OF THE JACK TOOL POUCH ON TOP OF THE LINER. TO TRIM, SIMPLY REMOVE THE MATERIAL FROM THE TOP OF THE RAISED BOSS AS SHOWN. IF YOU DO NOT HAVE A JACK TOOL POUCH OR PREFER TO NOT TO TRIM THE LINER, SIMPLY INSTALL THE LINER AS IT IS BOXED.

IF YOUR TRUCK IS HAS THE OPTIONAL AUDIOPHILE STEREO SYSTEM, THERE IS A FACTORY INSTALLED SUB-WOOFER MOUNTED UNDER THE REAR DRIVER'S SIDE SEAT. YOUR LINER WILL NEED TO BE TRIMMED TO ACCOMMODATE THIS FEATURE. TO TRIM, SIMPLY USE THE MOLDED IN STEP IN YOUR LINER THAT RUNS ALONG THE EDGE OF THE RAISED RETAINING RIB AS YOUR GUIDE AND REMOVE THE SECTION OF THE LINER THAT COVERS THE AREA OCCUPIED BY THE SUB-WOOFER (SEE AREA "2" ON THE SKETCH ON PAGE 2 AND THE ATTACHED PHOTO ON THE BACK OF THIS PAGE). A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

PART #9839 SHOWN TRIMMED FOR THE OPTIONAL FACTORY SUBWOOFER. TO TRIM, REMOVE THE SECTION OF THE LINER THAT CORRESPONDS WITH THE PLACEMENT OF THE SUBWOOFER AS SHOWN ABOVE. USE THE MOLDED IN STEP IN THE LINER AS YOUR TRIMMING GUIDE.

