


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit the Toyota Corolla, Toyota Matrix and Pontiac Vibe. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA COROLLA / TOYOTA MATRIX & PONTIAC VIBE FRONT LINERS-MODELS WITH FRONT WHEEL DRIVE & AUTOMATIC TRANSMISSION ONLY

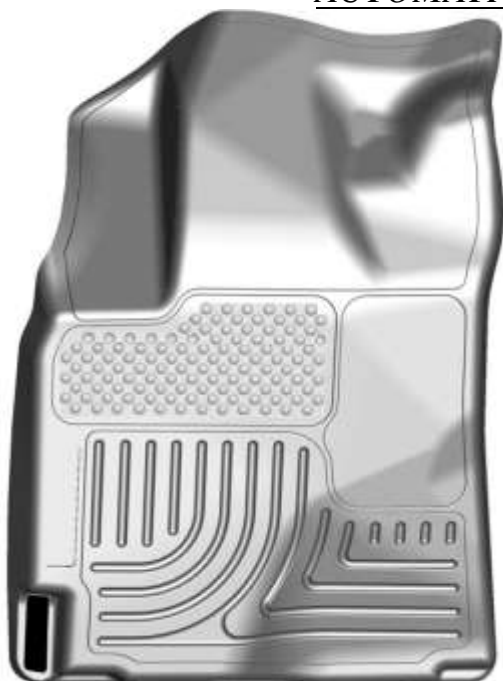

LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FRONT FLOOR LINERS, MOVE THE FRONT SEATS TO THEIR REAR MOST POSITION. WITH THIS DONE, REMOVE THE FACTORY CARPET HOOKS. REMOVING THE HOOKS WILL ALLOW YOUR LINER TO LAY COMPLETELY FLAT. TO REMOVE THE HOOKS, APPLY FIRM AND EVEN PRESSURE WHILE LIFTING THE END OF THE HOOK STRAIGHT UP. WITH THE HOOKS REMOVED, INSTALL THE LINERS AND REPOSITION SEATS AS DESIRED. SAVE THE HOOKS AND REINSTALL THEM SHOULD YOU REMOVE THE LINERS.

AS IT IS BOXED, YOUR DRIVER'S SIDE LINER COVERS THE FUEL DOOR RELEASE LEVER. TO ACCESS THE RELEASE LEVER YOU CAN SIMPLY JUST LIFT UP THE LINER, OR, YOU CAN TRIM AWAY THE LOWERED AREA ON THE LINER LOCATED DIRECTLY ABOVE THE RELEASE LEVER. TO TRIM, USE THE EDGES OF THE RECESSED AREA AS A GUIDE. THE DIAGRAM ABOVE SHOWS THE AREA DARKENED.

NOTE TO COROLLA OWNERS: IF YOUR COROLLA DOES NOT HAVE THE FACTORY "ALL-WEATHER GUARD PACKAGE", THE LINERS WILL NOT FIT YOUR VEHICLE CORRECTLY. THE ALL-WEATHER PACKAGE INCLUDES DUCT WORK THAT RUNS UNDER THE FRONT CARPET. PLEASE SEE THE NEXT PAGE FOR MORE INFORMATION.

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Toyota Corolla, Toyota Matrix and Pontiac Vibe. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA COROLLA / MATRIX & PONTIAC VIBEREAR SEAT WeatherBeater® FLOOR LINERS

FRONT OF VEHICLE

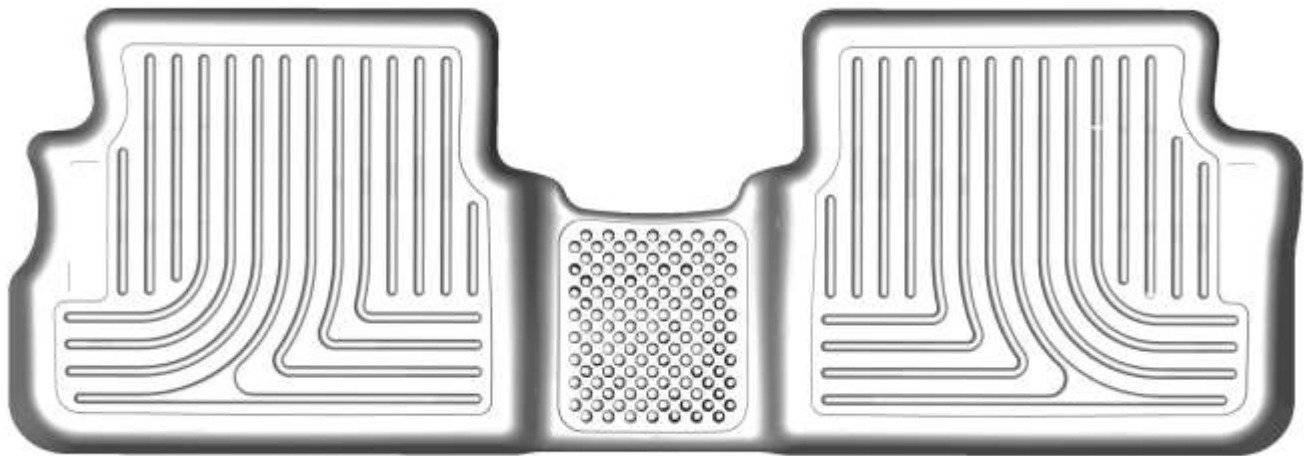

TO EASE INSTALLATION OF YOUR COROLLA / MATRIX / VIBE SECOND SEAT LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL LINER IN VEHICLE. ONCE LINER IS IN PLACE, REPOSITION THE FRONT SEATS AS NEEDED.

THE FACTORY “ALL-WEATHER GUARD PACKAGE” INCLUDES DUCT WORK UNDER THE FRONT ROW CARPET THAT ALLOWS AIR TO BE DIRECTED TO THE SECOND ROW SEATING AREAS. THE ADDITION OF THE DUCT WORK ADDS RAISED AREAS IN THE CARPET THAT OUR FLOOR LINERS (#9853) ACCOMMODATE (SEE CIRCLED AREAS BELOW). IF YOUR VEHICLE DOES NOT HAVE THIS DUCT WORK, THE FLOOR PANS ARE FLAT AND IN THE CIRCLED AREAS AND PART #9853 WILL NOT FIT CORRECTLY.

