


HUSKY **Weather**BEATER™ **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford F250 or F350 Super Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY SUPER CAB TRUCK FRONT FLOOR LINERS

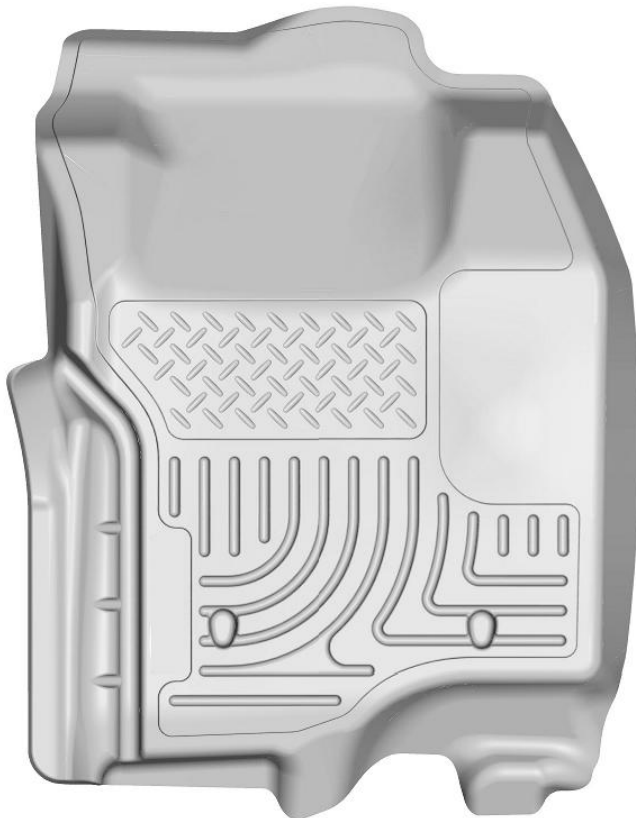

LEFT OR DRIVER'S SIDE

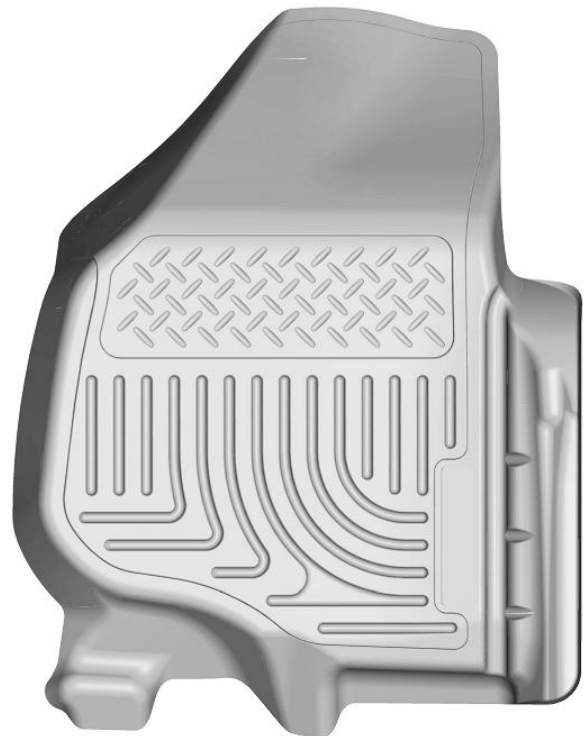

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS ALL THE WAY BACK SO AS TO ALLOW THE MOST LEG ROOM. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED.

NOTE TO 2012 SUPER DUTY OWNERS--DURING A MID-YEAR CHANGE FORD ADDED A DRIVER'S SIDE FOOT REST ALONGSIDE THE KICK PANEL ON 2012 SUPER DUTY'S. PART #9872 WILL NOT FIT TRUCKS WITH THIS FOOT REST. PLEASE SEE THE NEXT PAGE FOR MORE DATA REGARDING THIS CHANGE.

HUSKY **Weather** **BEATER**[™] **Custom Vehicle Floor Protection**


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Ford F250 or F350 Super Cab truck. The liner is made to take the place of your factory floor mat. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY SUPER CAB TRUCK 2nd SEAT FLOOR LINER


FRONT OF
VEHICLE

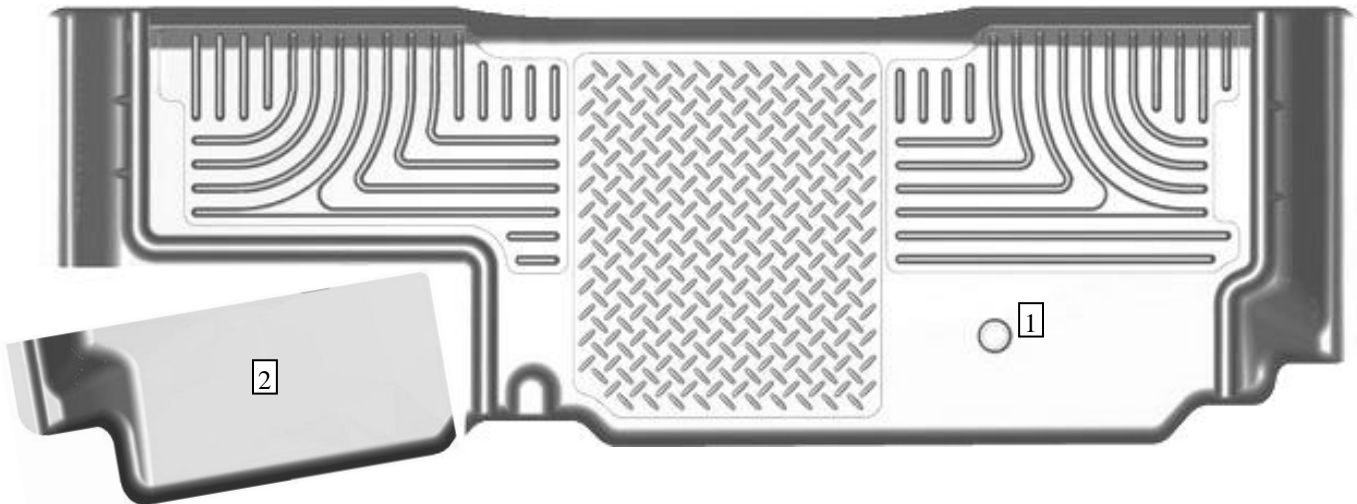


TO EASE INSTALLATION OF YOUR REAR SEAT SUPER CAB FLOOR LINER, FIRST MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT THE LINER IN YOUR VEHICLE THEN REPOSITION THE FRONT SEATS AS DESIRED.

IF YOUR TRUCK HAS THE FACTORY JACK TOOL POUCH LOCATED UNDER THE REAR PASSENGER SEAT, YOUR LINER CAN EASILY BE TRIMMED TO ALLOW THE TOOLS TO MOUNT ON TOP OF THE INSTALLED LINER. TO DO THIS, SIMPLY TRIM AWAY THE RECESSED MATERIAL FROM THE TOP OF THE RAISED LOCATING BOSS MOLDED INTO THE LINER (SEE AREA "1" ABOVE AND ATTACHED PHOTOS ON THE FOLLOWING PAGE). NEXT, REMOVE THE JACK TOOL POUCH ASSEMBLY BY REMOVING THE WING NUT RETAINING STUD. WITH THIS DONE, INSTALL YOUR LINER AND REPLACE THE TOOL POUCH ASSEMBLY, SECURING IT IN PLACE WITH THE ORIGINAL BRACKETS AND WING NUT STUD.

IF YOUR TRUCK HAS A FACTORY SUBWOOFER UNDER THE REAR DRIVER'S SIDE SEAT (SEE AREA 2 ABOVE), PLEASE REFER TO THE TRIMMING INSTRUCTIONS ON THE OPPOSITE PAGE.

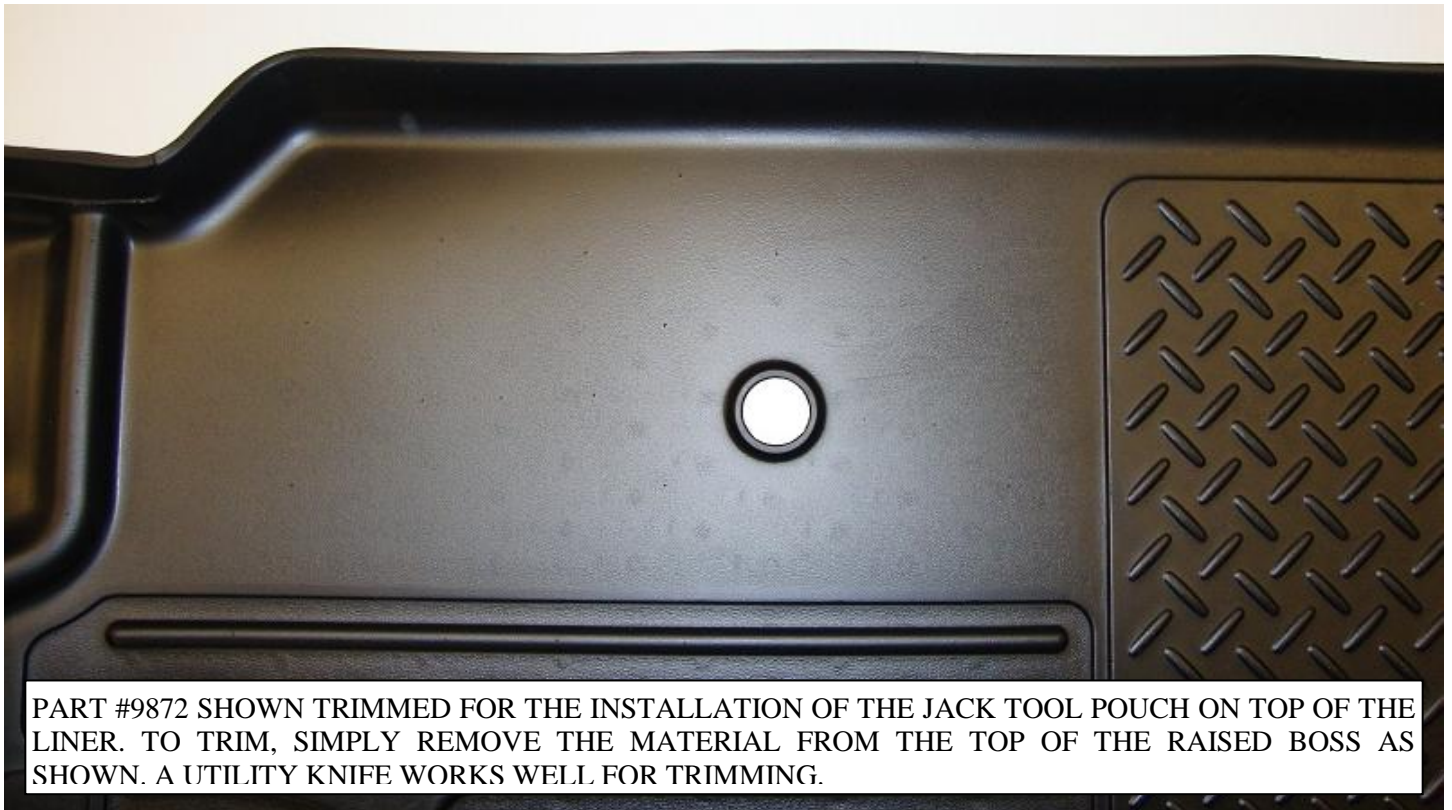

PART #9872 SHOWN TRIMMED FOR THE INSTALLATION OF THE JACK TOOL POUCH ON TOP OF THE LINER. TO TRIM, SIMPLY REMOVE THE MATERIAL FROM THE TOP OF THE RAISED BOSS AS SHOWN. A UTILITY KNIFE WORKS WELL FOR TRIMMING.

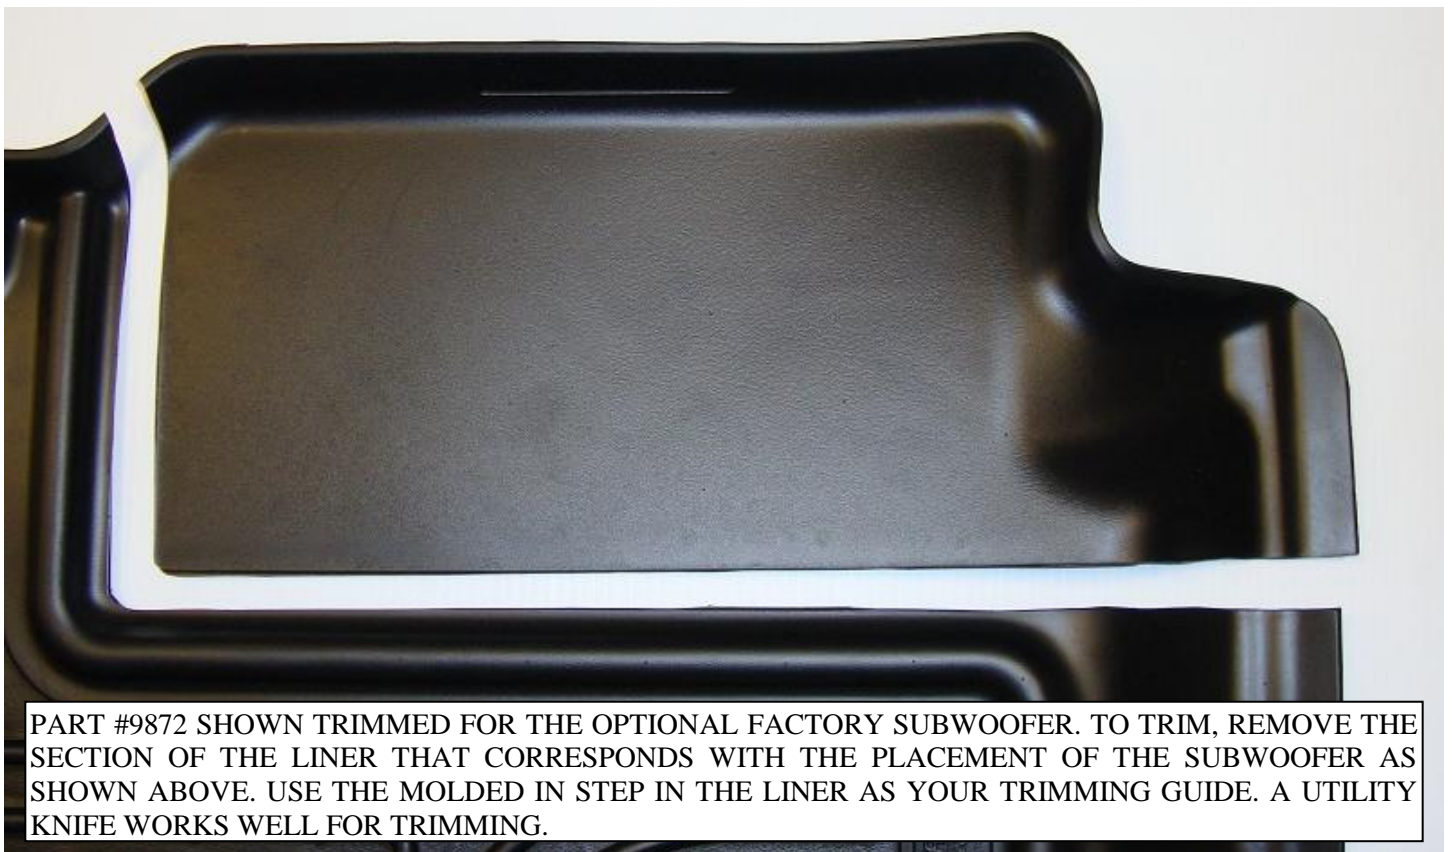

PART #9872 SHOWN TRIMMED FOR THE OPTIONAL FACTORY SUBWOOFER. TO TRIM, REMOVE THE SECTION OF THE LINER THAT CORRESPONDS WITH THE PLACEMENT OF THE SUBWOOFER AS SHOWN ABOVE. USE THE MOLDED IN STEP IN THE LINER AS YOUR TRIMMING GUIDE. A UTILITY KNIFE WORKS WELL FOR TRIMMING.

BELOW IS A PHOTO OF THE FOOT REST ADDED MID-YEAR TO THE 2012 SUPER DUTY. IF YOUR TRUCK HAS THIS FEATURE, YOU WILL NEED PART #9972 FOR THE PROPER FITMENT. PLEASE CONTACT YOUR RETAILER OR CALL US AT 800-344-8759 TO GET PART #9972.

