

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford Flex & Lincoln MKT. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD FLEX & LINCOLN MKT FRONT FLOOR LINERS

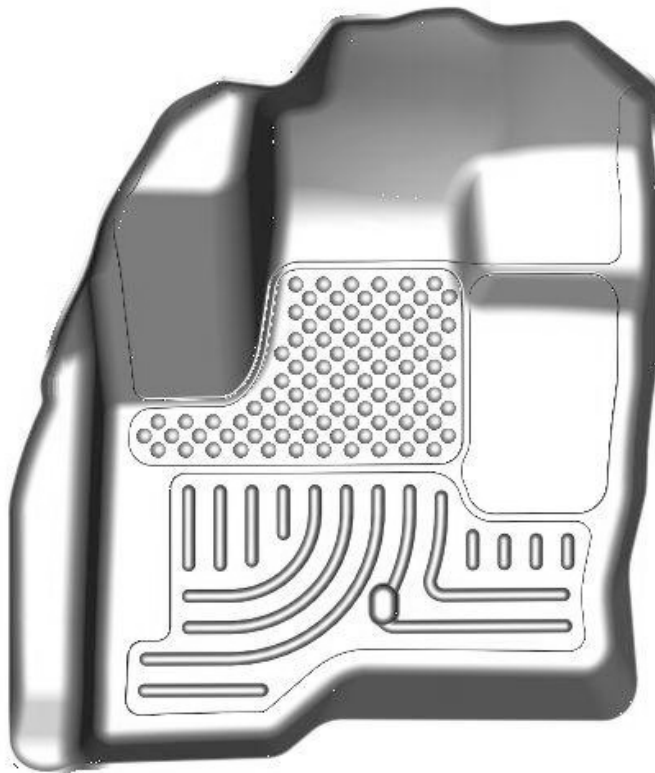

LEFT OR DRIVER'S

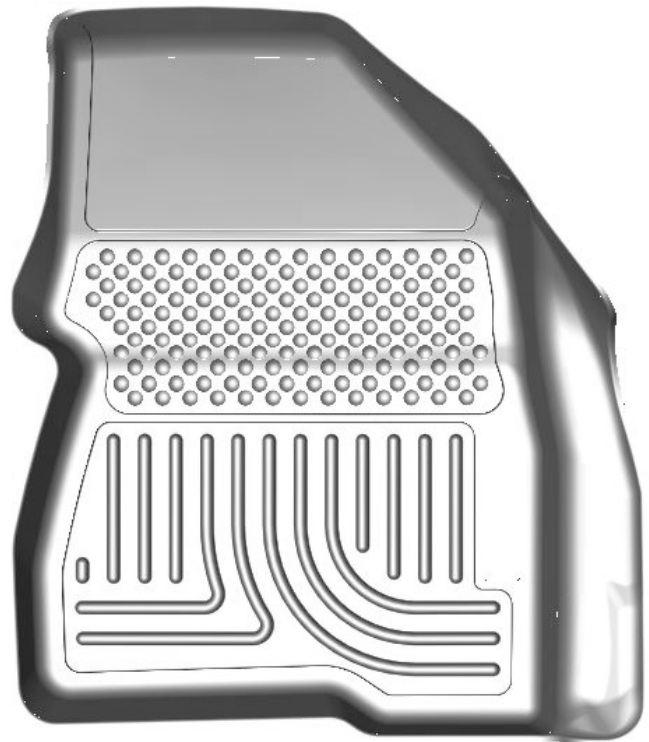

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FLEX / MKT FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.

HUSKY LINERS®

weatherBEATER


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liners are custom molded to fit your Ford Flex & Lincoln MKT. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD FLEX & LINCOLN MKT SECOND SEAT FLOOR LINERS

FRONT OF VEHICLE

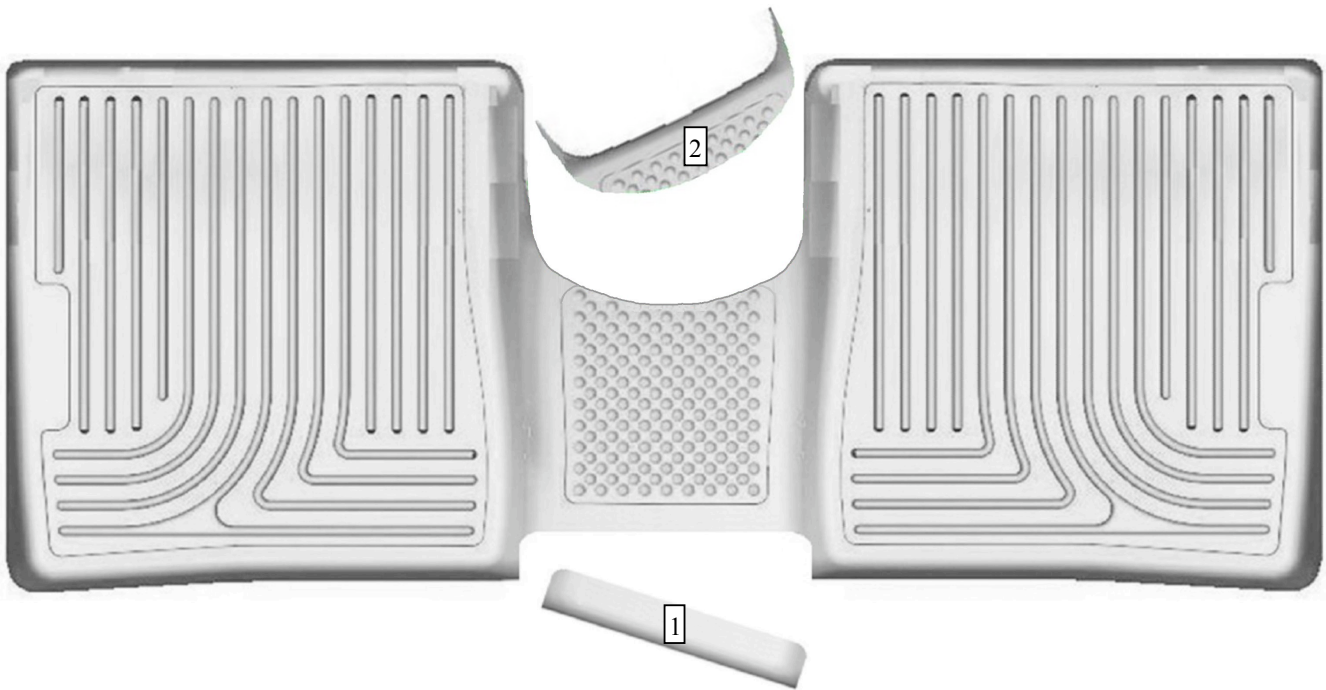

YOUR FLEX & MKT CAN BE EQUIPPED WITH MANY OPTIONS. YOUR NEW WEATHERBEATER LINER IS DESIGNED TO ACCOMMODATE THESE OPTIONS. TO EASE INSTALLATION OF YOUR FLEX / MKT SECOND SEAT LINER, MOVE THE FRONT SEATS FULLY FORWARD. WITH THIS DONE, INSERT THE LINER IN YOUR VEHICLE ONCE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.

NOTE 1: IF YOUR FLEX HAS A SECOND ROW CONSOLE, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS OPTIONAL FEATURE (SEE AREA 1 ABOVE AND PHOTOS ATTACHED ON THE BACK OF THIS SHEET). USE THE MOLDED IN GROOVE AS YOUR TRIMMING GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

NOTE 2: IF YOUR MKT HAS A CONSOLE BETWEEN THE FRONT ROW SEATS, YOU WILL NEED TO REMOVE "AREA 2" AS SHOWN ABOVE. TO TRIM SIMPLY REMOVE THE MATERIAL FROM THE LOWERED AREA

LOCATED ALONG THE BACK CENTER OF THE PART AS SHOWN ABOVE (SEE PHOTOS ON THE BACK OF THIS PAGE). A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

NOTE 3: IF YOUR MKT OR FLEX HAS THE FULL CONSOLE WITH REFRIGERATOR (COVERS ENTIRE CENTER HUMP AREA IN THE SECOND ROW OF SEATS), YOU WILL NEED TO TRIM YOUR LINER. THE HUMP PORTION OF THE LINER CAN EASILY BE REMOVED USING THE MOLDED IN STEP LOCATED ALONG THE TRANSMISSION TUNNEL AS YOUR TRIMMING GUIDE. SEE THE TRIMMING PHOTOS BELOW.



PART #9874 SHOWN UNTRIMMED. DOTTED LINE SHOWS TRIM STEP USED IN NOTE 3.



PART #9874 SHOWN TRIMMED FOR FLEX REAR CONSOLE.



PART #9874 SHOWN TRIMMED FOR MKT FRONT CONSOLE.



PART #9874 SHOWN TRIMMED FOR FULL SECOND ROW CONSOLE WITH REFRIGERATOR.