


HUSKY **Weather** **BEATER**TM **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Hyundai Tucson. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR HYUNDAI TUCSON FRONT FLOOR LINERS

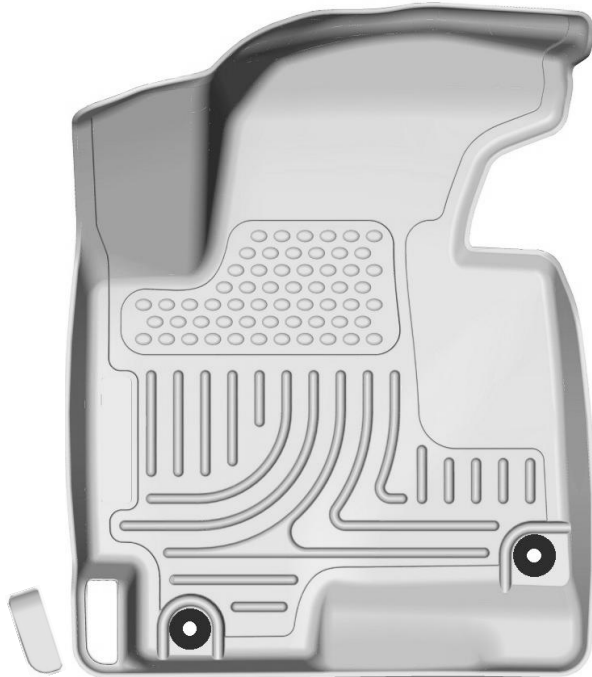

LEFT OR DRIVER'S SIDE

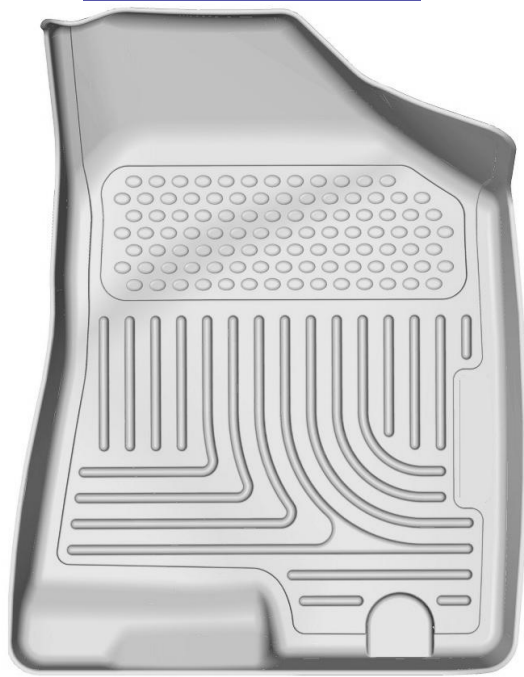

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW SPORTAGE FRONT FLOOR LINERS, FIRST SLIDE BOTH FRONT ROW SEATS ALL THE WAY BACK TO EXPOSE THE FLOOR PANS. WHEN INSTALLING THE LINERS, NOTE THAT THE DRIVER'S SIDE LINER USES THE FACTORY RETAINING POSTS TO HELP SECURE IT IN PLACE. BEFORE OPERATING VEHICLE MAKE SURE THE LINER IS SECURELY FASTENED TO THE FACTORY POSTS. ONCE YOU HAVE INSTALLED THE FRONT LINERS, REPOSITION THE FRONT SEATS AS DESIRED.

YOUR DRIVER'S SIDE LINER IS DESIGNED TO COVER THE FUEL DOOR RELEASE--WHICH KEEPS DEBRIS FROM COLLECTING IN THIS AREA. TO ACCESS THE RELEASE YOU CAN SIMPLY LIFT THE REAR OF THE LINER, OR, YOU CAN TRIM AWAY THE MATERIAL ABOVE THE RELEASE AS SHOWN ABOVE. THE AREA TO BE TRIMMED IS LOWERED IN THE PART. USE THE EDGE FORMED BY THE LOWERED AREA AS YOUR TRIMMING GUIDE. A UTILITY KNIFE WORKS WELL FOR TRIMMING.


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Hyundai Tucson. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR HYUNDAI TUCSON SECOND SEAT FLOOR LINERS

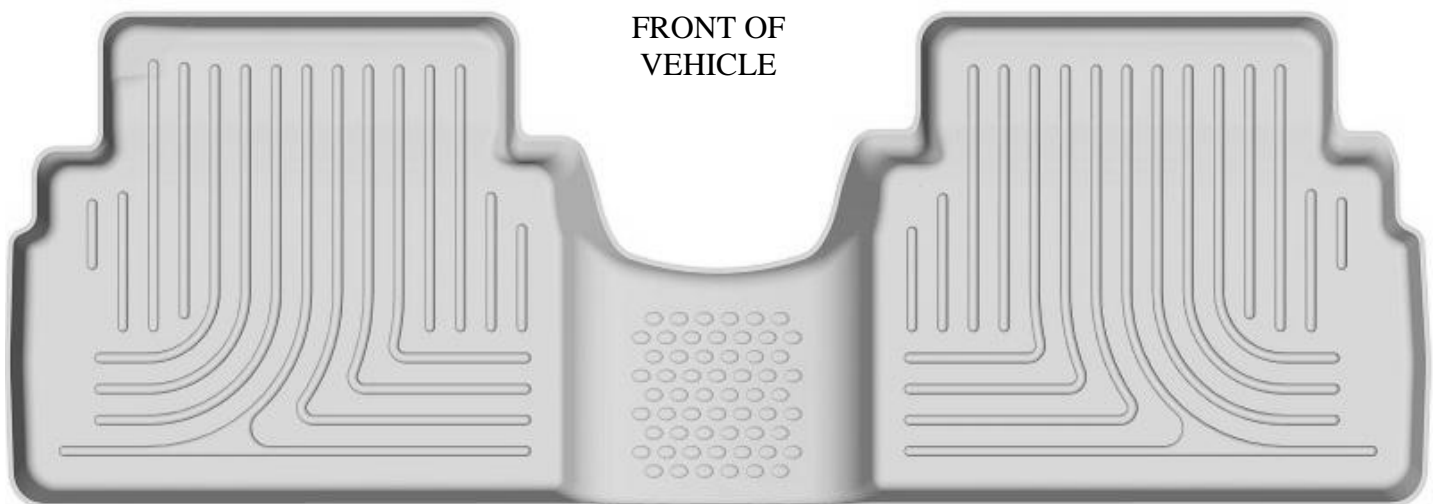

TO EASE INSTALLATION OF YOUR 2nd SEAT TUCSON FLOOR LINER, FIRST MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE THEN REPOSITION THE FRONT SEATS AS DESIRED.