

# **HUSKY** **Weather**BEATER™ **Custom Vehicle Floor Protection**

## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Mercedes ML350. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR MERCEDES ML350 FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR MERCEDES ML350 FRONT FLOOR LINERS, SLIDE BOTH FRONT ROW SEATS ALL THE WAY REARWARD SO AS TO ALLOW THE MOST LEG ROOM. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED. NOTE THAT THE DRIVER'S SIDE LINER ATTACHES TO THE FACTORY MAT RETAINING POSTS. PLEASE MAKE CERTAIN THAT THE LINER IS SECURELY POSITIONED ON THE RETAINING POSTS BEFORE OPERATING VEHICLE.

# **HUSKY** **Weather** **BEATER**<sup>™</sup> **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liners are custom molded to fit your Mercedes ML350. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR MERCEDES ML350 SECOND SEAT FLOOR LINERS

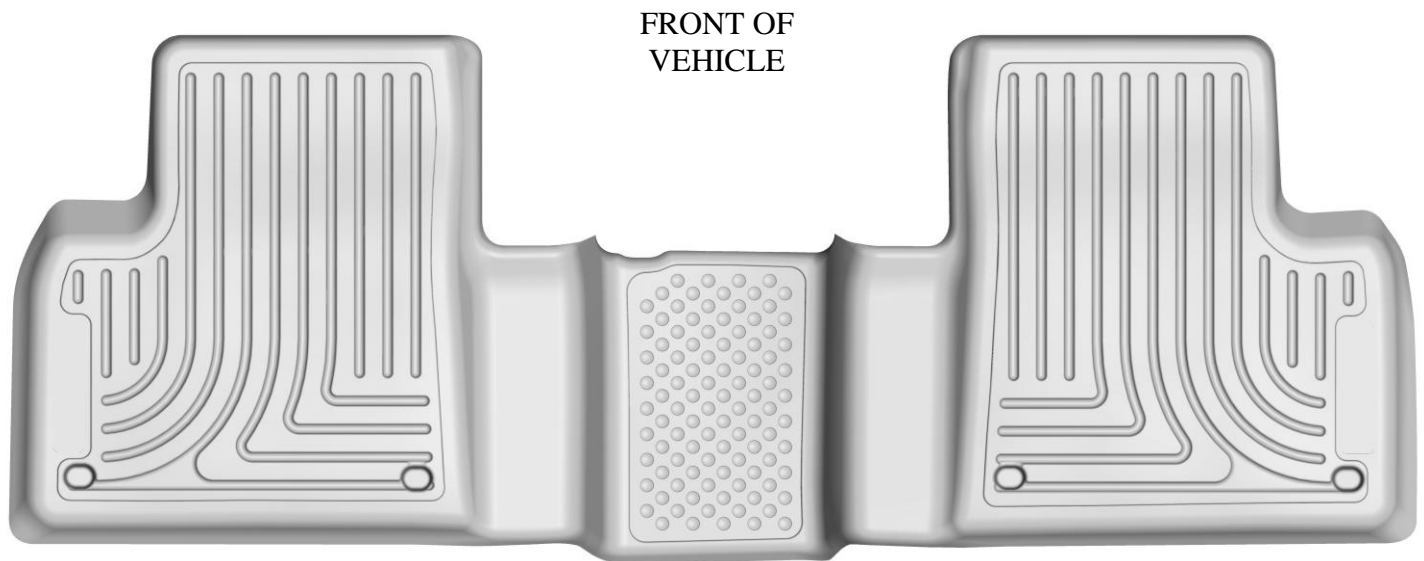

TO EASE INSTALLATION OF YOUR 2<sup>nd</sup> SEAT MERCEDES ML350 FLOOR LINERS, FIRST MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINERS IN VEHICLE THEN REPOSITION THE FRONT SEATS AS DESIRED.