



Proudly Made In USA

**Installation Instructions:**

JK Inner Fender Liners Part  
 Number(s): 400.300.140 & 400.300.160

**Vehicle Fitment:**

2007 - Present Jeep Wrangler  
 & Unlimited

IMPORTANT: BEFORE INSTALLING, PLEASE READ THIS INSTALLATION PACKAGE COMPLETELY

Parts List	
Qty:	
1	Driver Side Inner Fender Liner (A,B,C,D)
1	Passenger Side Inner Fender Liner (A,B,C,D)
14	1/4"-20 Button Head Screws x 1/2"
14	1/4"-20 Nylon Lock Nuts
16	10-32 Button Head Screws x 1/2"
16	10-32 Nylon Lock Nuts
6	5/16"-18 Button Head Screws x 1"
2	5/16"-18 Clip Nut

Tools Needed			
			
Ratchet 10mm, 3/8" & 7/16" Sockets	7/16" Wrench 1/8", 5/32" & 3/16" Allen Wrenches	Drill & 9/32" Bit	
			
Utility Knife (For Stock Fender Only)	Pliers (For Stock Fender Only)		


Congratulations on your purchase of the Hyline Offroad Inner Fender Liners. Our Inner Fender Liners are completely manufactured in our facility located in Perkasio, PA. They are designed and engineered by enthusiasts just like you. Hyline Offroad would like to thank you for your recent purchase and look forward to serving you in the future as part of the Hyline Nation.

*Hyline Offroad Staff*


# PLEASE READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

## Inner Fender liner Install (Drivers Side)

Step 1 – Remove the factory plastic inner fender liner by unscrewing (3) bolts along the top side and (1) bolt by the front edge of the factory fender using a 10mm socket. Also, remove the clip nut from the one bolt you removed from the front edge location (you will NOT reuse this). Once bolts are removed the factory inner fender liner can be removed. Retain the (3) top side bolts as you will need these for installation of the new fender liners. (See **Figure 1 & 4**)

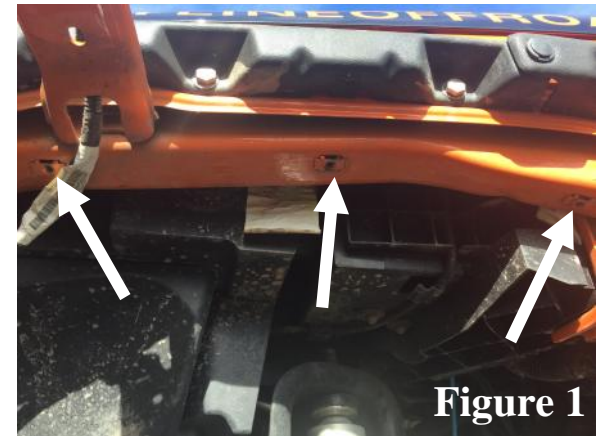


Step 2 – If you have factory fenders you will need to remove the (2) body clips that hold on the factory fender. Figure 2 is shown without the fender flare installed. You will also have to remove a long threaded stud from the bracket shown in Figure 2. This can be done easily by using pliers to unscrew the stud and remove from inside engine bay. (See **Figure 2**)

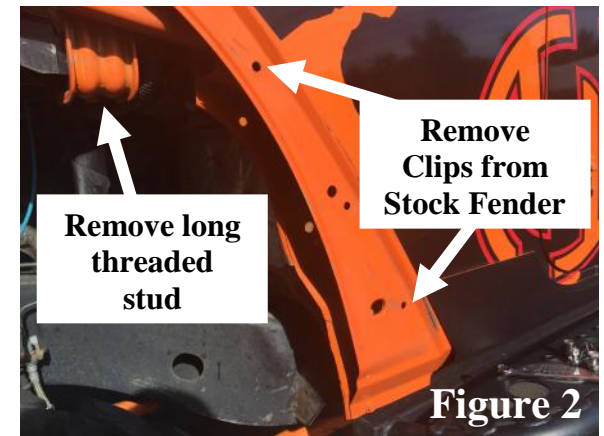

Step 3 – Assemble panel A (Perforated Mesh) onto the back of panel B using (8) 10-32 button head screws and nuts. (See **Figure 3- drivers side shown**).

Step 4 – Assemble panel B to C and C to D to form one unit (See **Figure 3**). All the panels are fastened together using the 1/4"-20 button head screws and nuts.

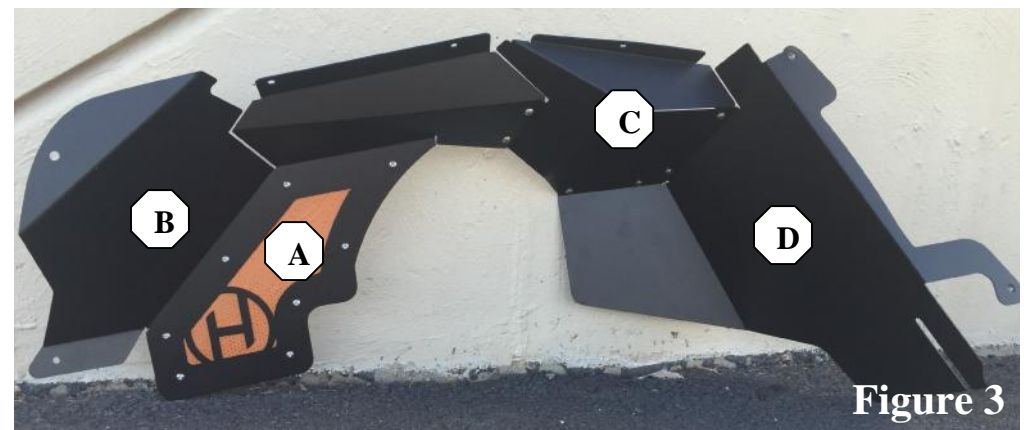

Step 5 – Install the supplied 5/16”-18 clip nut onto the front edge hole location that was referenced in Step 1. **(See Figure 4)**

Step 6 – Install the inner fender assembly into the wheel well, panel B will be closest to the front of the Jeep. Loosely install the (3) top side factory bolts you retained in Step 1 to hold the inner fender liner in place. The pressed in clinch nuts on panel D should be behind the outer fender sheet metal.

**Note: If you are using factory fenders some of the hard plastic rib substructure will need to be trimmed here for a tight fit (See Appendicies on Page 4)**


Step 7 – Install the supplied 5/16”-18 button head screw that is closest to the grille into the 5/16”-18 clip nut you previously installed in Step 5.

Step 8 – Install (2) supplied 5/16”-18 button head screws through the body panel and into the pressed clinch nuts on panel D.

Step 9 – Tighten all of the bolts to secure the fender in place.

Step 10 – Using the drill and 9/32” bit, drill a hole into the metal body mount flange through the yet unused hole in panel B, closest to the grille **(See Figure 5)**. Use touch up paint on the drilled hole to protect from rusting.

Step 11 – Install one of the 1/4”-20 bolts through the hole you just drilled, followed by a 1/4” nylon lock nut. Use the 7/16” Wrench and 5/32” allen wrench to tighten.

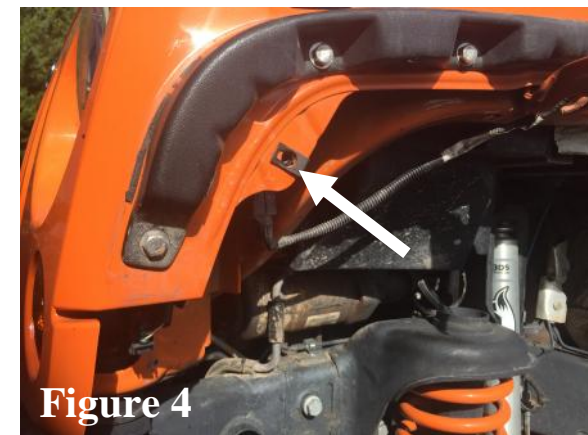

Step 12 – Check to make sure all wiring for the lights is protected from chaffing on the inner fenders, and has enough slack.

Step 13 – Repeat steps 1-12 for the passenger side.

## **Appendicies:**

### **Factory Fender Modification Notes:**


1. Once the factory inner fender liner is removed score the plastic areas shown in Figure A1 and Figure A2 with a utility knife. Then using a pair of pliers break the plastic to remove. Trim as needed to fit the new sheet metal fender liners.

### **Bushwacker Fender Modification Notes:**

1. Before installing the Hyline Inner Fender Liners you'll need to remove the fender flares by removing all screws and pulling off the fender flare.
2. If present, remove the (2) bolts from locations shown in Step 2 and Figure 2 above.
3. Grind or cut plastic flange on the Bushwacker fender flare as shown in Figure B. This will allow the fender flares to sit flush on the front fender liner panel.
4. Install Hyline Inner Fender Liners, Then reinstall the fender flares.



**Figure A1**

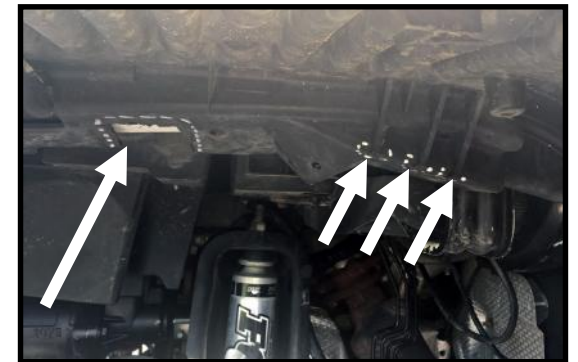

**Figure A2**



**Figure B**



**\*\* IMPORTANT: PLEASE READ BEFORE INSTALLING**

**HYLINE OFFROAD, LLC WARRANTY**

HYLINE OFFROAD, LLC. LIMITED WARRANTY Hyline Offroad, LLC, warrants all products against manufacturer's defects in workmanship and material for a period of one (1) year from the date of sale. This warranty applies to manufacturer's defects only and does not cover damage or failure caused by natural causes or third parties.

If product failure does occur within the time period specified according to the provisions of this Warranty, then Hyline Offroad, LLC agrees to provide the replacement product free of charge, F.O.B. factory. This Warranty is valid only so long as the product is installed on the original vehicle. Removal of the product from this vehicle automatically invalidates this Warranty.

As described above, this warranty is expressly limited to the material cost of the product and does not extend to labor costs. Hyline Offroad, LLC will not be responsible for any costs incurred in the removal or reinstallation of the product furnished by manufacturer under this warranty.

This Warranty shall be for the benefit of the original owner only, and is non-transferable. This Warranty is valid in those states where permitted. Some states do not allow limitations on the length of an implied warranty, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. You should check your local state laws to determine this. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

THE WARRANTIES SET FORTH IN THE FOREGOING PROVISIONS ARE LIMITED TO THEIR PRECISE TERMS AND PROVIDE EXCLUSIVE REMEDIES EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES. THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION IN THE FOREGOING PROVISIONS. HYLINE OFFROAD, LLC EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY WITH REGARD TO THE PRODUCTS. HYLINE OFFROAD, LLC IS NOT LIABLE TO ANYONE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED. HYLINE OFFROAD, LLC IS NOT LIABLE FOR DAMAGES TO PERSON OR PROPERTY, CONSEQUENTIAL LOSSES, LOSS OF PROFIT, LOSSES OF PRODUCT IN STORE, OR THE LIKE, UNDER ANY CIRCUMSTANCES AND HYLINE OFFROAD, LLC's LIABILITY IN ANY CIRCUMSTANCE IS SPECIFICALLY LIMITED BY THE TERMS OF THIS WARRANTY.

**HYLINE OFFROAD, LLC HOLD HARMLESS AGREEMENT**

1. In purchasing a Hyline Offroad, LLC Product™ I release, waive, discharge and covenant not to sue Hyline Offroad, LLC's officers, servants, agents, or employees (hereinafter referred to as Releasees) from any and all liability, claims, demands, actions and causes of action whatsoever arising out of or related to any loss, damage, or injury, including death, that may be sustained by me (or anyone else), any property belonging to me (or anyone else), whether caused by the negligence of the releasees or otherwise, while working on, using or any activity related to this product.
2. I am fully cognizant of any risks and/or hazards connected with the use of a this product and I elect to willingly engage in such use of this product knowing that the use may be hazardous to me and my property. I willingly assume full responsibility for any risks of loss, property damage or personal injury, including death, that may be sustained by me (or anyone else), or any loss or damage to property owned by me (or anyone else), as a result of using this product, whether caused by the negligence of releasees or otherwise.
3. I further agree to indemnify and hold harmless the releases from any loss, liability, damage or costs, including court cost and attorney fees, that they may incur due to my use of a this product, whether caused by negligence of releasees or otherwise.
4. It is my express intent that this Release and Hold Harmless Agreement shall bind the members of my family and spouse, if I am alive, and my heir's assigns and personal representative, if I am deceased, and shall be deemed as a release, waiver, discharge, and covenant not to sue the above named releasees. I further agree that this Waiver of Liability and Hold Harmless Agreement shall be construed in accordance with the laws of the State of Pennsylvania.

*By accepting and installing this product, I acknowledge and represent that I have read the above Warranty and Hold Harmless Agreement, understand it and accept it willingly as my own free act and deed; no oral presentations, statements, or inducements, apart from the foregoing written agreement, have been made; I am at least eighteen (18) years of age and fully competent; and I execute this Release for full, adequate and complete consideration fully intending to be bound by same.*

*If you do not agree with the preceding Hold Harmless Agreement, you may return the product and receive a full refund. Please, contact a Hyline Offroad sales representative and they will issue a call tag for the product in question. Once the product has been received by Hyline Offroad, inspected and accepted for return, a full refund will be issued.*