

## Hypertech Inline Speedometer Calibrator Module Installation Instructions PN 730128 2014-2016 GM 1500 Truck, 2015-2016 GM SUV, & HD Truck

This installation manual shows an example installation on a 2015 Chevrolet Silverado 2500. The installation may vary for your vehicle, so it may be necessary to consult a Chevrolet service manual for specific instructions for your year model.

Tools Needed: T15 Torx driver.

Be advised: These instructions may not include specifics for all vehicle configurations.

1. Connect the Inline Speedometer Module to your PC with the supplied USB cable and configure it to your vehicle with the provided software. Once configuration is complete, connect the module to the harness.




2. There are (4) T15 Torx screws that retain the Glove Box. Remove the (2) bottom screws first.



3. Open the glove box and remove the (2) T15 Torx screws at the top. There are a few clips on the backside that retain the glove box, pull gently towards yourself and it will come free.



4. Behind the glove box is a module with several connectors. We will remove the far right hand side black connector.

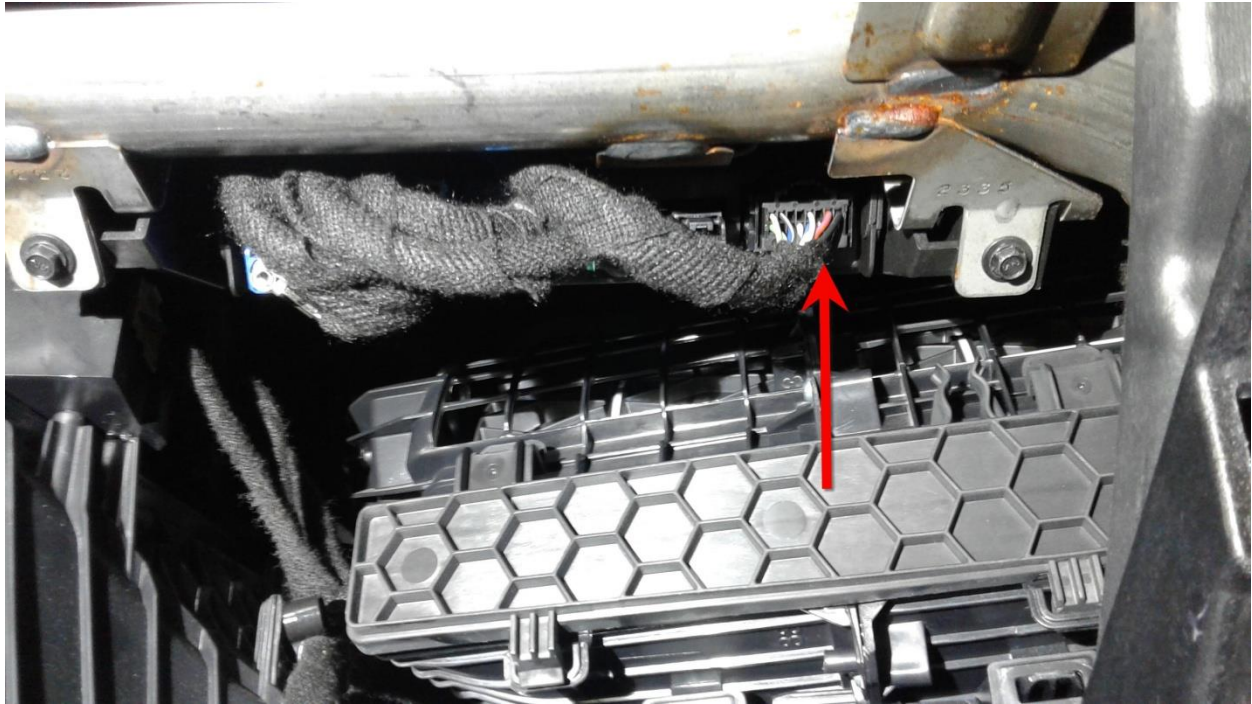


5. Insert the male connector of the speedometer harness into the factory vehicle harness, making sure to align the connectors so that both the retaining clips are facing up. Secure the 2 connectors with a zip-tie through the retaining clips. Be sure to not pull the zip-tie too tight to avoid damage to the clips.



6. Plug the female end of the speedometer calibrator harness into the module.



7. Place the speedometer calibrator module and harness in the area behind the vehicle's module and secure it with a zip-tie.

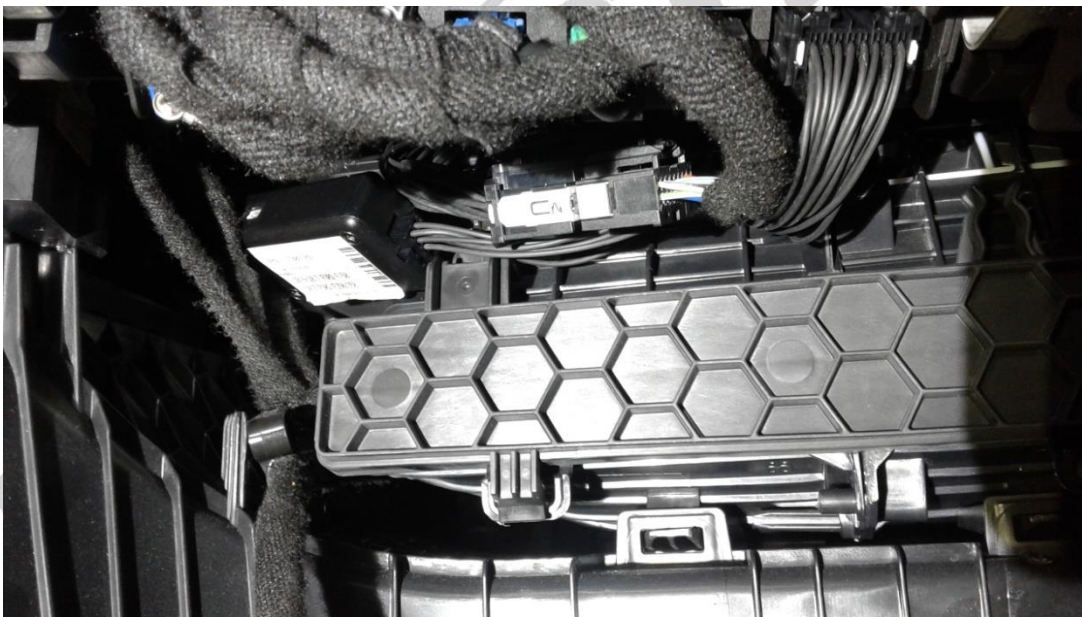

8. Re-install glove box.
9. Start Vehicle and check for any warning signs or messages.
10. Test drive vehicle to ensure proper Speedometer function.
11. Enjoy the drive!

**HYPERTECH**