

FUTURA AUTO Specialist's Guide

FOR:
AUDI (D)
FORD (D)
PORSCHE (D)
SEAT (E)
SKODA (CZ)
VOLKSWAGEN (D)



HU66MH

HU66P

HU66AT5
 HU66AT6

HU66EHP

HU66T5

HU66T6

HU66T10

HU66CT5

HU66FH

HU66T15

HU66DT5

HU66T23

HU66CT6

HU66T26

HU66BT1

HU75T

HU66T28

HU66BT15

HU66TE

HU66BT28

HUF (D) - WITTE (D)

STANDARD

D744023ZB


19J Jaw



STANDARD

D943254ZR

02J Jaw

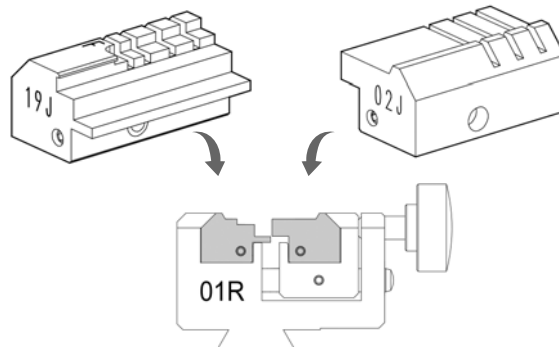


STANDARD



D742606ZB

Cutter 01L

FOR: **BMW (D)**

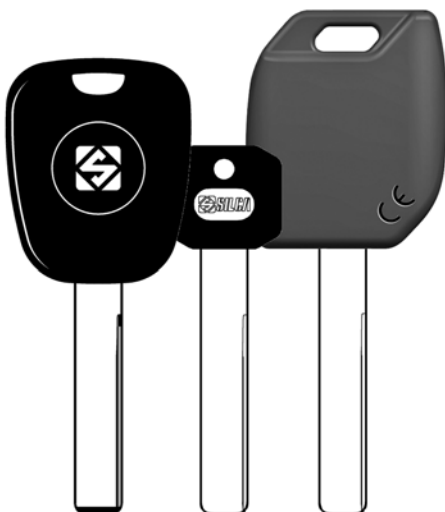

HU92RP

HU92RKP

HU92RMH

STANDARD

D943253ZR


01J Jaw



STANDARD

D743256ZB

04J Jaw

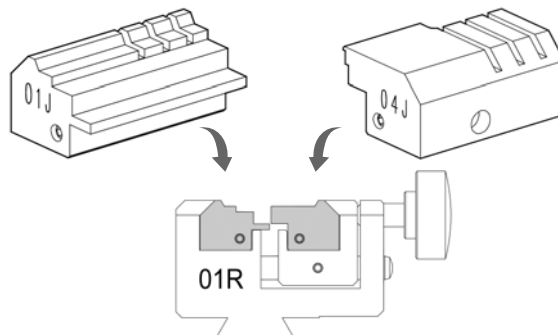

STANDARD



D742606ZB

Cutter 01L

FOR: **CITROËN (F)**


STANDARD



SX9CP SX9GP SX9T14 SX9MH

SX9AP SX10BP SX11BP SX9EHP
SX9T6 SX9TE

VALEO - SIMPLEX (F)

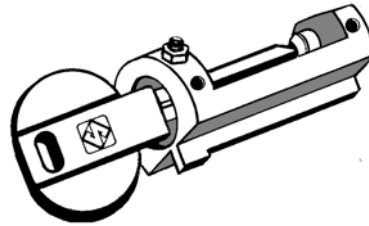

D708040ZB
Code adaptor B6 for SIMPLEX

FOR: **FORD (D)**

STANDARD




D744023ZB
19J Jaw


STANDARD



D943254ZR
02J Jaw

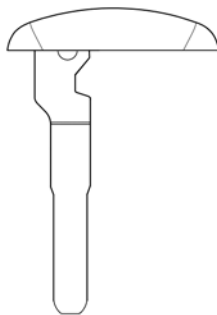

(Escape model)

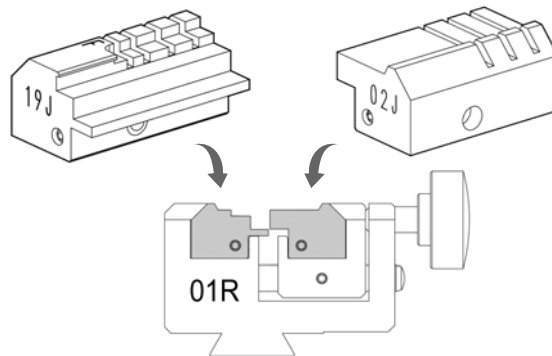


STANDARD



D742606ZB
Cutter 01L

FOR: **FORD (EU+USA)**

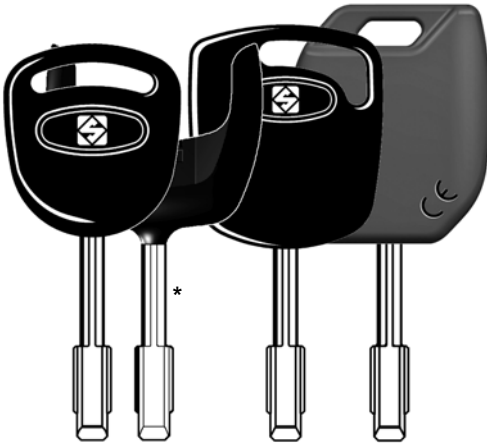


- FO21P FO21AP FO21T3 FO21MH
- FO21T3M
- FO21T7
- FO21T17
- FO21TE
- FO21FH
- FO21EH1
- FO21EH2

** IMPORTANT! Key blank to be applied to the original remote control (the remote control includes the transponder chip)*

TIBBE (D)
VALEO (F)

STANDARD

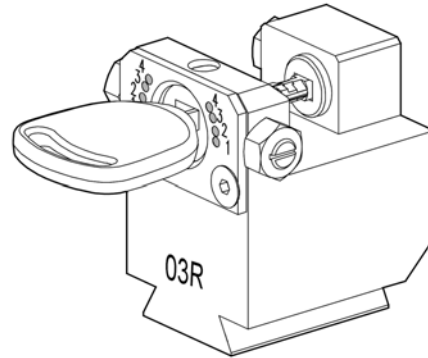


D743276ZB
03R Clamp

STANDARD



D742606ZB
Cutter 01L

FOR: **HUF (D)**

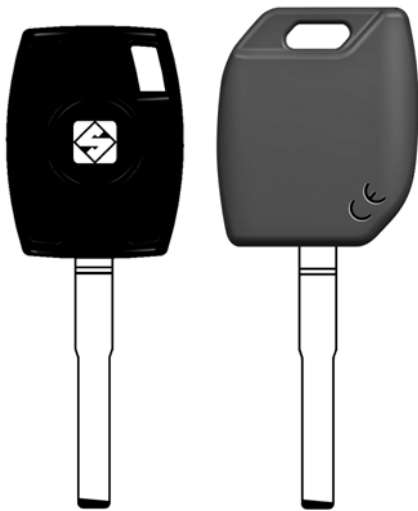

- HU101T17
- HU101T20
- HU101TE
- HU101MH
- HU101T
- HU101AP
- HU101EH
- HU101FH

STANDARD




D744023ZB
19J Jaw



STANDARD



D943254ZR
02J Jaw

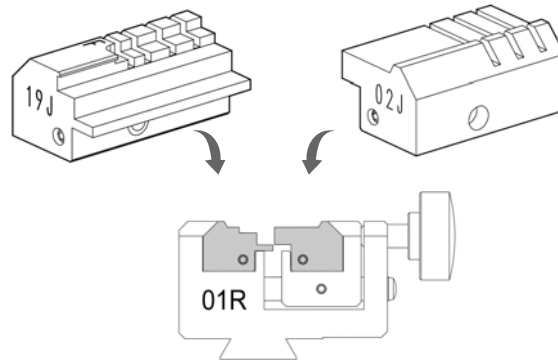

STANDARD



D742606ZB
Cutter 01L

FUTURA AUTO



FOR:

MERCEDES (D)



HU41P

HU55P
HU61AP

HU64P
HU64T
HU65AP

HUF (D)

STANDARD



D943253ZR


01J Jaw



STANDARD

D743256ZB

04J Jaw

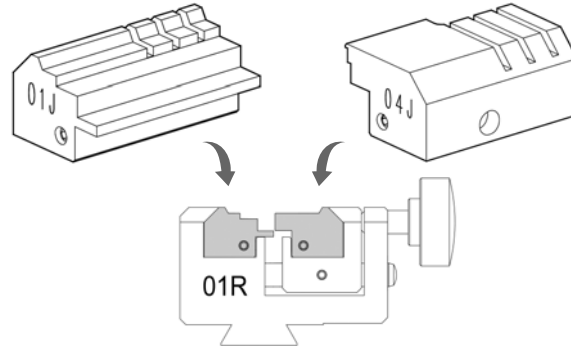

STANDARD



D742606ZB

Cutter 01L

