


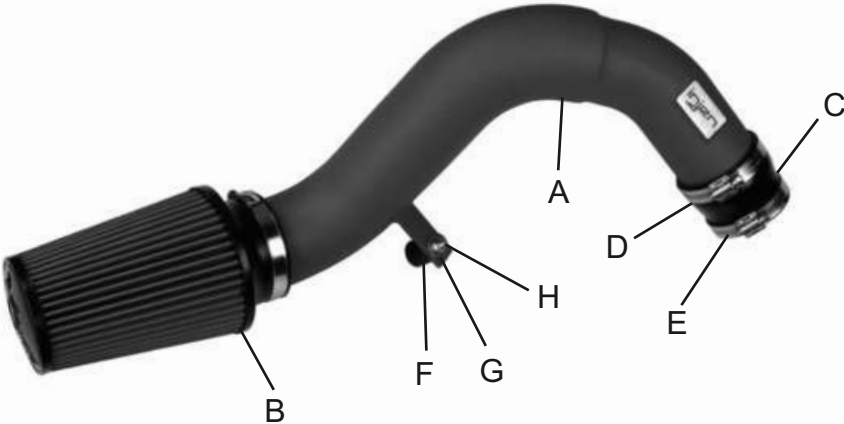

Vehicle Application:
Make: AUDI
Model: S4/S5 (B9)
Year: 2018-19
Engine: V6 3.0L turbo

Item	QTY.	P/N	Discription
A	1	Y-SP3082	Intake Tube
B	1	#1059BB	3-1/4" Dry filter (Blue Media)
C	1	#3120	2-3/4"x3" step hose
D	1	#4004	#48 clamp
E	1	#4003	#44 clamp
F	1	#6028	M6 male/female vibramount
G	1	#6010	Fender washers
H	1	#6002	M6 nut



WARNING: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE SYSTEM, ENGINE AND COMPONENTS!!!
***Do not attempt to install the intake system while the engine is hot.**
 Severe burn could result from touching hot engine components!

- TOOLS REQUIRED**
- 10mm Ratchet & Socket
 - 8mm nut drive
 - Allen key
 - Flat Blade Screwdriver
 - Phillips Screwdriver

Report any defective or missing parts to the authorized Injen dealer you purchased this product from. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation, please contact your Injen Technology dealer. Installation DOES require some mechanical skills. A qualified mechanic is always recommended.

Instruction Manual P/N:SP3082

NOTE: This intake kit may not work on vehicles with the following aftermarket modifications.

- Aftermarket Intercooler piping
- Aftermarket intercooler
- Turbo upgrade
- Modified body panels
- Suspension & Chassis modifications

Injen intake systems are street legal in most states unless the state is adopting to California Emissions standards. States that have adopted California emission standards include: Arizona, California, Connecticut, District of Columbia, Maine, Maryland, Massachusetts, New Jersey, New Mexico, New York, Oregon, Pennsylvania, Rhode Island, Vermont, and Washington. These states will require an California Air Resource Board Executive Order Number (CARB E.O.) for the legal use of an Injen intake system in your vehicle for use on public roads or highways. These vehicle will be considered "Legal in California only for racing vehicles competition use only, which may never be used upon a public street or highway. Please keep your factory air box assembly for any future use.



The SuperNano-Web filter media is a dry synthetic media that outperforms the competition. The media itself is a proprietary base blend of synthetics and cellulose. Cellulose fibers are larger than synthetic fibers, and have larger spaces between the fibers, causing contaminants to load in the depth of the media and plug the airflow path. This creates higher restriction levels and less capacity. The synthetic fibers in the SuperNano-Web media are submicron in diameter and have small interior fiber spaces, which result in more contaminants being captured on the surface of the media. This can help keep restriction levels low as the filter loads with dirt and containments



If you look at the picture to the left, you can see the Nano-fiber web on top of our base media. That web, or SuperNano-Web as we like to call it, helps trap smaller particles and protect your engine.

To Clean your filter:

Carefully remove the filter from the housing. Once removed, wipe down the housing using a clean shop towel, being careful not to knock any dirt and/or debris in the air inlet. Your filters can be cleaned by carefully vacuuming the filter media from the dirty side, or by holding the filter with one hand and carefully blowing the filter media at a 45-degree angle from the clean side using low-pressure shop air (15-20 lbs. psi).

****IT IS IMPORTANT TO NOT USE ANY CLEANERS ON THE SUPERNANO-WEB MEDIA OR APPLY ANY OIL!!!***

NOTE: DISCONNECT BATTERY BEFORE INSTALLATION!!!

Instruction Manual P/N:S3082




1. Stock intake system shown.



2. Push clip on hood release lever, and remove. Lift up and pull back the grille cover.



7. Loosen the clamp on the air box intake tube using 7mm nut driver.

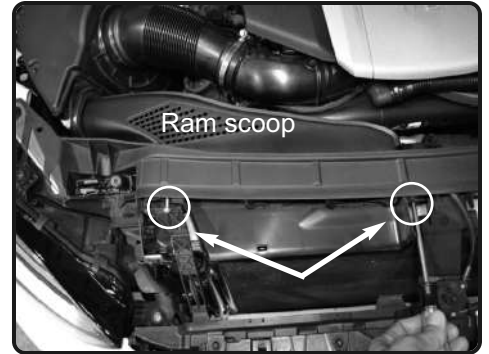


3. Once the grille cover is removed, locate the 2 screws holding in the OEM ram scoop, loosen and remove using T25 torx bit.



4. Carefully lift up and remove the ram scoop.




5. Pull back the intake tube from the turbo inlet.

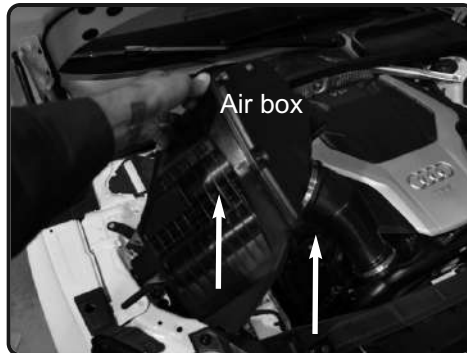


6. Lift up and remove the OEM airbox from vehicle.



7. Disconnect the Harness located next to fender well. Pull back and remove. This will allow for more clearance when installing the air filter.

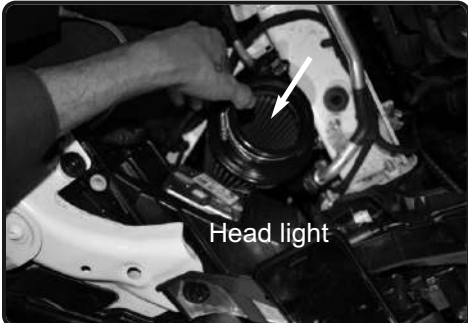

8. Now install the air filter into bumper cavity under headlight.

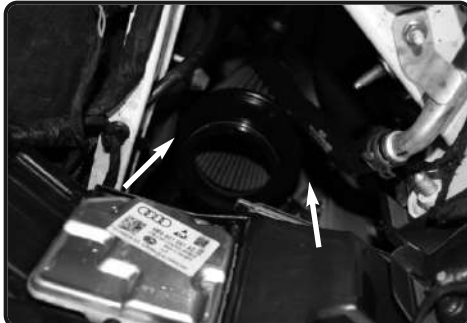

9. Leave filter until attached to the intake tube.



10. Locate the M6 threaded stud holding in the Air condition line on vehicle frame. Install and secure the M6 male female vibramount.



11. Make sure the vibramount is secured and tighten.


Instruction Manual P/N:SP3082



12. Install the provided Step hose with clamps to the turbo inlet. Secure and tighten clamp on inlet using 8mm nut driver.




13. Attach the filter to the intake tube.

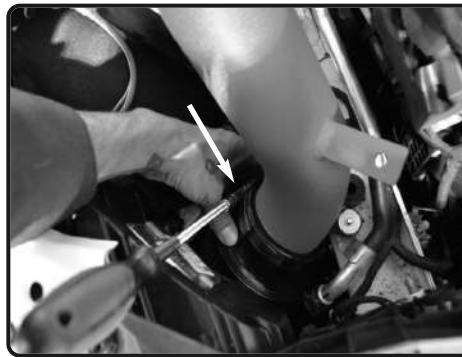


14. Now secure and tighten using 8mm nut driver.



15. Now install the intake tube and position to step hose and bracket to the vibramount.

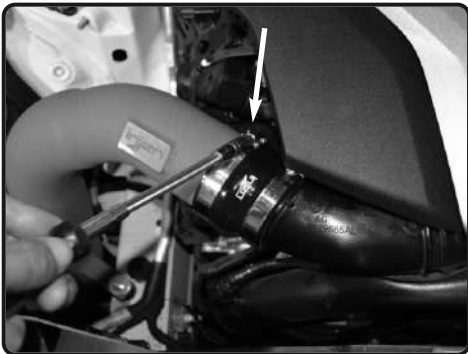

16. Secure and tighten the clamp using 8mm nut driver.

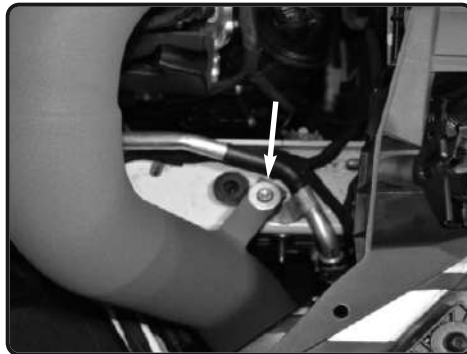

17. Secure the vibramount using fender washer and M6 nut.



18. Secure the bracket and tighten using 10mm socket or wrench. Adjust for fitment and clearance.



Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose. **Note: Check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.**

Test Drive:

1. With the transmission in neutral or park and the parking brake engaged, start the engine. Listen for air leaks or odd noises. If air leaks are detected, secure hoses and connections. For any odd noises, inspect entire system for cause and adjust intake as needed. The Injen intake will function identically to the factory system but will be louder and more powerful.
2. Perform a road test. Listen for odd noises or rattles and fix as necessary.
3. If there are no issues, continue to enjoy your added performance from the Injen performance Intake kit.
4. Injen Technology recommends you periodically check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.

1. Upon completion of the installation, reconnect the negative battery terminal before you start the engine.
2. Align the entire intake system for the best possible fit. Once the intake has been properly fitted continue to tighten all nuts, bolts and clamps.
3. Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.
4. Start the engine and listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that maybe causing leaks or rattles and correct the problem.
5. Check the filter for excessive dirt build up. Clean or replace the filter with an original Injen filter. Congratulations! You have just completed the installation of the best intake system sold on the market. Enjoy the added power and performance of your new intake system.