
## **EXAMPLE:** IOP50/51 Installation instructions

## The following symbols are used throughout this manual for your attention.

Warning Failure to follow this warning can result in serious accidents including death or serious injury.

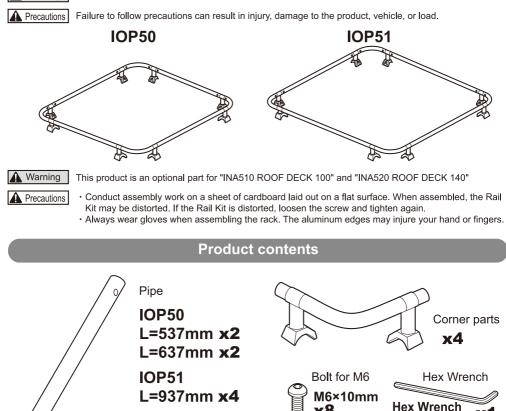


Necessary tools

**x**8

The following tools are required to assemble the product.

Plate nut



Bolt for M8

**x8** 

M8×25mm

Hex wrench included with "INA510 ROOF DECK 100" and "INA520 ROOF DECK 140"

Specification sticker

(B=4)


Installation


Instructions

×1

## How to assemble


Insert the plate nut into ROOF DECK. (8 places) \* If ROOF DECK is attached to the vehicle, remove it from the vehicle.

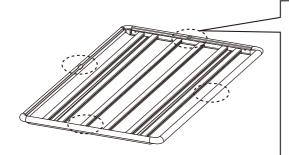

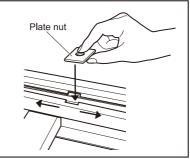


2

1 Put the corner parts on ROOF DECK. (4 places)

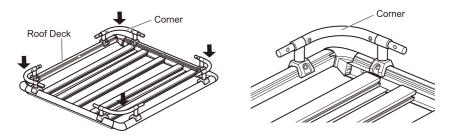


②Insert the pipe into the corner part.

Use the included wrench for connection.Tighten 8 places temporarily with M6 x 8 bolts. (8 places)

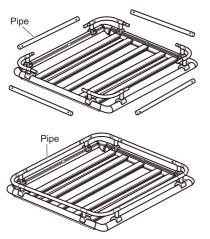


A Precautions

There are two types of pipes for IOP50, so be careful.

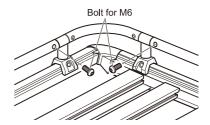

-2-

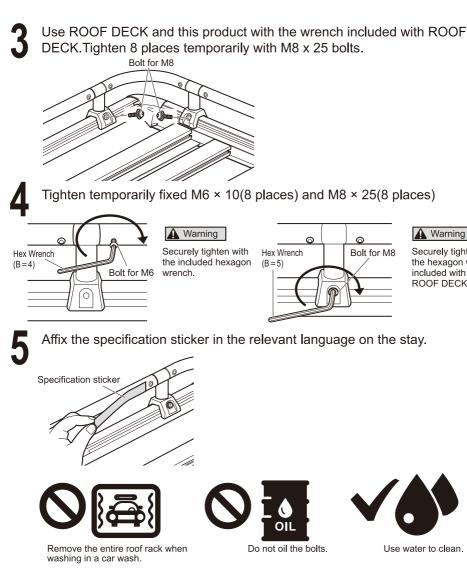

**Warning** 

Securely tighten with the hexagon wrench included with ROOF DECK.



Do not use detergent or wax.



Obey all posted speed limits. Drive slower under strong winds or on rough roads.



Use water to clean.



Store in a dry indoor place away from direct sunlight.






Please note the height

Do not hang on the rail kit.

· Make sure that all bolts and nuts are securely tighten before driving.

## **Repair parts**

There are genuine spare parts for this product as shown below. Please specify part name when ordering repair parts.

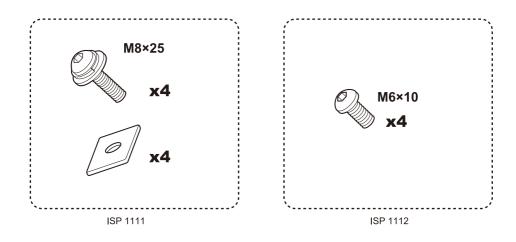



Learn more about roof racks and cargo carriers we have.