Installation Zinno. IOP52 instructions

The following symbols are used throughout this manual for your attention.




- •This product is an option for the INNO roof deck T-slot (slide groove).
- •Make sure that all bolts and nuts are securely tighten before driving.
- •Obey all posted speed limits. Drive slower under strong winds or on rough roads.



Precautions | Failure to follow precautions can result in injury, damage to the product, vehicle, or load.

Product contents




Precautions

They are packed assembled.


Installation procedure

Pass the spring washer and the flat washer through the eye bolt to mount the plate nut.

Insert the plate nut in the T-slot, and slide it to the place to mount. Turn the eye bolt clockwise to fix.

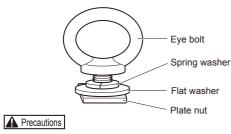

Pass the spring washer followed by the flat washer.

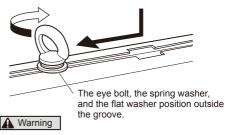

Securely tighten it to prevent looseness.

